


## PG8728E

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FUEL METER ASSY	42	BOTTOM RUBBER I
2	SCREW M5X6	43	FRAME
3	FUEL TANK CAP	44	FLANGE BOLT M6X12
4	FUEL TANK CAP SEAL	45	MUFFLER COVER
5	FUEL FILLER	49	ENGINE
6	FUEL TANK	50	CONTROL ASSY
7	BOLT M6X16	51	AIR CLEANER CASE COMP
8	TANK RUBBER	52	AIR CLEANER SEAL
9	FUEL COCK	53	SEPARATOR
10	FUEL LINE	54	ELEMENT
11	MUFFLER	55	AIR CLEANER COVER COMP
12	NUT M6	100	BATTERY SUPPORT
13	BOLT	101	BOLT
14	MUFFLER STAY ASSEMBLY	102	BATTERY
15	BRUSH ASSY	103	BATTERY SETTING PLATE
16	GENERATOR END COVER	104	JACKET
17	BOLT M5X10	105	BATTERY BLACK WIRE
18	BOLT M5X16	106	BATTERY RED WIRE
19	TERMINAL	107	NUT
20	EARTH BOLT	108	BOTTOM RUBBER II
21	AVR	109	STRAIGHT BOTTOM RUBBER
22	DIODE ASSY	110	EARTH LINE
23	END COVER	201	AC CIRCUIT BREAKER
24	FLANGE BOLT M6X130	202	DC CIRCUIT BREAKER
25	STATOR COVER	203	DIGITAL PANEL METER
26	STATOR ASSY	204	RECEPTACLE(DC)
27	FLANGE BOLT M8X210	205	CONTROL BOX
28	WASHER	206	PLASTIC SLEEVE
29	BEARING 6202	207	RIPPLE PIPE
30	ROTOR COMP	208	PLASTIC SLEEVE
31	COOLING FAN	209	2A BREAKER
32	CRANKCASE COVER	210	CHARGER
36	RECEPTACLE(AC)	211	RECEPTACLE(ATS)
38	SWITCH	301	AIR CLEANER ASSEMBLY(51+52+..55)
39	CONTROL PANEL		
40	FRAME RUBBER		
41	NUT M8		

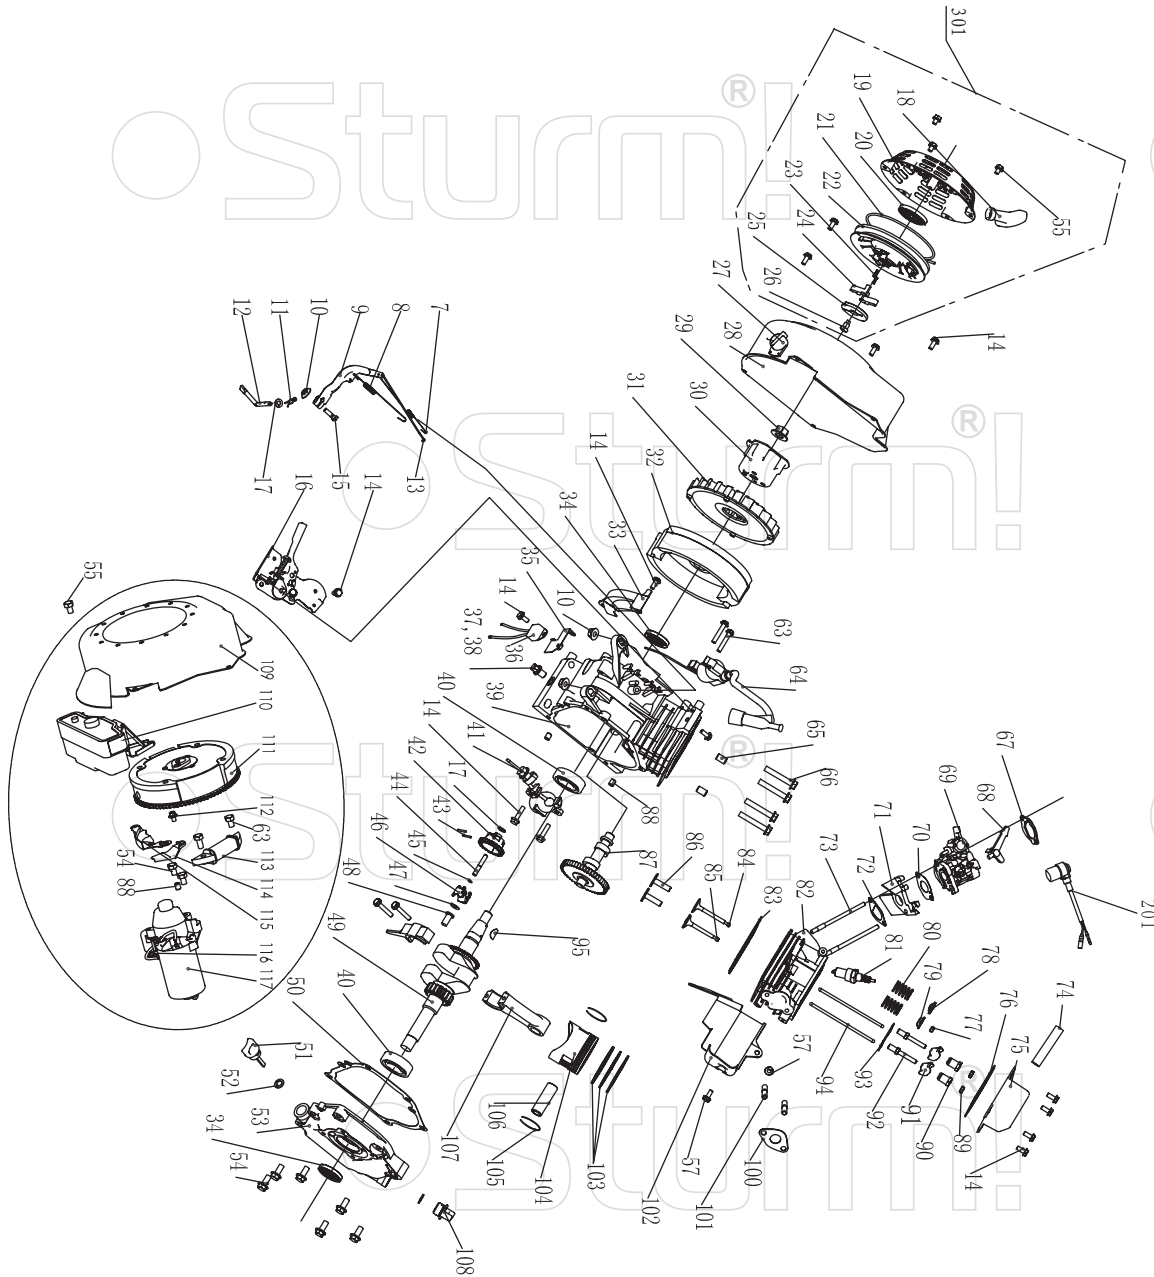

## ENGINE FOR PG8728E

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
7	THROTTLE RETURN SPRING	48	GOVERNOR COVER	100	MUFFLER PACKING
8	GOVERNOR SPRING	49	CRANKSHAFT COMP	101	STUD BOLT
9	GOVERNOR ARM	50	CASE OVER PACKING	102	SHROUD COMP
10	NUT M6	51	OIL FILLER CAP ASSEMBLY	103	FIRST RING SET
11	LOCK PIN	52	OIL FILLER CAP PACKING		SECOND RING SET
12	GOVERNOR ARM SHAFT	53	CRANKCASE COVER		RING COMP
13	GOVERNOR ROD	54	FLANGE BOLT M8X32	104	PISTON
14	FLANGE BOLT M6X12	55	FLANGE BOLT M6X8	105	PISTON PIN CLIP
15	GOVERNOR ARM BOLT	63	FLANGE BOLT M6X25	106	PISTON PIN
16	CONTROL ASSEMBLY	64	IGNITOR	107	CONNECTING ROD COMP
17	GOVERNOR WASHER	65	DOWEL PIN 10*16	108	OIL FILLER CAP
18	RECOIL STARTER KNOB	66	FLANGE BOLT 8*55	109	FAN COVER COMP
19	RECOIL STARTER COMP	67	CARBURETOR WASHER	110	CONTROL ON-OFF
20	RECOIL STARTER SPRING	68	CHOKE LEVEL COMP	111	FLY WHEEL
21	RECOIL STARTER ROPE	69	CARBURETOR ASSEMBLY	112	FLANG BOLT M6*10
22	RECOIL STARTER REEL	70	CARBURETOR PACKING	113	ELECTRIFY COIL
23	RETURN SPRING	71	CARBURETOR INSULATOR	114	WIRE FLAT
24	STARTER RATCHET	72	INSULATOR PACKING	115	CONTROL ASSY
25	RATCHET GUIDE	73	STUD BOLT 6*113	116	RELAY
26	SETTING SCREW	74	BREATHER TUBE	117	START MOTOR
27	SWITCH	75	HEAD OVER COMP	201	ELECTRO-CONTROL
28	FAN COVER COMP	76	HEAD OVER PACKING		CHOKE VALVE ASSY
29	NUT M14	77	VALVE ROTATOR	301	STARTER ASSEMBLY(18+...26+55)
30	START HUB	78	INTAKE VALVE SPRING RETAINER		
31	COOLING FAN	79	EXHAUST VALVE SPRING RETAINER		
32	FLY WHEEL	80	VALVE SPRING		
33	SIDE PLACE	81	SPARK PLUG		
34	OIL SEAL	82	CYLINDER HEAD COMP		
35	DIODE BASE COMP	83	CYLINDER HEAD GASKET		
36	DIODE COMP	84	INTAKE VALVE		
37	DRAIN PLUG BOLT	85	EXHAUST VALVE		
38	DRAIN BOLT WASHER	86	VALVE LIFTER		
39	CRANKCASE	87	CAMSHAFT ASSEMBLY		
40	RADIAL BALL BEARING 6205	88	DOWEL PIN 8*14		
41	OIL LEVEL SWITCH ASSY	89	PIVOT ADJUSTING NUT		
42	GOVERNOR WEIGHT HOLDER	90	ROCKER ARM PIVOT		
43	GOVERNOR WEIGHT PIN	91	VALVE ROCKER ARM		
44	GOVERNOR SHAFT	92	PIVOT BOLT		
45	GOVERNOR HOLDER CLIP	93	PUSH ROD GUIDE PLATE		
46	GOVERNOR WEIGHT	94	PUSH ROD		
47	GOVERNOR SHAFT WASHER	95	KEY		