



**CM1913B1, CM1913C1, CM1913CB1
CM1915C1, CM1917C1, CM1920C1, CM1912CB1**

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FRONT STAND	36A	CONTROL BOX
2	BOLT	37	SWITCH
3	NUT	38	MOTOR
4	WASHER	38-1	LEFT MOTOR HOLDER
5	BOLT	38-2	RIGHT MOTOR HOLDER
6	CROSSBEAM	38-3	BEARING 6203Z
7	NUT	38-4	BOLT
8	HANDLE	38-5	FAN
9	BOLT	38-6	ROTOR
10	NUT	38-7	CAPACITOR HOLDER
11	BOLT	38-8	CAPACITOR
12	BOLT	38-9	NUT
13	LOCKING PLATE	38-10	STATOR
14	BRACKET	38-11	WASHER
15	STAND TUBE	39	BOLT
16	CIRCLIP	40	FIXED BRACKET
17	BOTTOM DRUM	41	GLAND
18	GEAR RING(EXCEPT CM1913B1)	42	POWER CORD&PLUG
19	RUBBER PILLOW	43	CIRCLIP
20	UPPER DRUM	44	SMALL SHAFT
21	MIXING BLADE	45	PINION
22	BOLT	46	WASHER
23	BOLT	47	BOLT
24A	FIXED BOARD	48	BOLT
25	BOLT	49	UPPER COVER OF BEARING
26	BELT WHEEL	50	BEARING 6206Z
27	BELT	51	SHAFT
28	BOLT	52	BOTTOM COVER OF BEARING
29	BOLT	53	BOLT
30	SUPPORT BRACKET	54	BEARING 6102Z
31	NUT	55	WASHER
32	WASHER	56	BOLT
33	BIG WASHER	57	WASHER
34	WHEEL	58	SPRING
35	OPENING PIN	59	CONNECTION BOARD(ONLY FOR CM1912CB1)

ST20111202