



## PW9220

NO.	DESCRIPTION	NO.	DESCRIPTION
1	UPPER HOUSING	36A	OIL SEAL
2	TAPPING SCREW	37A	GUARD SLEEVE
3	CAPACITOR	38A	WATER SEAL
4	CAPACITOR BASE	39A	PUMP BODY
5	SWITCH FRAME	40A	WATER OUTLET
6	WATER PROOF COVER	41	"O" RING
7	SWITCH	42A	CHECK VALVE "O" RING
8	SWITCH BASE	43A	CHECK VALVE BASE
9	BOLT	44A	CHECK VALVE "O" RING
10	PRESSING PLATE	45A	CHECK VALVE BOLT
11	TAPPING SCREW	46A	CHECK VALVE SPRING
12	CORD CLAMP	47A	CHECK VALVE MANDRIL
13	TAPPING SCREW	48A	CHECK VALVE BRACKET
14	CORD CLAMP	49	BOLT
15	WHEEL	50	SPRING WASHER
16	DOWN HOUSING	51	"O" SEAL RING
17	TAPPING SCREW	52A	WATER INLET
18	INSERT SHEET	54	"O" SEAL RING
19	CORD SLEEVE	55	FLOOD VALVE SLEEVE
20	CORD & PLUG	56	FLOOD VALVE STEM
21	TAPPING SCREW	57	FLOOD VALVE SPRING
22	HANDLE	58	TRANSITION SLEEVE
23	MOTOR	59	"O" SEAL RING
24	"O" SEAL SHEET	60	"O" SEAL RING
25	CAM	61A	COPPER BOLT
26	SPRING WASHER	62A	SWITCH COVER
27	BOLT	63A	SWITCH BOX
28	BEARING SHEET	64A	SPRING
29	BEARING	65	SELF-CONTROL SWITCH
30	BEARING SLAP	66A	CONTROL LEVEL
31	SPRING WASHER	67	TAPPING SCREW
32	PLUNGER	68	FILTER NET
33	SPRING	69	COVER
34A	BOX	101	CHECK VALVE ASSEMBLY (43A+44A+...48A)
35	BOLT	102	FLOOD VALVE ASSEMBLY (54+55+...61A)

ST20100909-1