


PW9220

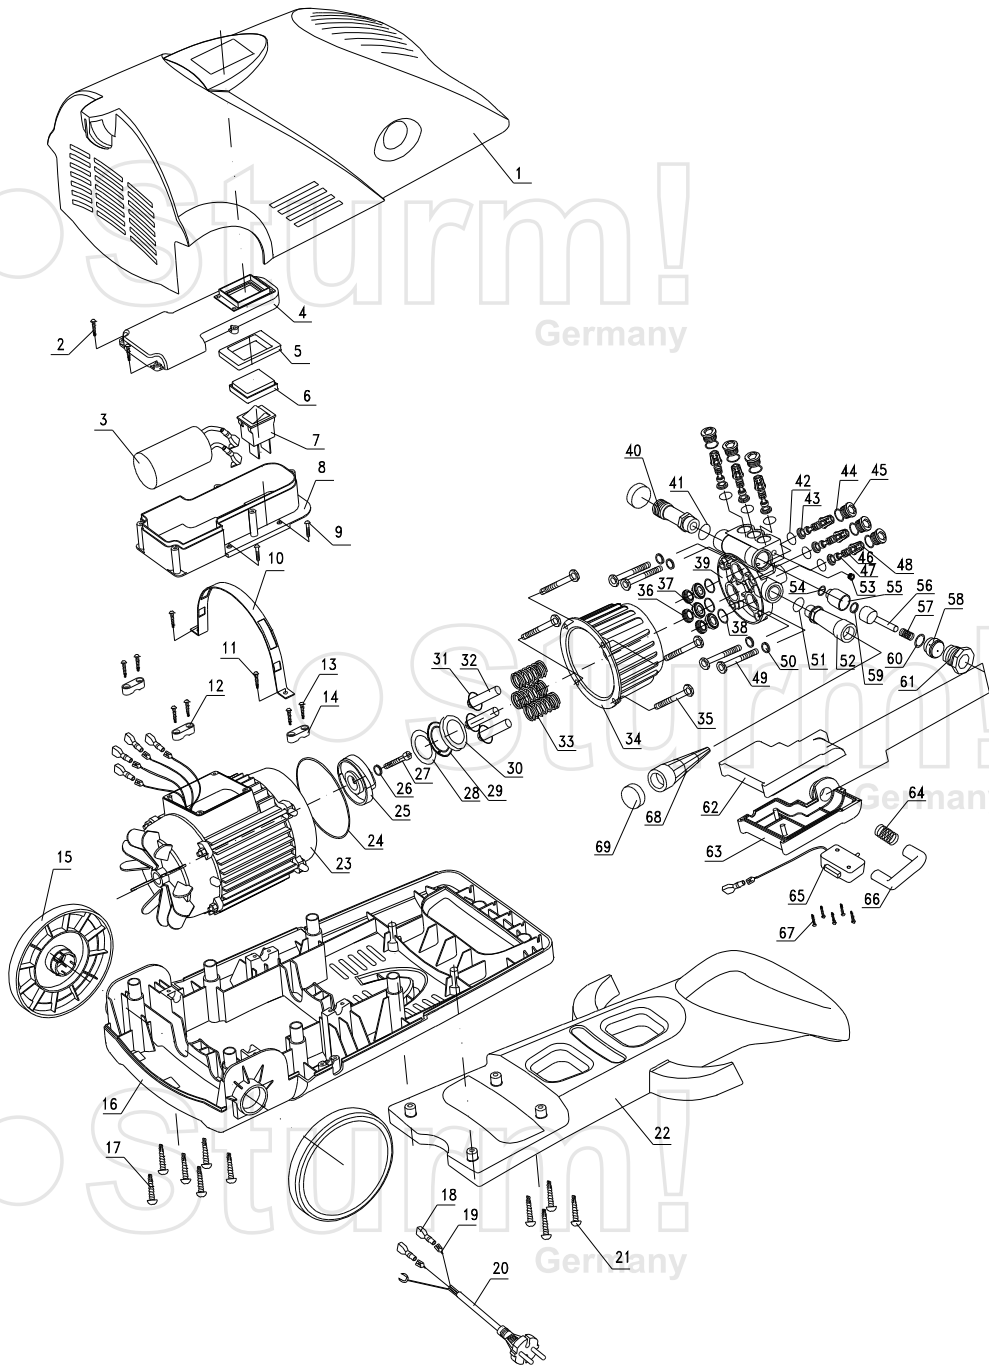

NO.	DESCRIPTION	NO.	DESCRIPTION
1	UPPER HOUSING	36	OIL SEAL
2	TAPPING SCREW	37	GUARD SLEEVE
3	CAPACITOR	38	WATER SEAL
4	CAPACITOR BASE	39	PUMP BODY
5	SWITCH FRAME	40	WATER OUTLET
6	WATER PROOF COVER	41	"O" RING
7	SWITCH	42	CHECK VALVE "O" RING
8	SWITCH BASE	43	CHECK VALVE BASE
9	BOLT	44	CHECK VALVE "O" RING
10	PRESSING PLATE	45	CHECK VALVE BOLT
11	TAPPING SCREW	46	CHECK VALVE SPRING
12	CORD CLAMP	47	CHECK VALVE MANDRIL
13	TAPPING SCREW	48	CHECK VALVE BRACKET
14	CORD CLAMP	49	BOLT
15	WHEEL	50	SPRING WASHER
16	DOWN HOUSING	51	"O" SEAL RING
17	TAPPING SCREW	52	WATER INLET
18	INSERT SHEET	53	BOLT
19	CORD SLEEVE	54	"O" SEAL RING
20	CORD & PLUG	55	FLOOD VALVE SLEEVE
21	TAPPING SCREW	56	FLOOD VALVE STEM
22	HANDLE	57	FLOOD VALVE SPRING
23	MOTOR	58	TRANSITION SLEEVE
24	"O" SEAL SHEET	59	"O" SEAL RING
25	CAM	60	"O" SEAL RING
26	SPRING WASHER	61	COPPER BOLT
27	BOLT	62	SWITCH COVER
28	BEARING SHEET	63	SWITCH BOX
29	BEARING	64	SPRING
30	BEARING SLAP	65	SELF-CONTROL SWITCH
31	SPRING WASHER	66	CONTROL LEVEL
32	PLUNGER	67	TAPPING SCREW
33	SPRING	68	FILTER NET
34	BOX	69	COVER
35	BOLT		

RU5120201