



MS5525N

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	SUPPORT BAR	40	SPRING BASE	93	SCREW
2	BOLT	41	SPRING	94	REAR COVER SHEET
3	BASE PLATE	42	SOCKET WRENCH	95	SCREW
4	RULER	43	FLANGE BOLT	96	CIRCLIP
5	RIVET	44	OUTER FLANGE	97	FAN
6	WING KNOB	45	SAW BLADE	98	REAR COVER
7	STEEL SHEET	47	INNER FLANGE	99	CAPACITOR COVER
8	SCREW	57	LOCK PIN CAP	100	CAPACITOR
9	SPRING WASHER	58	SPRING	101	CAPACITOR BASE
10	SPRING WASHER	59	LOCK PIN	102	SCREW
11	WING KNOB	60	HOLLOW PIN	103	MOTOR HOUSING
14	FIXED PLATE	61	SPECIAL SCREW	104	RUBBER STOP PLUG
15	PLAIN WASHER	62	CONNECTION BAR	105	FORE COVER
16	NUT	63	HOLLOW RUBBER BUSH	110	CORD SLEEVE
17	GUIDE BAR	64	HEX BOLT	111	SWITCH
18	INDICATOR	65	SPRING WASHER	113	CORD & PLUG
19	SPRING WASHER	66	SCREW	114	LIFT HANDLE
20	SCREW	67	DUST COLLECTION CONNECTOR	115	TAPPING SCREW
21	BRACKET	70	SPECIAL SCREW	116	SCREW
22	BEVEL CUTTING RULER	71	PLAIN WASHER	117	BOLT
23	PLAIN WASHER	72	PULLEY FOR CONNECTION BAR	118	CORD CLAMP
24	SPECIAL SCREW	73	PIN FOR HEAD COVER	119	SCREW
25	REAR LOCK KNOB	74	TRANSPARENT COVER	120	SCREW
26	BUSH	77	SCREW	121	SPRING WASHER
27	SPRING	78	PLAIN WASHER	122	NUT
28	HEX SCREW	79	TWIST SPRING	123	BOLT
29	HEX BOLT	80	BOLT	124	SPRING WASHER
30	NUT	81	SPECIAL SCREW	125	BEARING PRESS COVER
31	FRONT LOCK KNOB	82	SPRING PLATE	126	SCREW
32	SPRING PRESS PLATE	83	BLOCK FOR TRANSPARENT COVER	127	SCREW
33	ROTATING BASE	84	SUNK SCREW	128	TERMINAL BLOCK
34	SUNK SCREW	85	ORIENTATION BOARD	130	PRESSURE PLATE
35	TABLE INSERT	86	HEAD COVER	131	TIGHTLY FIXED ROD
36	PLAIN WASHER	87	BEARING 6203	133	FIXED SHAFT
37	NUT M8	90	ROTOR	138	SCREW
38	BIG TWIST SPRING	91	STATOR	139	FLAT WASHER
39	INSERT PIN	92	BEARING 6202	888	HANDLE ASSEMBLY

ST20120222-02