



MS5525N

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	SUPPORT BAR	39	INSERT PIN	91	STATOR
2	BOLT	40	SPRING BASE	92	BEARING 6202
3	BASE PLATE	41	SPRING	93	SCREW
4	RULER	42	SOCKET WRENCH	94	REAR COVER SHEET
5	RIVET	43	FLANGE BOLT	95	SCREW
6	WING KNOB	44	OUTER FLANGE	96	CIRCLIP
7	STEEL SHEET	45	SAW BLADE	97	FAN
8	SCREW	47	INNER FLANGE	98	REAR COVER
9	SPRING WASHER	57	LOCK PIN CAP	99	CAPACITOR COVER
10	SPRING WASHER	58	SPRING	100	CAPACITOR
11	WING KNOB	59	LOCK PIN	101	CAPACITOR BASE
14	FIXED PLATE	60	HOLLOW PIN	102	SCREW
15	PLAIN WASHER	61	SPECIAL SCREW	103	MOTOR HOUSING
16	NUT	62	CONNECTION BAR	104	RUBBER COVER
17	GUIDE BAR	63	HOLLOW RUBBER BUSH	105	FORE COVER
18	INDICATOR	64	HEX BOLT	110	CORD SLEEVE
19	SPRING WASHER	65	SPRING WASHER	111	SWITCH
20	SCREW	66	SCREW	113	CORD & PLUG
21	BRACKET	67	DUST COLLECTION CONNECTOR	114	LIFT HANDLE
22	BEVEL CUTTING RULER	70	SPECIAL SCREW	115	TAPPING SCREW
23	PLAIN WASHER	71	PLAIN WASHER	116	SCREW
24	SPECIAL SCREW	72	PULLEY FOR CONNECTION BAR	117	BOLT
25	REAR LOCK KNOB	73	PIN FOR HEAD COVER	118	CORD CLAMP
26	BUSH	74	TRANSPARENT COVER	119	SCREW
27	SPRING	77	SCREW	120	SCREW
28	HEX SCREW	78	PLAIN WASHER	121	SPRING WASHER
29	HEX BOLT	79	TWIST SPRING	122	NUT
30	NUT	80	BOLT	123	BOLT
31	FRONT LOCK KNOB	81	SPECIAL SCREW	124	SPRING WASHER
32	SPRING PRESS PLATE	82	SPRING PLATE	125	BEARING PRESS COVER
33	ROTATING BASE	83	BLOCK FOR TRANSPARENT COVER	126	SCREW
34	SUNK SCREW	84	SUNK SCREW	127	SCREW
35	TABLE INSERT	85	ORIENTATION BOARD	128	TERMINAL BLOCK
36	PLAIN WASHER	86	HEAD COVER	888	HANDLE ASSEMBLY
37	NUT M8	87	BEARING 6203		
38	BIG TWIST SPRING	90	ROTOR		

ST20110216-01