



TC9818L

NO.	DESCRIPTION	NO.	DESCRIPTION
1	NUT	24	INSIDE CLAMP BOARD
2	WASHER	25	LOWER PROTECTION BOARD
3	PROTECTION BOARD	26	BOLT
4	SPRING WASHER	27	BOARD
5	PROTECTION COVER	28	NUT
6	STAND FOR PROTECT COVER	29	BODY
7	BOLT	30	BOLT
8	WORKTABLE	31	SCREW
9	RUBBER INSERT	32	LOCKING KNOB (A)
10	BRANKET FOR GUIDE (A)	33	BOLT
11	GUIDE BAR	34	MOTOR
12	BOLT	35	BOLT
13	STAND FOR GUIDE (B)	36	BACK COVER
14	BOLT	37	GEAR WASHER
15	WASHER	38	NUT
16	WASHER	39	CLAMP
17	LOCKING KNOB (B)	40	BOLT
18	BOLT	41	CORD SLEEVE
19	WASHER	42	CORD & PLUG
20	LOWER PROTECTION COVER	43	SWITCH
21	NUT	44	BOARD FOR FIXING SWITCH
22	OUTSIDE CLAMP BOARD	45	FLUME
23	BLADE		

RU090624-2