



AW97M25A

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FRONT PANEL	43	FLAT WASHER
2	SEPTI-BOARD	44	HEXAD CROSS BOLT
3	BACK PANEL	45	FLAT WASHER
4	MOTHER BOARD	46	SPRING WASHER
5	BRACKET OF GAS BOTTLE	47	FLAT WASHER
6	BRACKET OF FRONT WHEEL	48	NUT
7	NEAR SIDE BOARD	49	HEXAD CROSS BOLT
8	COVER BOARD	50	FLAT WASHER
9	SUPERIOR STARBOARD	51	SPRING WASHER
10	BELOW STARBOARD	52	FLAT WASHER
11	BRACKET OF WIRE SET	53	NUT
12	SHIELD	54	SET OF WIRE
13	FASTENSS NIP OF GAS BOTTLE	55	TIE-IN OF GAS PIPE
14	FASTENSS SPLINT OF SEPTI-BOARD	56	FAN
15	FASTENSS BRACKET OF SEPTI-BOARD	57	RECTIFIER
16	MAIN TRANSFORMER	58	CABLE
17	CONTROL TRANSFORMER	59	ROUND CROSS BOLT
18	CIRCUIT BOARD	60	NUT
19	REACTOR	61	SPRING WASHER
20	ROUND CROSS BOLT	62	FLAT WASHER
21	CURRENT METER	63	AC CONTACTOR
22	VOLTAGE METER	64	HEXAD CROSS BOLT
23	STEP SWITCH	65	FLAT WASHER
24	STEP SWITCH	66	SPRING WASHER
25	POWER SWITCH	67	NUT
26	DIFFLUENCE IMPLEMENT	68	NUT
27	HEXAD CROSS BOLT	69	SCREW
28	FLAT WASHER	70	FLAT WASHER
29	NUT	71	SPRING WASHER
30	WELD SWITCH	72	HANDLE
31	GAS-CHECK SWITCH	73	INSURE OF POWER CONTROL
32	RHEOSTAT OF WIRE FEED	74	INSURE OF WIRE FEED POWER
33	RHEOSTAT OF SPOT WELD	75	SOCKET OF HEATER
34	SOCKET	76	INSURE OF HEATER
35	ROUND CROSS BOLT	77	BAFFLE OF FAN
36	FLAT WASHER	78	ROUND CROSS BOLT
37	NUT	79	FLAT WASHER
38	FIRE FEED EQUIPMENT	80	NUT
39	HEXAD BOLT	81	SPRING WASHER
40	NUT	82	FRONT-WHEEL DRIVE
41	FLAT WASHER	83	REAR WHEEL
42	SPRING WASHER	84	CORD ANCHORAGE