


WM1922 LT02/LT03

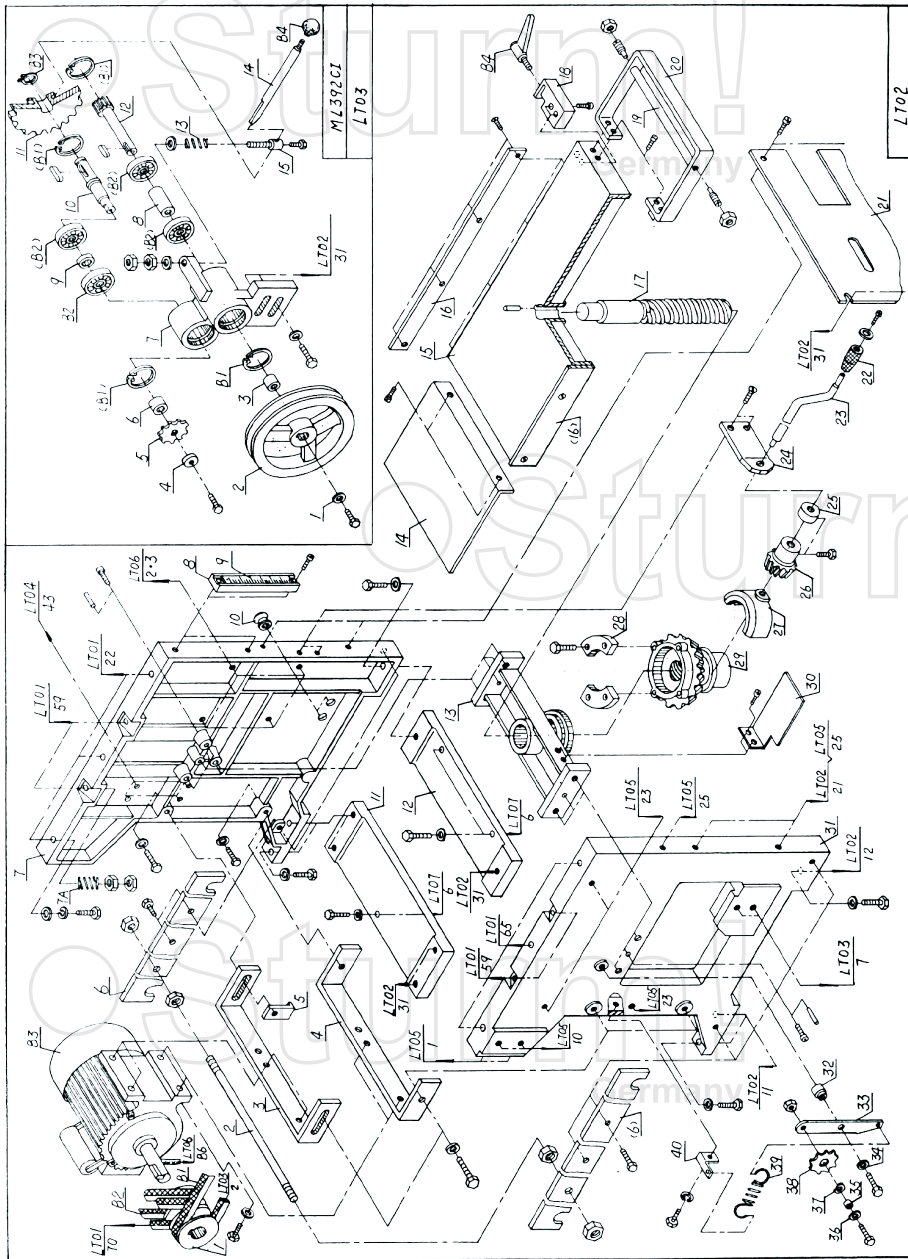

WM1922 Part List LT02

NO	DESCRIPTION	NO	DESCRIPTION
1	MOTOR PULLEY	23	HANDLE
2	JOINT BAR	24	STAND
3	MOTOR BASE	25	SHIELD RING
4	MOTOR BASE	26	SMALL TAPE GEAR
5	ANTI-TURNING NUT	27	LOCATING RING
6	LIFTING HOOK (2)	28	FAN-LIKE PRESSER (2)
7	LEFT WALL BOARD	29	BIG TAPE GEAR
7A	SPRING (4)	30	DUST HOOD
8	INDICATING CASE	31	RIGHT WALL BOARD
9	INDICATOR	32	PRESS SLEEVE
10	CABLE SHEATH (2)	33	TENSIONER SUPPORTER
11	CONNECT PLATE	34	SHIELD RING
12	CONNECT PLATE	35	PRESS SLEEVE
13	SUPPORTER	36	SHIELD RING
14	HOOD	37	SLEEVE
15	PLANER TABLE	38	SMALL SPROCKET
16	GUARD (2)	39	SPRING
17	POLE	40	SPRING CONNECTOR
18	CLIP	B1	V-BELT A900
19	ROLLER	B2	V-BELT A800 (2)
20	ROLLER STAND	B3	MOTOR MC90L2/B3
21	HOOD	B4	HANDLE BM8X63X20
22	KNOB		

WM1922 Part List LT03

NO	DESCRIPTION	NO	DESCRIPTION
1	SHIELD RING	11	GEAR
2	PULLEY	12	GEAR SHAFT
3	DISTANCE SLEEVE	13	SPRING
4	SPACER	14	DRIVING LEVER
5	SMALL SPROCKET	15	SHAFT
6	DISTANCE SLEEVE	B1	SHIELD RING 40 (4)
7	DRIVING BEARING BASE	B2	BEARING 60203 (4)
8	DISTANCE SLEEVE	B3	SHIELD RING 18
9	DISTANCE SLEEVE	B4	KNOB BALL (BLACK) M8X25
10	SMALL SHAFT		