


WM1922 LT05

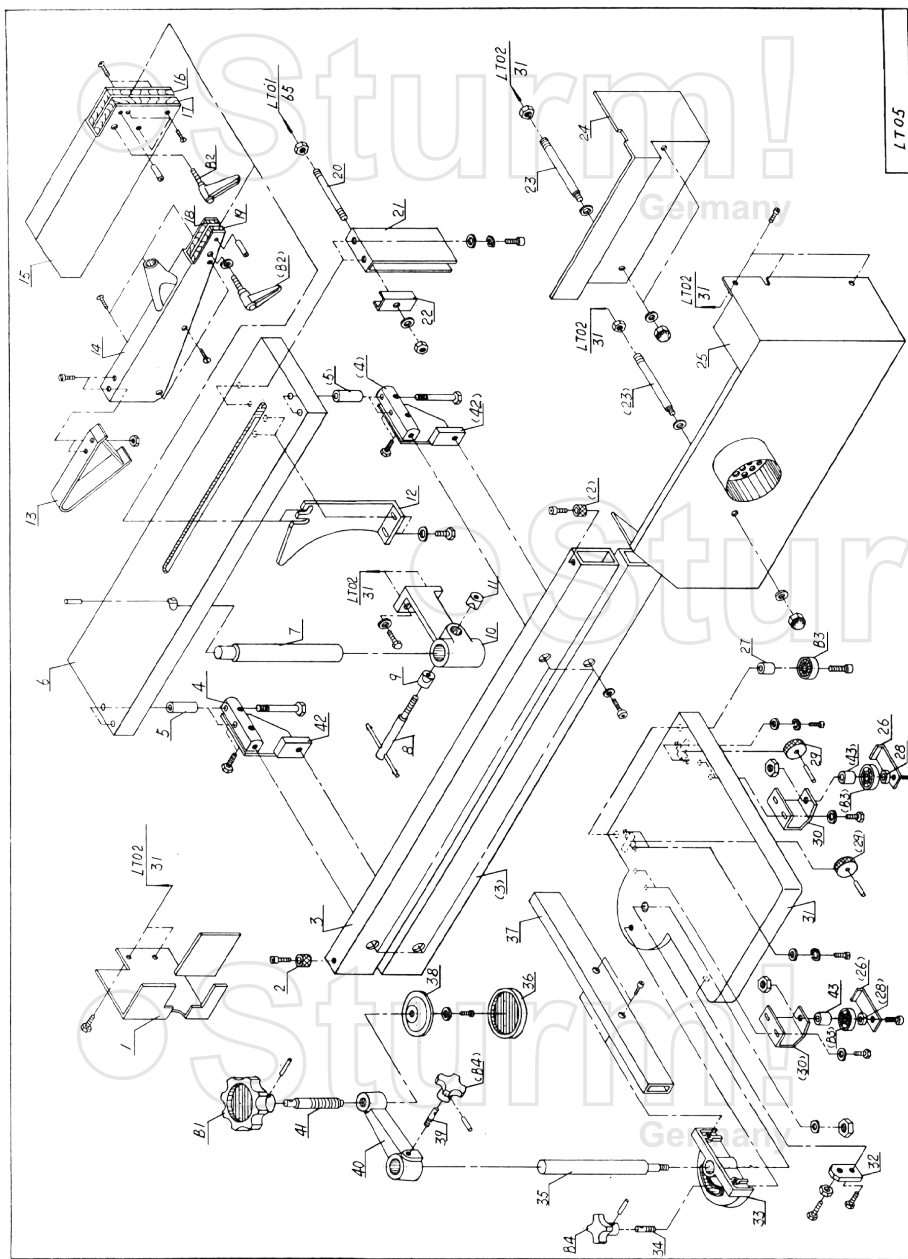

WM1922 Part List LT05

NO	DESCRIPTION	NO	DESCRIPTION
1	V-BELT HOOD	25	HOOD
2	LIMITING BLOCK (2)	26	ANTI-TRIP (2)
3	SAW TRACK	27	DISTANCE SLEEVE (4)
4	TRACKWAY BASE (2)	28	DISTANCE SLEEVE (2)
5	DISTANCE SLEEVE (4)	29	ROLLING WHEEL (2)
6	SAW TABLE	30	SUPPORTER (2)
7	SAW SUPPORTER	31	SAWING SLIDER
8	HANDLE BOLT	32	LOCATING PLATE
9	LOCKING BUSH	33	MEASURE
10	SUPPORTER	34	SCREW ARBOR
11	LOCKING NUT	35	SUPPORTING POLE
12	SPLITTER	36	PRESSER CASE
13	HANDLE	37	LEANING RULE
14	HOOD	38	PRESSER
15	SAW HOOD	39	SCREW ARBOR
16	HOOD	40	ARM
17	HOOD	41	SCREW ARBOR
18	HOOD	42	SUPPORTING PLATE (2)
19	HOOD	43	DISTANCE SLEEVE (2)
20	LOCKING BAR	B1	HAND WHEEL B10X80
21	SUPPORTING PLATE	B2	KNOB BM8X63X32 (2)
22	PRESSER	B3	BEARING 80100 (4)
23	SUPPORTING POLE (3)	B4	HANDLE 8X40 (2)
24	UP SAW HOOD		

WM1922 Part List LT06

NO	DESCRIPTION	NO	DESCRIPTION
1	switch base	B1	E-button
2	spacer	B2	cable tube connector
3	switch box	B3	cable tube connector
4	bottom plate	B4	fuse RT14-20 core 2A
5	earth label	B5	cable RVV-300/500 2x1.5 1.2m
6	spacer	B6	RVV-300/500 4x1.5+1x1 .5 1m
7	switch box cover	B7	cable (with plug) 16A 250V~2.5m
		B8	switch