


BT8952D

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
1	GEAR CASE ASS'Y	31	HARNES CLAMP	61	SPRING
2	STOP RING 26	32	CLAMP	62	LOCK PIN
3	STOP RING 10	33	SCREW M5X20	63	HAND GRIP
4	BEARING 600-2RS/P5	34	NUT M5	64	SPRING
5	PINION	35	CLUTCH COMP.	65	BOX,RIGHT
6	STEEL CAP	36	CLUTCH DRUM COMP.	66	SCREW ST2.9X18
7	SCREW M6X20	37	STOP RING 35	67	SCREW M5X30
8	WASHER 6	38	BEARING 6202-2RS/P5	68	CABLE COMP.
9	SCREW M5X12	39	STOP RING 15	69	TUBE
10	BOLT M6X12	40	LINKER	70	STOP BUTTON COMP.
11	WASHER 6	41	RUBBER COVER	71	HAND GRIP
12	GEAR CASE	42	SCREW M5X25	72	SPRING
13	SAFELY GUARD	43	WASHER 5	73	BOX,LEFT
14	BEARING 6000/P5	44	WASHER 5	74	BRACKET
15	GEAR	45	CLAMP B	75	BOLT M5X30
16	GEAR SHAFT	46	CLAMP A	76	SAFELY GUARD
17	BEARING 6002-2RS/P5	47	WIRE CLAMP BAND	77	SCREW M5X16
18	STOP RING 32	48	HARNES ASS'Y	78	GUARD COMP.
19	HOLDER A	49	SCREW M6X25	79	SCREW ST4.2X16
20	HOLDER B	50	CAP,LOWER	80	GUARD
21	WASHER 10	51	RUBBER WASHER	81	BLADE
22	LEFT NUT	52	BRACKET	82	NYLON CUTTER HEAD
23	PIN 2X16	53	HANDLE	83	CASE
24	BLADE	54	GRIP LEFT	84	LEFT NUT A
25	PIPE COMP.	55	CAP,UPPER	85	WASHER
26	RUBBER COVER	56	BOLT M5X25	86	SPRING
27	OIL-BEARING	57	HANDLE	87	CORD
28	DRIVE SHAFT	58	LEVER ASS'Y	88	CORD HOLDER
29	PIPE	59	SCREW ST2.9X9.5	89	COVER
30	HOLDER ASS'Y	60	BUTTON	90	BLADE

RU091110-1

Sturm!

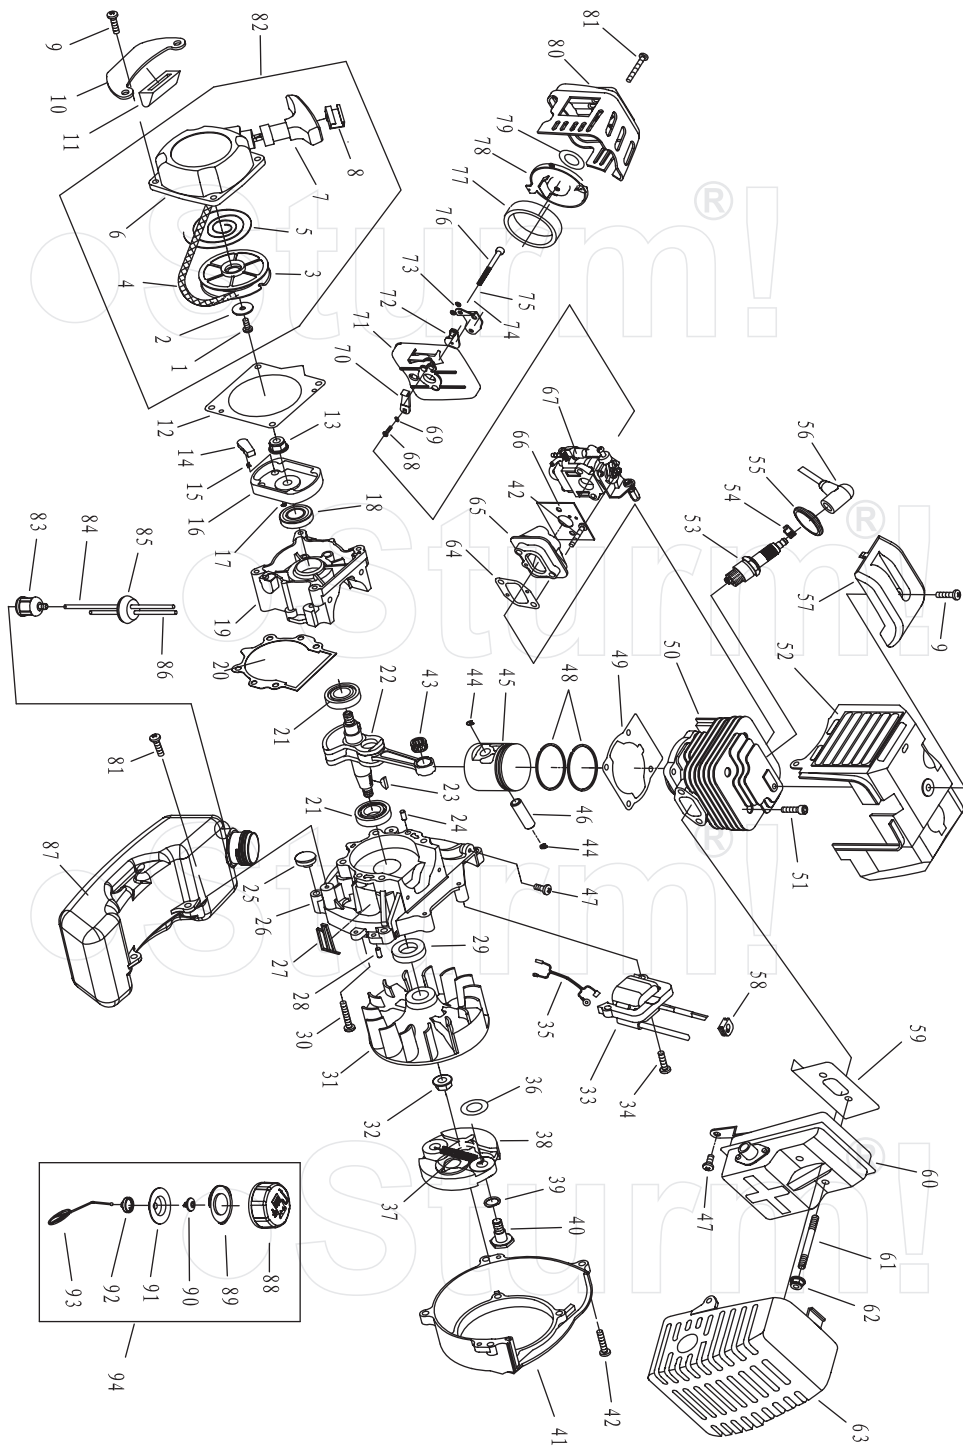

Engine for BT8952D

No.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW M5X12-9.8-DZ	33	STATOR	65	ADMITTING PIPE
2	WASHER	34	BOLT M5X20	66	GASKET
3	START ROPE REEL	35	CORD COMP.	67	CARBURETOR
4	ROPE	36	WASHER B	68	SCREW ST2.9X6.5
5	RECOIL SPRING	37	SPRING	69	WASHER 3
6	START COVER ASS'Y	38	EXPANDER	70	CHOKE HANDLE
7	START HANDLE	39	WASHER	71	INSIDE COVER
8	RING	40	SCREW PIN	72	CHOKE
9	SCREW M5X20	41	FAN COVER	73	BAFFLE
10	STAND	42	BOLT M5X25	74	WASHER 5
11	RUBBER COVER	43	BEARING	75	WASHER 5
12	GASKET	44	RING	76	SCREW M5X55
13	NUT M8	45	PISTON	77	FILTER NET
14	START CLAW	46	PISTON PIN	78	INSIDE COVER
15	START SPRING	47	BOLT M5X12	79	O-WASHER 3.15X1.8
16	START REEL	48	PISTON RING	80	OUTSIDE COVER
17	STOP RING 4	49	GASKET	81	SCREW M5X16
18	OIL-SEAL	50	CYLINDER	82	STARTER
19	CRANK CASE	51	SCREW M5X20	83	CLEANER COVER
20	GASKET	52	GUIDE COVER ASS'Y	84	FUEL PIPE
21	BEARING 6202/P5	53	SPARK PLUG	85	PLUG
22	CRANK SHAFT	54	SPRING	86	FUEL PIPE
23	KEY 3X13	55	PLUG CAP	87	FUEL TANK
24	PIN B5X12	56	CAP	88	FUEL TANK LID
25	RUBBER WASHER	57	COVER	89	GASKET
26	CRANK CASE	58	PLUG	90	INLET
27	GUIDE COVER	59	GASKET	91	INSIDE COVER
28	PIN B4X10	60	MUFFLER	92	LID
29	OIL-SEAL	61	BOLT	93	CHAIN
30	SCREW M5X30	62	NUT M6	94	FUEL TANK LID COMP.
31	FLY WHEEL	63	MUFFLER COVER		
32	NUT M8	64	ADMITTING PIPE		

RU091110-1

Sturm!