



## AG9513P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	26	ROTOR
2	ABRASIVE WHEEL	27	INSULATION WASHER
3	INNER FLANGE	28	BEARING 627Z
4	SPINDLE	29	BEARING COVER
5	KEY	30	FAN GUIDE
6	ANTI-DUST COVER	31	SCREW
7	WHEEL GUARD	32	STATOR
8	SCREW	33	SPRING
9	SPRING WASHER	34	HOUSING
10	FLAT WASHER	35	LABEL
11	FRONT COVER	36	CARBON BRUSH COVER
12	BEARING 6201Z	37	CARBON BRUSH
13	CIRCLIP	38	CARBON BRUSH HOLDER
14	GEAR	39	RIGHT HANDLE
15	CIRCLIP	40	SCREW
16	BEARING 607Z	41	SCREW
17	SIDE HANDLE	42	LEFT HANDLE
18	LOCKING PIN	43	SWITCH
19	SCREW	44	CAPACTOR
20	SPRING	45	INDUCTOR
21	LOCKING CAP	46	CABLE CLAMP
22	GEAR BOX	47	CABLE SLEEVE
23	PINION	48	CABLE
24	BEARING 6000Z	49	SPANNER
25	GEAR HOUSING COVER	50	NUT

RU20100401