



AG952P1

NO.	DESCRIPTION	NO.	DESCRIPTION
1	WIND BAFFLE	27	GRINDING WHEEL
2	BEARING BUSH	28	OUT FLANGER
3	BEARING 6000-2RS	29	WOODRUFF KEY
4	DUSTPROOF BUSH	30	ASSISTANT HANDLE
5	ROTOR	31	TAPPING SCREW
6	FLAT WASHER	32	STATOR
7	SCREW	33	NAMEPLATE
8	BEARING LID	34	TAPPING SCREW
9	BEARING 6202-2RS	35	CARBON BRUSH CAP
10	PINION	36	HOUSING
11	NUT	37	CARBON BRUSH
12	TAPPING SCREW	38	BRUSH RACK
13	GEARBOX	39	TORSIONAL SPRING
14	BEARING	40	RIGHT HANDLE
15	NUT	41	SWITCH
16	GEAR 6203#	42	LEFT HANDLE
17	BEARING 6202-2RS	43	TAPPING SCREW
18	WOOL WASHER	44	CABLE CLAMP
19	PAPER WASHER	45	CABLE SLEEVE
20	GEARBOX COVER	46	CABLE CORD
21	SPRING WASHER	47	CAPACITANCE
22	SCREW	48	TAPPING SCREW
23	SCREW	49	TAPPING SCREW
24	WHEEL GUARD	50	WRENCH
25	OUTPUT SHAFT	51	WRENCH
26	INNER FLANGER		

RU070903-1