



AG90231

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	30	BEARING COVER
2	GRINDING WHEEL	31	SCREW
3	INNER FLANGE	32	ARMATURE
4	WHEEL COVER	33	WIND GUARD
5	NUT	34	SCREW
6	SCREW	35	STATOR
7	WOODRUFF KEY	36	LINK SPRING
8	OUTPUT SPINDLE	37	BEARING 629Z
9	SCREW	38	BEARING BUSHING
10	SPRING WASHER	39	HOUSING
11	PLAIN WASHER	40	NAME PLATE
12	FORE COVER	41	TRADE MARK
13	BEARING 6202Z	42	BRUSH HOLDER
14	BEARING COVER	43	CARBON BRUSH
15	PLAIN WASHER	44	BRUSH HOLDER CAP
16	SPRING WASHER	46	TAPPING SCREW
17	SCREW	47	TAPPING SCREW
18	BIG GEAR	48	SWITCH
19	CIRCLIP FOR SHAFT	48-1	SOFT START
20	OGALLAY BEARING	50	SCREW
21	RETAINER RING	51	CABLE CLAMP
22	TAPPING SCREW	52	CABLE SLEEVE
23	SELF-LOCKING PIN	53	CABLE & PLUG
24	SPRING	54	CAPACITOR
25	GEAR BOX	55	SIDE HANDLE
26	NUT	56	SPANNER
28	PINION GEAR	888	HANDLE ASSEMBLY
29	BEARING 6001Z		

ST20110829-02