



AG9025

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|------------------|-----|--------------------|
| 1 | BEARING BASE | 28 | REAR COVER |
| 2 | BEARING | 29 | SCREW |
| 3 | ROTOR | 30 | CARBON BRUSH |
| 4 | CIRCLIP | 31 | BRUSH HOLDER |
| 5 | BEARING COVER | 32 | HOUSING |
| 6 | BEARING | 33 | ROLLER |
| 7 | LOCK PIN | 34 | SCREW |
| 8 | SPRING | 35 | STATOR |
| 9 | CIRCLIP | 36 | SIDE HANDLE |
| 10 | SCREW | 37 | WIND GUARD |
| 11 | GEAR BOX | 38 | PINION GEAR |
| 12 | BUSH | 39 | SPRING WASHER |
| 13 | CIRCLE | 40 | NUT |
| 14 | SPRING RING | 41 | SCREW |
| 15 | GEAR | 42 | CORD CLAMP |
| 16 | BEARING COVER | 43 | SWITCH |
| 17 | BEARING | 44 | CAPACITOR |
| 18 | FRONT COVER | 45 | SPRING |
| 19 | SPRING WASHER | 46 | SWITCH DRAW-BAR |
| 20 | SCREW | 47 | SWITCH KNOB |
| 21 | PROTECTING COVER | 48 | KEY |
| 22 | BOLT | 49 | SPINDLE |
| 23 | NUT | 50 | INNER FLANGE |
| 24 | SCREW | 51 | OUTER FLANGE |
| 25 | CORD SLEEVE | 52 | SCREW |
| 26 | SCREW | 53 | SWITCH COVER BOARD |
| 27 | CORD&PLUGS | | |

RU5111101