

AG9515P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	32	BEARING BUSH
2	DISC	33	WIND GUARD
3	INNER FLANGE	34	SCREW
4	GUARD	35	STATOR
5	NUT	36	INSERT PIECE
6	SCREW	37	HOUSING
7	SCREW	38	NAME PLATE
8	SPRING WASHER	39	CARBON BRUSH HOLDER
9	FLAT WASHER	40	SPRING
10	FORE COVER	41	SCREW
11	SPINDLE	42	CARBON BRUSH
12	KEY	43	BRUSH COVER
13	BEARING 6202Z	44	SCREW
14	BEARING COVER	45	CAPACITOR
15	SCREW	46	ROTARY SPRING
16	GEAR	47	ROTARY BUTTON
17	CIRCLIP	48	SWITCH
18	BUSH	50	CORD SLEEVE
19	HANDLE	51	PLUG & CORD
20	SCREW	52	CORD CLAMP
21	CIRCLIP	53	SWITCH SPRING
22	LOCK PIN	54	SWITCH TRIGGER
23	SPRING	55	RIVET
24	GEAR BOX COVER	56	ANTI-LOCK BUTTON
25	GEAR BOX	58	SCREW
26	ANTI-LOOSE NUT	59	LABEL
27	PINION	60	SPANNER
28	BEARING 6001Z	61	KEY WRENCH
29	BEARING COVER	888	HANDLE ASSEMBLY
30	ROTOR		
31	BEARING 608Z		

ST20101207-01

