



AG9523P

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|------------------|-----|------------------|
| 1 | WIND BAFFLE | 29 | WHEEL GUARD |
| 2 | BEARING BUSH | 30 | OUTPUT SHAFT |
| 3 | BEARING 6000-2RS | 31 | INNER FLANGER |
| 4 | DUSTPROOF BUSH | 32 | GRINDING WHEEL |
| 5 | ROTOR | 33 | OUT FLANGER |
| 6 | FLAT WASHER | 34 | WOODRUFF KEY |
| 7 | SCREW | 35 | ASSISTANT HANDLE |
| 8 | BEARING LID | 36 | TAPPING SCREW |
| 9 | BEARING 6202-2RS | 37 | STATOR |
| 10 | PINION | 38 | NAMEPLATE |
| 11 | NUT | 39 | TAPPING SCREW |
| 12 | "O"RING | 40 | CARBON BRUSH CAP |
| 13 | LOCKING ASSEMBLE | 41 | HOUSING |
| 14 | LOCKING SPRING | 42 | CARBON BRUSH |
| 15 | "O" RING | 43 | BRUSH RACK |
| 16 | STEEL BUSH | 44 | TORSIONAL SPRING |
| 17 | TAPPING SCREW | 46 | SWITCH |
| 18 | GEARBOX | 48 | TAPPING SCREW |
| 19 | NEEDLE BEARING | 49 | CABLE CLAMP |
| 20 | NUT | 50 | CABLE SLEEVE |
| 21 | GEAR 6203# | 51 | CABLE CORD |
| 22 | BEARING 6202-2RS | 52 | CAPACITANCE |
| 23 | WOOL WASHER | 53 | TAPPING SCREW |
| 24 | PAPER WASHER | 54 | TAPPING SCREW |
| 25 | GEARBOX COVER | 55 | WRENCH |
| 26 | SPRING WASHER | 888 | HANDLE ASSEMBLE |
| 27 | SCREW | | |
| 28 | SCREW | | |

ST20101207-01