



AG952P1

NO.	DESCRIPTION	NO.	DESCRIPTION
1	WIND BAFFLE	27	GRINDING WHEEL
2	BEARING BUSH	28	OUT FLANGER
3	BEARING 6000-2RS	29	WOODRUFF KEY
4	DUSTPROOF BUSH	30	ASSISTANT HANDLE
5	ROTOR	31	TAPPING SCREW
6	FLAT WASHER	32	STATOR
7	SCREW	33	NAMEPLATE
8	BEARING LID	34	TAPPING SCREW
9	BEARING 6202-2RS	35	CARBON BRUSH CAP
10	PINION	37	CARBON BRUSH
11	NUT	38	BRUSH RACK
12	TAPPING SCREW	39	TORSIONAL SPRING
13	GEARBOX	41	SWITCH
14	BEARING	43	TAPPING SCREW
15	NUT	44	CABLE CLAMP
16	GEAR 6203#	45	CABLE SLEEVE
17	BEARING 6202-2RS	46	CABLE CORD
18	WOOL WASHER	47	CAPACITANCE
19	PAPER WASHER	48	TAPPING SCREW
20	GEARBOX COVER	49	TAPPING SCREW
21	SPRING WASHER	50	WRENCH
22	SCREW	51	WRENCH
23	SCREW	888	HOUSING ASSEMBLE
24	WHEEL GUARD		
25	OUTPUT SHAFT		
26	INNER FLANGER		

ST20101207-01

Sturmm![®]
POWER • GAS • HAND • TOOLS

Sturmm![®]
POWER • GAS • HAND • TOOLS