



## ПШМ-8135P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	TAPPING SCREW ST3.9×19	17	INDUCTOR WIRE
2	HOUSING ASSEMBLY	18	STATOR
3	SWITCH COVER	19	BALL BEARING 6000Z
4	SWITCH	20	FAN
5	BRUSH BOX	21	BALANCE PIECE
6	BRUSH HOLDER	22	ECCENTRIC BASE
7	CARBON BRUSH	23	DUSTPROOF WASHER
8	BALL BEARING 607Z	24	BEARING BASE
9	SPEED ADJUSTING PCB	25	BALL BEARING 6002RS
10	TAPPING SCREW ST3.9×19	26	WASHER
11	CORD CLAMP	27	SPRING WASHER 5
12	CORD SLEEVE	28	INNER HEX SCREW M5×16
13	CORD&PLUG	29	BIG WASHER
14	DUST COLLECTOR NOZZLE	30	BRAKE RING
15	DUST BAG	31	BASE PLATE
16	ROTOR	32	SPECIAL SCREW M5×16

EN20130328