



## CC-9926BX

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	POWER CORD AND PLUG	39	COVER SEALING RING	75	SCREW
2	PRESSURE CORD BOARD	40	THE OIL MOUTH SEALING RING	76	SMALL GEAR
3	SCREW	41	SCREW	77	6000 BEARING
4	CABLE GUARD	42	RUBBER COLUMN	78	CONNECTING LINE
5	SCREW	43	SCREW	79	CONNECTING LINE
6	SCREW	44	BUFFER BOARD	80	CONNECTING LINE
8	SWITCH BUTTON	45	SCREW	81	SPRING
9	SPRING	46	SCREW	82	CONNECTING LINE
10	CAPACITOR	47	STATOR	83	SCREW
11	SWITCH	48	SCREW	84	HANDLE
12	SWITCH BUTTON	49	WIND GUIDE	85	GEAR BOX
13	FIX BASE	50	608BEARING	86	TYPE O SEALING RING
14	BAR	51	ROTOR	87	SCREW
15	CHAIN	52	NUT	88	THE OIL OUTLET
16	CHAIN SHIELD	53	608BEARING	89	MICRO SWITCH
18	SWITCH PUSH ROD	54	BIG GEAR	90	OIL TUBE
19	CARBON BRUSH COVER	55	SHAFT SLEEVE	91	TANK JOINT
20	CARBON BRUSH HOLDER	56	BRAKE BUTTON SPRING	92	SEAL
21	CARBON BRUSH	57	SHAFT	93	SPONGE
22	HOUSING	58	6000BEARING	94	JOINT
23	HANDLE FIXED BOARD	59	BRAKE ROD	95	WORM GEAR TOOTH
24	SCREW	60	BRAKE SPRING	96	WORM GEAR
25	SCREW	61	WASHER	97	PISTON BUSH
26	MIDDLE COVER	62	SCREW	98	OIL PUMP BODY
27	SCREW	63	SCREW	99	SCREW
28	SCREW	64	CONNECTING ROD	100	OIL TUBE
29	RIGHT HANDLE COVER	65	BRAKE ROD LINKING PIECE	101	PROTECTION BOARD
30	SPRING	66	GEAR BUSH	102	PINS
31	SPROCKET	67	SCREW	103	OILER
32	E RING	68	SCREW	104	VALVE
33	SPROCKET COVER	69	BRAKE ROD FIXED BOARD	105	HOOK
34	SPROCKET COVER BUSH	70	BRAKE THE SPRING PIECE	106	SEALING RING
35	NUT	71	DUST COVER	107	FUEL TANK CAP
36	WRENCH	72	SCREW	888	HANDLE ASSEMBLY
37	NUT	73	SCREW		
38	SCREW	74	GEAR STENTS		

BM20120614