



## TC-9811LX

NO.	DESCRIPTION	NO.	DESCRIPTION
1	MOVING TABLE	28	BRACKET COVER
2	FIXING TABLE	29	SCREW
3	RIVING KNIFE	30	RUBBER WASHER
4	TAPPING SCREW	31	WASHER
5	NUT	32	SCREW
6	TOP GUARD	33	INNER FLANGE
7	KNOB OF TOP GUARD	34	CUTTER BLADE
8	ROTATING TABLE	35	OUTER FLANGE
9	HANDLE	36	NUT
10	RIP FENCE	37	TAPPING SCREW
11	CROSS-CUTTING FENCE	38	WASHER
12	LEFT BRACKET	39	SCREW
13	COPPER SHEET	40	TOOTH WASHER
14	CARBON BRUSH	41	GROUND TERMINAL
15	BRACKET OF CARBON BRUSH	42	CAPACITOR
16	WASHER	43	TAPPING SCREW
17	SCREW	44	PRESS CABLE CLIP
18	STATOR	45	TAPPING SCREW
19	BEARING 607RS	46	PLUG THE POWER CORD
20	AXIS	47	CORD GUARD
21	BEARING 608-2RS	48	RUBBER FOOT
22	FRONT BRACKET	49	SWITCH
23	SPRING WASHER	50	PLASTIC BOX
24	SCREW	51	BAFFLE PLATE
25	GEAR WHEEL	52	THE STATOR CARD BOARD
25-1	BEARING 608RS	53	LINE SHIELD
26	WOODRUFF-KEY	54	SELF-TAPPING SCREWS
27	DRIVEN AXIS		

BM20130315