



RS8810P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	VANTILATING SLOT	33	SLEEVE
2	COIL SPRING	34	BEARING 6000
3	CARBON BRUSH HOLDER	35	BEARING GLAND
4	CARBON BRUSH	36	SCREW M4X10
5	TAPING SCREW ST2.9X10	37	BIG GEAR
6	CAPACITOR	38	SHAFT
7	CORD	39	NEEDLE BEARING HK070814
8	CORD GUARD	40	PIN
9	STRAIN RELIEF	41	SAW BLADE
10	TAPING SCREW ST4.2X14	42	CLIP RING
11	PCB	43	OUTER RING
12	SWITCH	44	TORSION SPRING
13	INDUCTOR	45	BEARING CLIP
15	TAPING SCREW	46	SCREW M5X12
16	Φ5 SPRING WASHER	47	RESET SPRING
17	NUT	48	PIN
18	STARTOR 72X43	49	Φ3 PIN
19	BEARING 608	50	INNER STEEL SLEEVE
20	ROTOR41.3X43	51	WASHER
21	BEARING 6001	52	DUST RETAINER
22	COUNTERSUNK HEAD SCREW M4X10	53	WOOL WASHER
23	BEARING CLIP	54	SLIDING BEARING
24	MECHINEHEAD	55	CLIP RING
25	HEX SCREW M5X14	56	OUTPUT SHAFT
26	WASHER	57	SCREW M5X30
27	WASHER	58	GEAR CASE
28	HEX SCREW M5X12	60	NAMEPLATE
29	TAPING SCREW ST4.8X35	61	TAPING SCREW ST4.2X18
30	RUBBER SLEEVE	62	SLIDING BEARING
31	GUARD PLATE	888	HOUSING ASSEMBLY
32	ADJUSTABLE BOTTOM PLATE		

ST20120731

