

## **BSM8511U**

NO.   DESCRIPTION   NO.   DESCRIPTION				
2         SYNCHRÖNOUS BELT         39         INDUCTOR           3         MIDDLE COVER         40         ADJUST KNOB           4         SMALL PULLEY         41         SMALL SPRING           5         WIND CIRCLE         42         WASHER Ø13XØ6X1           6         LEFT HOUSING         43         CHECK RING           7         BRUSH COVER GRIP         44         FRONT-WHEEL FRAME           8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH         46         FRONT WHEEL           10         TORSION SPRING         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         46         MSASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8 </th <th>NO.</th> <th>DESCRIPTION</th> <th>NO.</th> <th>DESCRIPTION</th>	NO.	DESCRIPTION	NO.	DESCRIPTION
3         MIDDLE COVER         40         ADJUST KNOB           4         SMALL PULLEY         41         SMALL SPRING           5         WIND CIRCLE         42         WASHER Ø13XØ6X1           6         LEFT HOUSING         43         CHECK RING           7         BRUSH COVER GRIP         44         FRONT-WHEEL FRAME           8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH HOLDER         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         Ø6 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4,2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY	1)	BELT COVER	38	DECORATIVE COVER & SPEED CONTROL SWITCH
4         SMALL PULLEY         41         SMALL SPRING           5         WIND CIRCLE         42         WASHER Ø13XØ6X1           6         LEFT HOUSING         43         CHECK RING           7         BRUSH COVER GRIP         44         FRONT-WHEEL FRAME           8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH         46         FRONT WHEEL           10         TORSION SPRING         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         Ø6 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 62RS SHAFT           21         INSULATION SPACER         58         PLAIN WASHER	2	SYNCHRONOUS BELT	39	INDUCTOR
5         WIND CIRCLE         42         WASHER Ø13XØ6X1           6         LEFT HOUSING         43         CHECK RING           7         BRUSH COVER GRIP         44         FRONT-WHEEL FRAME           8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH GALES         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         66 WASHER           13         NUT         50         FRONT-WHEEL FRAME           14         FRONT HANDLE         51         66 RIVET           14         FRONT HANDLE         51         66 RIVET           15         SCREW ST4.2XI6         53         NUT MEEL FRAME WRENCH <tr< td=""><td>3</td><td>MIDDLE COVER</td><td>40</td><td>ADJUST KNOB</td></tr<>	3	MIDDLE COVER	40	ADJUST KNOB
6         LEFT HOUSING         43         CHECK RING           7         BRUSH COVER GRIP         44         FRONT-WHEEL FRAME           8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH         46         FRONT WHEEL           10         TORSION SPRING         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         96 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         96 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 608RS           20         BALL BEARING 608RS         57         SMALL BEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR <t< td=""><td>4</td><td>SMALL PULLEY</td><td>41</td><td>SMALL SPRING</td></t<>	4	SMALL PULLEY	41	SMALL SPRING
7         BRUSH COVER GRIP         44         FRONT-WHEEL FRAME           8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH         46         FRONT WHEEL           10         TORSION SPRING         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         Ø6 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 608RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8	5	WIND CIRCLE	42	WASHER Ø13XØ6X1
8         BRUSH HOLDER         45         FIXED SALES           9         BRUSH         46         FRONT WHEEL           10         TORSION SPRING         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         96 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         96 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER ØB           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER ØB           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS	6	LEFT HOUSING	43	CHECK RING
9 BRUSH 46 FRONT WHEEL 10 TORSION SPRING 47 NEEDLE BEARING HK0609 11 ACTIVITIES OF THE SHAFT PLATE 48 FRAME AXIS 12 AXIS OF ROTATION 49 Ø6 WASHER 13 NUT 50 FRONT-WHEEL FRAME WRENCH 14 FRONT HANDLE 51 Ø6 RIVET 15 SCREW M6 52 IRON BOTTOM 16 SCREW ST4.2X16 53 NUT M6 17 FORMER HANDLE WRENCH 54 LARGE PULLEY 18 STATOR 55 WASHER Ø8 19 SCREW ST5X50 56 BEARING 627RS 20 BALL BEARING 608RS 57 SMALL GEAR SHAFT 21 INSULATION SPACER 58 PLAIN WASHER 22 ROTOR 59 BIG GEAR 23 BALL BEARING 608RS 60 WASHER Ø8 24 INTRODUCTION SETS OF WIND 61 BEARING 608RS 25 RIGHT HOUSING 62 BALL BEARING 606 26 NAMEPLATE 65 CYLINDRICAL PIN Ø3X11 29 SCREW ST4.2X16 66 SPRING 30 SCREW ST4.2X16 66 SPRING 31 DUST ADAPTER 68 COPPER SETS 32 CABLE GUARD 69 BOWL-TYPE GASKET 33 CABLE PRESS BOARD 71 BALL BEARING 626 35 SCREW ST4.2X16 72 PLASTIC BRACKET 36 SWITCH 73 SCREW ST4.2X40	7	BRUSH COVER GRIP	44	FRONT-WHEEL FRAME
10         TORSION SPRING         47         NEEDLE BEARING HK0609           11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         Ø6 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63	8	BRUSH HOLDER	45	FIXED SALES
11         ACTIVITIES OF THE SHAFT PLATE         48         FRAME AXIS           12         AXIS OF ROTATION         49         Ø6 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2XI6         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE         62         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING <td>9</td> <td>BRUSH</td> <td>46</td> <td>FRONT WHEEL</td>	9	BRUSH	46	FRONT WHEEL
12         AXIS OF ROTATION         49         Ø6 WASHER           13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø	10	TORSION SPRING	47	NEEDLE BEARING HK0609
13         NUT         50         FRONT-WHEEL FRAME WRENCH           14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS </td <td>11</td> <td>ACTIVITIES OF THE SHAFT PLATE</td> <td>48</td> <td>FRAME AXIS</td>	11	ACTIVITIES OF THE SHAFT PLATE	48	FRAME AXIS
14         FRONT HANDLE         51         Ø6 RIVET           15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS </td <td>12</td> <td>AXIS OF ROTATION</td> <td>49</td> <td>Ø6 WASHER</td>	12	AXIS OF ROTATION	49	Ø6 WASHER
15         SCREW M6         52         IRON BOTTOM           16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE G	13	NUT 4 -	50	FRONT-WHEEL FRAME WRENCH
16         SCREW ST4.2X16         53         NUT M6           17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606R           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         67         REAR AXLE           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-T	14	FRONT HANDLE	51	Ø6 RIVET
17         FORMER HANDLE WRENCH         54         LARGE PULLEY           18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEE	15	SCREW M6	52	IRON BOTTOM
18         STATOR         55         WASHER Ø8           19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 6	16	SCREW ST4.2X16	53	NUT M6
19         SCREW ST5X50         56         BEARING 627RS           20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72 <td< td=""><td>17</td><td>FORMER HANDLE WRENCH</td><td>54</td><td>LARGE PULLEY</td></td<>	17	FORMER HANDLE WRENCH	54	LARGE PULLEY
20         BALL BEARING 608RS         57         SMALL GEAR SHAFT           21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCR	18	STATOR	55	WASHER Ø8
21         INSULATION SPACER         58         PLAIN WASHER           22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	19	SCREW ST5X50	56	BEARING 627RS
22         ROTOR         59         BIG GEAR           23         BALL BEARING 608RS         60         WASHER Ø8           24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9912         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	20	BALL BEARING 608RS	57	SMALL GEAR SHAFT
23       BALL BEARING 608RS       60       WASHER Ø8         24       INTRODUCTION SETS OF WIND       61       BEARING 608RS         25       RIGHT HOUSING       62       BALL BEARING 606         26       NAMEPLATE DECORATIVE COVER       63       ALUMINUM BASE         27       SCREW ST2.9X12       64       CERAMIC SHEET         28       NAMEPLATE       65       CYLINDRICAL PIN Ø3X11         29       SCREW ST4.2X16       66       SPRING         30       SCREW ST4.2X16       67       REAR AXLE         31       DUST ADAPTER       68       COPPER SETS         32       CABLE GUARD       69       BOWL-TYPE GASKET         33       CABLE       70       REAR WHEEL         34       CABLE PRESS BOARD       71       BALL BEARING 626         35       SCREW ST4.2X16       72       PLASTIC BRACKET         36       SWITCH       73       SCREW ST4.2X40	21	INSULATION SPACER	58	PLAIN WASHER
24         INTRODUCTION SETS OF WIND         61         BEARING 608RS           25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	22	ROTOR	59	BIG GEAR
25         RIGHT HOUSING         62         BALL BEARING 606           26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	23	BALL BEARING 608RS	60	WASHER Ø8
26         NAMEPLATE DECORATIVE COVER         63         ALUMINUM BASE           27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	24	INTRODUCTION SETS OF WIND	61	BEARING 608RS
27         SCREW ST2.9X12         64         CERAMIC SHEET           28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	25	RIGHT HOUSING	62	BALL BEARING 606
28         NAMEPLATE         65         CYLINDRICAL PIN Ø3X11           29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	26	NAMEPLATE DECORATIVE COVER	63	ALUMINUM BASE
29         SCREW ST4.2X16         66         SPRING           30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	27	SCREW ST2.9X12	64	CERAMIC SHEET
30         SCREW ST4.2X16         67         REAR AXLE           31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	28	NAMEPLATE	65	CYLINDRICAL PIN Ø3X11
31         DUST ADAPTER         68         COPPER SETS           32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	29	SCREW ST4.2X16	66	SPRING
32         CABLE GUARD         69         BOWL-TYPE GASKET           33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	30	SCREW ST4.2X16	67	REAR AXLE
33         CABLE         70         REAR WHEEL           34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	31	DUST ADAPTER	68	COPPER SETS
34         CABLE PRESS BOARD         71         BALL BEARING 626           35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	32	CABLE GUARD	69	BOWL-TYPE GASKET
35         SCREW ST4.2X16         72         PLASTIC BRACKET           36         SWITCH         73         SCREW ST4.2X40	33	CABLE	70	REAR WHEEL
36 SWITCH 73 SCREW ST4.2X40	34	CABLE PRESS BOARD	71	BALL BEARING 626
	35	SCREW ST4.2X16	72	PLASTIC BRACKET
37 CAPACITOR0.22UF 74 SANDING BELT	36	SWITCH	73	SCREW ST4.2X40
	37	CAPACITOR0.22UF	74	SANDING BELT

BSM8511U-EX-UK240802