


BTM8933S

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
2	STOP RING	35	CLUTCH CASE	76	LOW GUARD
3	STOP RING	36	CIRCLIP 15	77	SCREW
4	BEARING 6000-2RS/P5	37	BEARING 6202-2RZ	78	BLADE
5	PINION	38	CIRCLIP 35	79	ROPE ROOM CAP
6	STEEL PLATE CAP	39	CLUTCH DRUM COMP.	80	BOUNCE OBJECT
7	SCREW M6X20	44N	TRIGGER	81	ROPE CAP
8	WASHER	45N	SPRING	82	ROPE SEAT
9	SCREW M5X12	47N	LEFT HANDLE	83	NYLON CORD
10	BOLT M6X12	49N	HAND GRIP	84	SPRING
11	WASHER	50N	STOP BUTTOM COMP.	85	ROPE ROOM
12	GEAR CASE	51N	TUBE	86	BOLT
13	BLADE COVER	52N	CABLE COMP.	87	SPRING
14	BEARING 6000/P5	53N	RIGHT HANDLE	88	RING FOR LIMIT
15	GEAR	54N	SCREW	89	WASHER
16	GEAR SHAFT	55N	SCREW	90	HANDLE GRIP
17	BEARING 6002-2RS/P5	56	NUT	91	NUT
18	STOP RING	57	HARNES CLAMP	92	LOCK BOLT
19	HOLDER	58	CLAMP	93	UPPER CAP
20	HOLDER	59	SCREW	94	BRACKET
21	WASHER	61N	BOLT	95	SPRING
22	LEFT NUT	63N	LEFT GRIP	96	PLASTIC SLEEVE
23	PIN	64N	HANDLE	100	GEAR BOX ASSEMBLY
24	3T BLADE	65N	BRACKET	101	PIPE ASSEMBLY
25	40T BLADE	66N	LOWER CAP	102	CLUCH ASSEMBLY
26	RUBBER COVER	67N	SCREW	103N	LEVER ASSEMBLY
27	OIL-BEARING	68	BLADE COVER	104	HOLDER ASSEMBLY
28	DRIVE SHAFT	69	GUARD ASSEMBLY	105	GUARD ASSEMBLY
29	PIPE	70	SCREW	106	NYLON CUTTER HEAD
30	CIRCLIP	71	SCREW	107	RING FOR LIMIT ASSEMBLY
31	HANG RING	72	SAFETY GUARD BRACKET		
32	HANG HANDLE	73	SCREW		
33	BOLT	74	SAFETY GUARD		
34	NUT	75	LOW GUARD ASSEMBLY		

UKW231109BT

Sturmmaxo

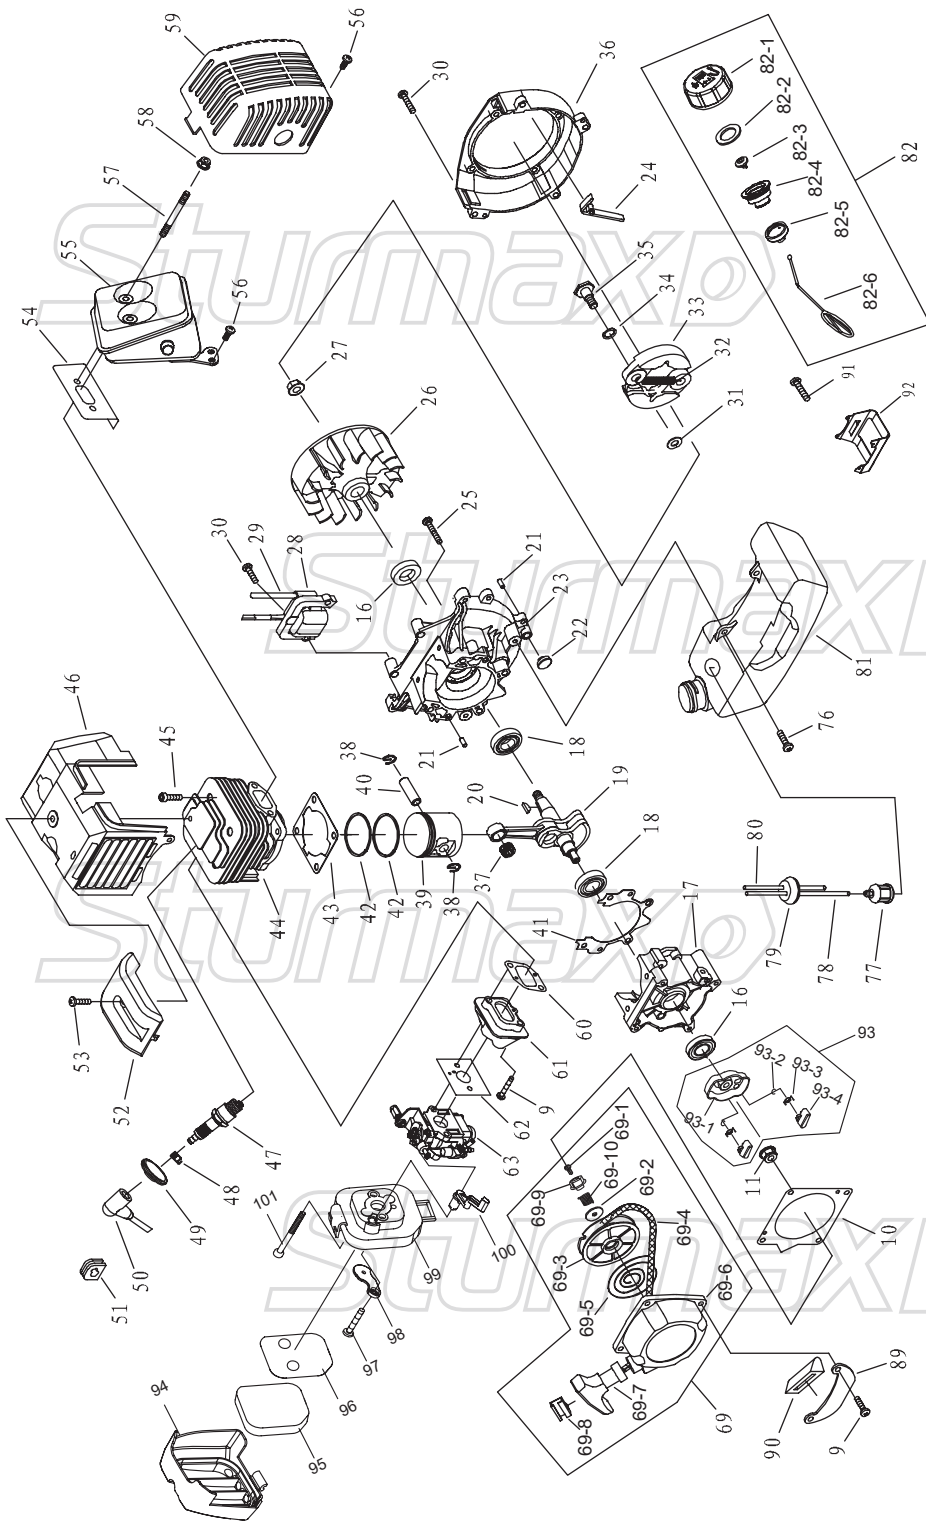

ENGINE FOR BTM8933S

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
9	SCREW M5X20	44	CYLINDER	76	SCREW M5X16
10	GASKET	45	SCREW	77	CLEANER COVER
11	NUT	46	GUIDE COVER ASS'Y	78	OUTLET FUEL PIPE
16	OIL-SEAL	47	SPARK PLUG	79	PLUG
17	CRANK CASE	48	SPRING	80	INLET FUEL PIPE
18	BEARING 6201/P5	49	PLUG COVER	81	FUEL TANK
19	CRANK SHAFT	50	PLUG CAP	82-1	LID ASS'Y
20	KEY	51	PLUG	82-2	FUEL TANK LID
21	PIN	52	UPPER COVER	82-2	GASKET
22	RUBBER WASHER	53	SCREW	82-3	INLET
23	CRANK CASE	54	GASKET	82-4	INSIDE COVER
24	FLASH PAN	55	MUFFLER	82-5	LID
25	SCREW M5X30	56	SCREW	82-6	CHAIN
26	MAGNETO ROTO COMP	57	BOLT	89	STAND
27	NUT	58	NUT	90	RUBBER COVER
28	IGNITION COLL COMP	59	MUFFLER COVER	91	SCREW M5X20
29	CORD COMP	60	GASKET	92	BRACKET
30	BOLT M5X20	61	ADMITTING PIPE	93	STARTER PULLEY ASS'Y
31	WASHER B	62	GASKET	93-1	STARTER REEL
32	SPRING	63	CARBURETOR	93-2	STOP RING
33	EXPANDER	69	STARTER	93-3	STARTER PAWL SPRING
34	WASHER	69-1	SCREW	93-4	STARTER PAWL
35	SCREW PIN	69-2	WASHER	94	CLEANER OUTSIDE COVER
36	FAN COVER	69-3	START ROPE REEL	95	CLEANER ELEMENT
37	BEARING	69-4	ROPE	96	DEFENDER FOR CLEANER ELEMENT
38	RING	69-5	RECOIL SPRING	97	SCREW ST4.2X12-F-H
39	PISTON	69-6	START COVER ASS'Y	98	CHOKE
40	PISTON PIN	69-7	START HANDLE	99	CLEANER INSIDE COVER
41	GASKET	69-8	RING	100	CHOKE HANDLE
42	PISTON RING	69-9	START RATCHET	101	SCREW M5X55
43	GASKET	69-10	EASY START COIL-SPRING		

UKW231109BT

Sturmaxo