



CCM9923

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CARBON BRUSH	46	CIRCLIP $\varnothing 7$
2	BRUSH HOLDER	47	HANDLE FIXATION PLATE
3	MOTOR BACK BRACKET	48	OIL TANK COVER
4	NUT M4	49	O-RING
5	STATOR	50	POTHOOK
6	SCREW ST4X16	51	CHECK VALVE
7	MOTOR FRONT BRACKET	52	OIL TANK
8	WASHER $\varnothing 4$	53	FUEL TANK JOINT
9	SPRING WASHER $\varnothing 4$	54	SEALING RING
10	SCREW M4X61	55	INTO TUBING
11	BEARING 608Z	56	SCREW ST4X30
12	STATOR	57	PROTECTIVE PLATE
13	BEARING 629Z	58	SPRING
14	PINION GEAR	59	BACK PUSH ROD
15	NUT M6	60	PRESSURE PLATE
16	GEAR BOX	61	BLOCK PLATE
17	OIL PUMP COMPONENTS	62	PIN $\varnothing 4 \times 22$
18	SCREW ST3X8	63	WASHER $\varnothing 4$
19	LEFT HOUSING	64	BRAKE PLATE
20	AUXILIARY HANDLE	65	LOCATING SLEEVE
21	SCREW ST5X20	66	BRAKE PLATE TORSION SPRING
22	BRUSH CAP	67	WASHER $\varnothing 5$
23	ISOLATION SLEEVE	68	LOCK
24	RIVET $\varnothing 2.5 \times 5$	69	SPRING
25	CARBON BRUSH HOLDER	70	OUT TUBING
26	CABLE	71	SPRING
27	CABLE PROTECTOR	72	OUT OF THE NOZZLE
28	CABLE ANCHORAGE	73	O-RING
29	SCREW ST4X12	74	BUMPER SPIKE
30	CAPACITY	75	SCREW ST4X40
31	SWITCH	76	RUBBER RING
32	SWITCH TRIGGER	77	FIXED PLATE
33	SPRING	78	GUIDE BAR SCREW
34	SPRING	79	GUIDE BAR
35	SAFETY LOCKING BUTTON	80	SHAFT SLEEVE
36	PUSH ROD	81	KNOCKOUT PLATE
37	NUT M8	82	CHAIN
38	BIG GEAR	83	SCABBARD
39	SHAFT SLEEVE	84	CIRCLING ROUND WHEEL
40	BRAKE TORSION SPRING	85	WASHER $\varnothing 11 \times \varnothing 20 \times 1$
41	OUTPUT SHAFT	86	CIRCLIP
42	BEARING 6000RS	87	CHAIN COVER
43	RIGHT HOUSING	88	CIRCLIP $\varnothing 19$
44	SPRING	89	TENSIONING KNOB
45	CHAIN WHEEL	90	COMPRESS KNOB