

CCM9928P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CABLE	47	SPRING
2	CABLE PROTECTOR	48	LOCK
3	LEFT HOUSING	49	WASHER $\Phi 5$
4	BRUSH CAP	50	BACK PUSH ROD
5	CABLE ANCHORAGE	51	SWITCH
6	SCREW ST4X12	52	BRAKE PLATE
7	SAFETY LOCKING BUTTON	53	LOCATING SLEEVE
8	SPRING	54	BRAKE PLATE TORSION SPRING
9	SWITCH TRIGGER	55	PROTECTIVE PLATE
10	SPRING	56	SPRING
11	CARBON BRUSH HOLDER	57	PUSH ROD
12	INTO TUBING	58	SCREW ST4X40
13	SPRING	59	OUT OF THE NOZZLE
14	SEALING RING	60	O-RING
15	FUEL TANK JOINT	61	NUT M8
16	SPONGE	62	BIG GEAR
17	PLUG	63	SHAFT SLEEVE
18	WASHER $\Phi 4$	64	GEAR CASE COVER
19	CAPACITY	65	BRAKE TORSION SPRING
20	AUXILIARY HANDLE	66	OUTPUT SHAFT
21	SCREW ST5X70	67	BEARING 6000RS
22	OIL TANK COVER	68	RIGHT HOUSING
23	O-RING	69	HANDLE RETAINING PLATE
24	POTHOOK	70	SCREW ST4X40
25	CHECK VALVE	71	SCREW ST4X16
26	OIL TANK	72	RUBBER RING
27	NUT M4	73	SPRING
28	MOTOR BACK BRACKET	74	CHAIN WHEEL
29	BRUSH HOLDER	75	CIRCLIP $\Phi 7$
30	CARBON BRUSH	76	BUMPER SPIKE
31	BEARING 608Z	77	SCREWST4X12
32	ROTOR	78	SHAFT SLEEVE
33	STATOR	79	KNOCKOUT PLATE
34	SCREW ST4X16	80	GUIDE BAR
35	MOTOR FRONT BRACKET	81	GUIDE BAR SCREW
36	SPRING WASHER $\Phi 4$	82	CIRCLING ROUND WHEEL
37	WASHER $\Phi 4$	83	WASHER $\Phi 11 \times \Phi 20 \times 1$
38	SCREW M4X67	84	CIRCLIP
39	BEARING 6000Z	85	CHAIN COVER
40	PINION GEAR	86	CIRCLIP $\Phi 19$
41	NUT M6	87	TENSIONING KNOB
42	GEAR BOX	88	COMPRESS KNOB
43	SCREW ST3X8	89	CHAIN
44	OIL PUMP COMPONENTS	90	SCABBARD
45	OUT TUBING	91	SOFT START
46	SPRING		

CCCM9928P-EX-UK260820-1

