




| NO.  | DESCRIPTION         | NO. | DESCRIPTION     |               |
|------|---------------------|-----|-----------------|---------------|
| 1    | SPINDLE             | 16  | WIND GUARD      |               |
| 2    | KEY                 | 17  | SCREW           |               |
| 3    | BEARING 6200RS      | 18  | STATOR          |               |
| 4    | SCREW               | 19  | HOUSING         |               |
| 5    | GEAR BOX            | 20  | SWITCH          |               |
| 6    | GEAR                | 23  | CORD CLAMP      |               |
| 7    | CIRCLIP             | 24  | SCREW           |               |
| 8    | STEEL BUSH          | 25  | CORD SLEEVE     |               |
| 9    | MIDDLE COVER        | 26  | CORD            |               |
| 10   | BEARING 6200RS      | 27  | CIRCLIP         | $\mathcal{D}$ |
| 11   | ROTOR               | 28  | SCREW           | リ             |
| 12 🛴 | CARBON BRUSH        | 990 | VIBRATION SPEAR |               |
| 13   | CARBON BRUSH HOLDER | 888 | HANDLE ASSEMBLE |               |
| 14   | BEARING 608Z        |     |                 |               |
| 15   | WASHER              |     |                 |               |

ST-UK240306

## Stumaxo

Stumaxo

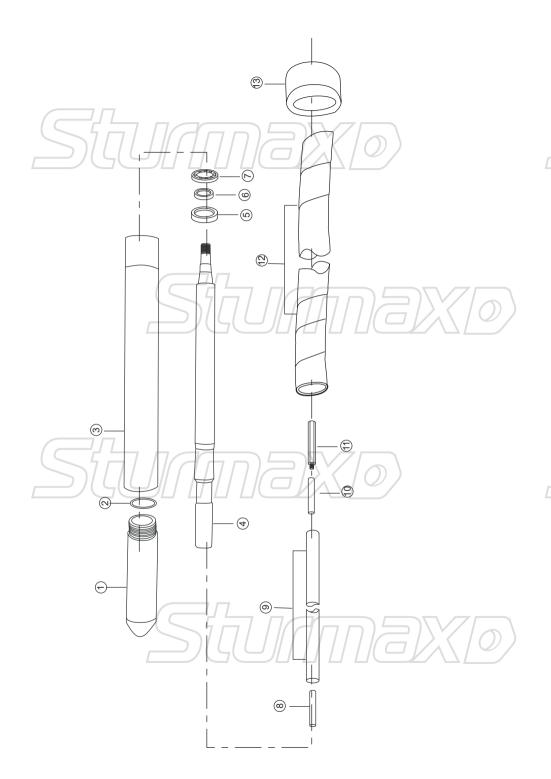

## Vibrator for CVM71101

| NO. | DESCRIPTION      |
|-----|------------------|
| 1   | CAP HEAD         |
| 2   | O-RING           |
| 3   | CASE             |
| 4   | ROTARY SHAFT     |
| 5   | COUNTER OIL SEAL |
| 6   | OIL SEAL         |
| 7   | BEARING          |
| 8   | SHAFT JOINT      |
| 9   | FLEXILE SHAFT    |
| 10  | SHAFT JOINT      |
| 11  | HEX SHAFT JOINT  |
| 12  | FLEXILE HOSE     |
| 13  | LOCKING NUT      |

ST-UK240306

Stumaxo