

CCM9920CR

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|--|-----|-----------------------|
| 1 | COMPRESS KNOB | 35 | SCREW ST4X9 |
| 2 | LOCATING SLEEVE | 36 | OIL NOZZLE |
| 3 | CHAIN COVER | 37 | O-RING |
| 4 | GUIDE BAR | 38 | TUBING 1 |
| 5 | CHAIN | 39 | TUBING 2 |
| 6 | SCREW ST4X16 | 40 | SEALING RING |
| 7 | BUMPER SPIKE | 41 | FUEL TANK JOINT |
| 8 | RUBBER RING | 42 | OIL TANK COVER |
| 9 | CIRCLIP $\phi 7$ | 43 | SEALING RING |
| 10 | CHAIN WHEEL | 44 | OIL TANK |
| 11 | SPRING | 45 | CHECK VALVE |
| 12 | FAST TENSIONING ASSY | 46 | SAFETY LOCKING BUTTON |
| 13 | TENSIONING KNOB SEAT | 47 | SWITCH TRIGGER |
| 14 | TENSIONING KNOB | 48 | SPRING |
| 15 | RIGHT HOUSING | 49 | SWITCH |
| 16 | SCREW ST3X8 | 50 | SPRING |
| 17 | OIL PUMP COMPONENTS | 51 | CONNECTION FOOT |
| 18 | GEAR BOX COVER | 52 | BATTERY PACK HOLDER |
| 19 | BEARING 6000RS | 53 | LEFT HOUSING |
| 20 | TURBINE | 55 | REAR COWL |
| 21 | OUTPUT SHAFT | 56 | MOTOR |
| 22 | BRAKE TORSION SPRING | 57 | PINION GEAR |
| 23 | SHAFT SLEEVE | 58 | PROTECTIVE PLATE |
| 24 | BIG GEAR | 59 | AUXILIARY HANDLE |
| 25 | BEARING 608Z | 60 | SCREW ST5X30 |
| 26 | NUT M8 | 61 | MOTOR PCB |
| 27 | TENSION SPRING | 62 | POTHOOK |
| 28 | SWITCH | 63 | SCREW ST4X12 |
| 29 | LOCK CATCH | 64 | SCABBARD |
| 30 | SPRING | 65 | SCREW ST4X12 |
| 31 | WASHER $\phi 4 \times \phi 10 \times 0.7$ | 66 | SEALING GASKET |
| 32 | BRAKE PLATE SEAT | 67 | SCREW ST4X20 |
| 33 | BRAKE PLATE | 68 | RUBBER PAD |
| 34 | WASHER $\phi 44.2 \times \phi 16 \times 1$ | | |

ST-UK2404029

