

CCM9922CR

NO.	DESCRIPTION	NO.	DESCRIPTION
1	E-RRING	41	CASE BUTTON
2	WHEEL	42	CASE COVER
3	SPRING	43	SEAL
4	RIGHT HOUSING	44	HUNG
5	BEARING 6000Z	45	VALVE
6	WASHER	46	OIL TANK
7	WORM	47	OUTLET SPRING
8	SHAFT	48	OUTLET
9	TORSIONAL SPRING	49	OUTLET NOZZLE
10	SHAFT SLEEVE	50	O RING
11	BIG GEAR	51	PUMP
12	BEARING 628Z	52	SCREWST3×8
13	NUT	53	OIL PIPE JOINT
14	WASHER	54	SEAL
15	BEARING 626Z	55	OIL INLET
16	SCREW ST4×12	56	GUARD PLATE
17	MOTOR RIGHT SURPORT	57	SWITCH
18	5020 MOTOR	58	WASHER
19	MOTOR LEFT SURPORT	59	LOCKER
20	SPONGE	60	SPRING
21	PINION	61	WASHER
22	M5 NUT	62	BRAKE
23	SCREW ST3×12	63	LIMIT SLEEVE
24	RIGHT BATTERY PACK	64	BRAKE SPRING
25	BATTERY PACK	65	SEAL
26	INSERT SEAT	66	DEAD BLOCK
27	LEFT BATTERY PACK	67	SCREW M4×8
28	FLYING RING SEAT	68	WASHER
29	FLYING RING	69	CHAIN SAW
30	SPRING	70	GUIDE BAR
31	SWITCH TRIGGER	71	COVER
32	SPRING	72	ADAPTER SLEEVE
33	SWITCH	73	PUSH PLATE
34	BUTTON	74	WHEEL
35	20V PCB	75	SNAP RING
36	LEFT HOUSING	76	WASHER
37	SCREWST5×25	77	TOOL FREE COVER PLATE
38	SCREWST4×16	78	SHAFT RING
39	HANDLE	79	ADJUST BUTTON
40	PIN	80	PRESS BUTTON

