


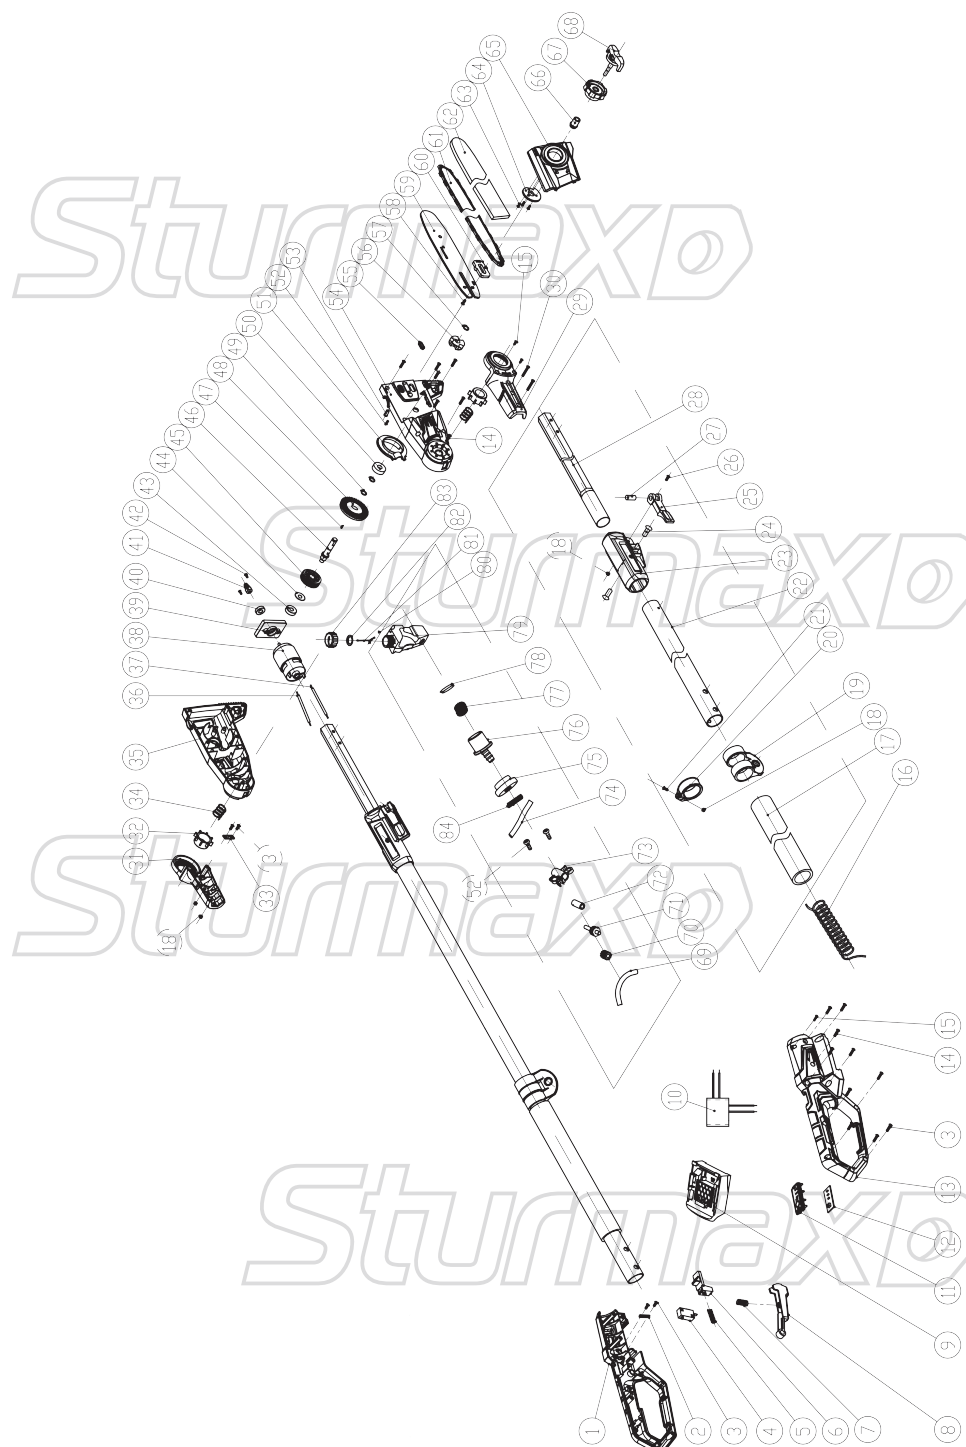

EPM3520CR

NO.	DESCRIPTION	NO.	DESCRIPTION
1	LEFT HANDLE	49	RING FOR SHAFT
2	CABLE PRESSING PLATE	50	BEARING 6000Z
3	SCREWS ST4X14	51	GEAR COVER
4	MICRO SWITCH	52	FLANGE SCREW
5	SWITCH TRIGGER SPRING	53	LIMIT PIN
6	SWITCH TRIGGER	54	RIGHT HOUSING
7	BRAKE SPRING	54.1	NUTM6
8	SELF LOCK KNOB	55	SEAL RING
9	INSERT HOLDER	56	WHEEL
10	DISCHARGER PLATE	57	E RING
11	BUTTON PANEL	58	SCREW 5*8
12	INDICATOR PANEL	59	GUIDE
13	RIGHT HANDLE	60	ADJUSTABLE BLOCK
14	SCREW 4*16	61	SAW
15	SCREW ST3X14	62	GUIDE COVER
16	SPRING WIRE	63	SCREW 4*14
17	SPONGE SLEEVE	64	CAN
18	LOCK NUT	65	COVER
19	STARP LOOP	66	ADJUSTABLE BUSH
20	STRAP FIXING RING	67	ADJUSTABLE BUTTON
21	SCREW 5*12	68	PRESS BUTTON
22	FIBREGLASS TUBE	69	OIL TUBE
23	TIGHTEN TUBE	70	WORM GEAR
24	RIVET	71	WORM
25	TIGHTEN BUTTON	72	PISTON TUBE
26	SCREW 5*32	73	OIL PUMP
27	TIGHTEN PIN	74	INLET TUBE
28	ADJUSTABLE TUBE	75	SEAL RING
29	RIGHT ROTATION COVER	76	FUEL TANK CONNTECTOR
30	SCREW 5*37	77	SPONGE
31	LEFT ROTATION COVER	78	FUEL TANK BLOCK
32	ROTATION BUTTON	79	FUEL TANK
33	PRESS BOARD	80	VALVE
34	SPRING	81	HUNG
35	LEFT HOUSING	82	FUEL TANK RING
36	LINE1	83	FUEL TANK COVER
37	LINE2	84	SPRING
38	MOTOR		
39	MOTOR FIX BOARD		
40	BEARING 698		
41	PINION		
42	SCREW 4*10		
43	BEARING608		
44	WASHER		
45	WORM		
46	SHAFT		
47	KEY		
48	BIG GEAR		

EPM3520CR-EX-UK250725-1