


ERM1101CR

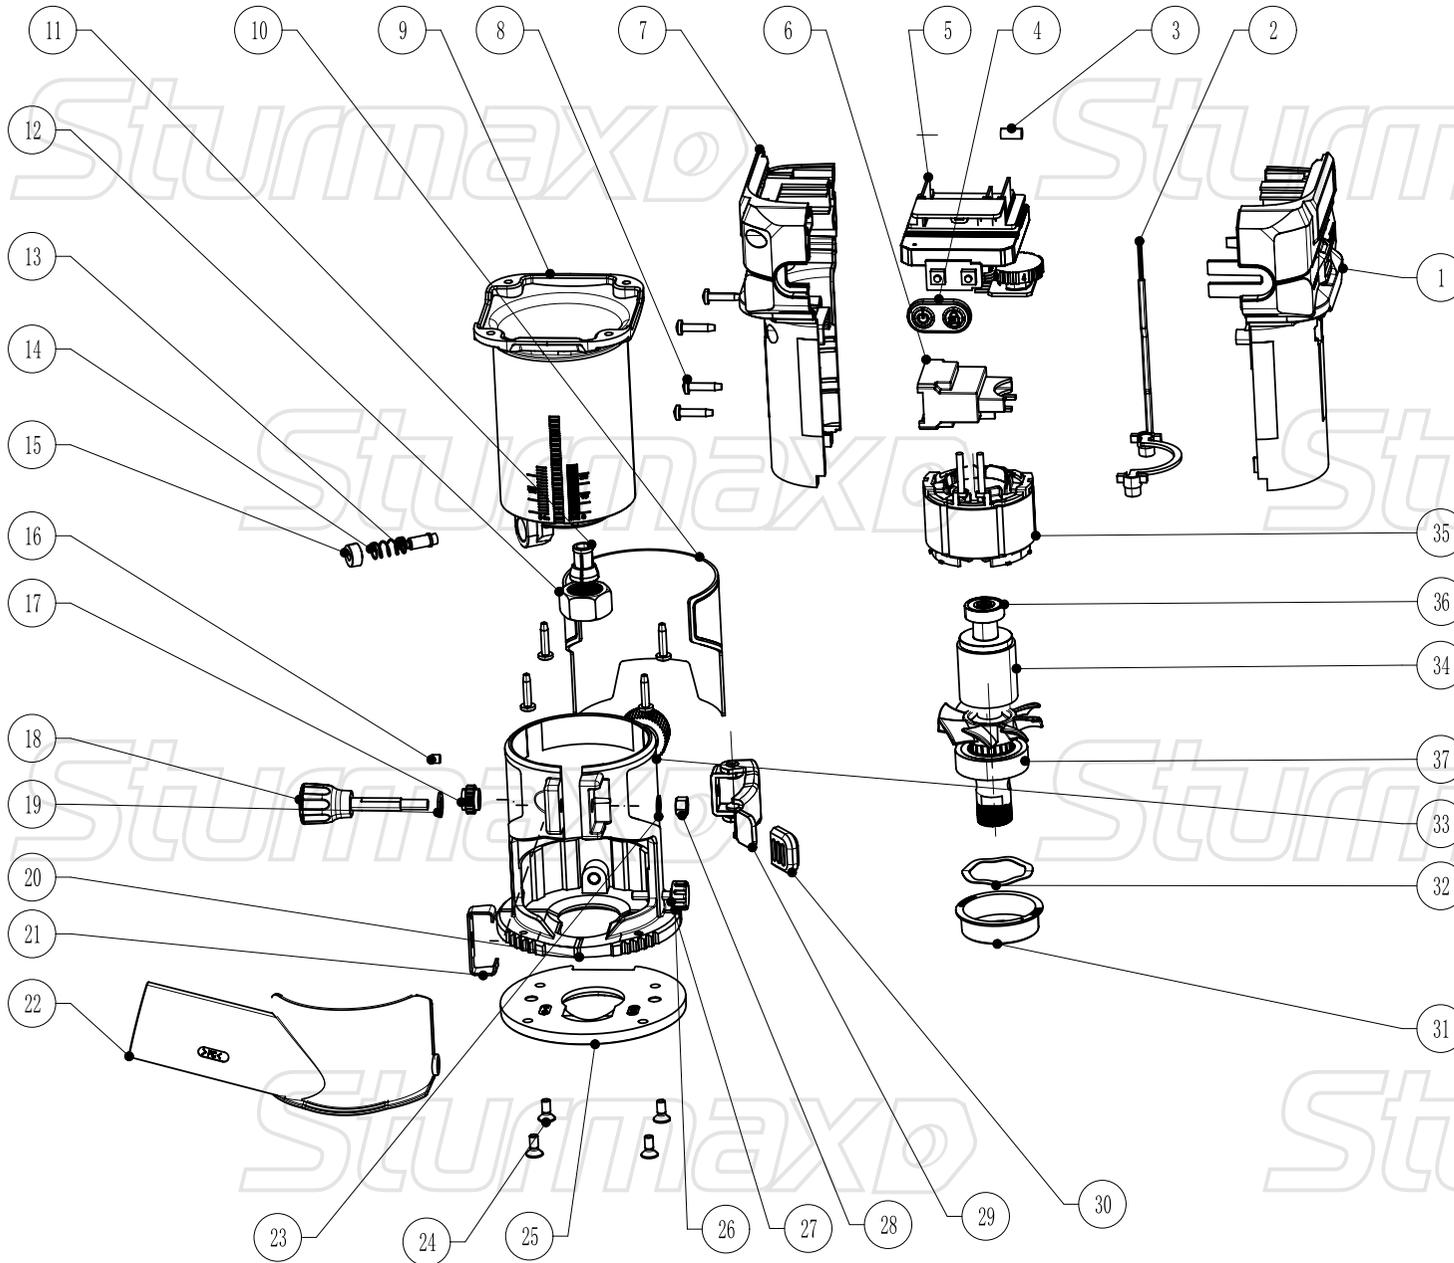

NO.	DESCRIPTION
1	LOWER SHELL
2	LIGHT ASSEMBLY
3	RUBBER COLUMN $\Phi 5 \times 10$
4	SWITCH BUTTON
5	BRUSHLESS CONTROLLER
6	BRACKET
7	UPPER SHELL
8	SCREW ST3.5x16
9	HOUSING
10	BASE SOFT RUBBER
11	COLLET
12	CLAMPING NUT M17
13	LOCK PIN
14	LOCK SPRING
15	AXIS LOCK BUTTON
16	PIN
17	STRAIGHT GEAR
18	KNOB
19	GASKET
20	FLAT BASE
21	GASKET
22	DUST PIPE
23	GASKET
24	SCREWS M4x10
25	BASE PLATE
26	SCREWS M4x20
27	WASHER M4
28	NUT M5
29	HOOK HANDLE ASSEMBLY
30	RUBBER CAP
31	BEARING SLEEVE
32	WAVE GASKET
33	SCREWS M6x20
34	ROTOR ASSEMBLY
35	STATOR
36	BEARING S&F 607RZ
37	BEARING LEF 6003RS