



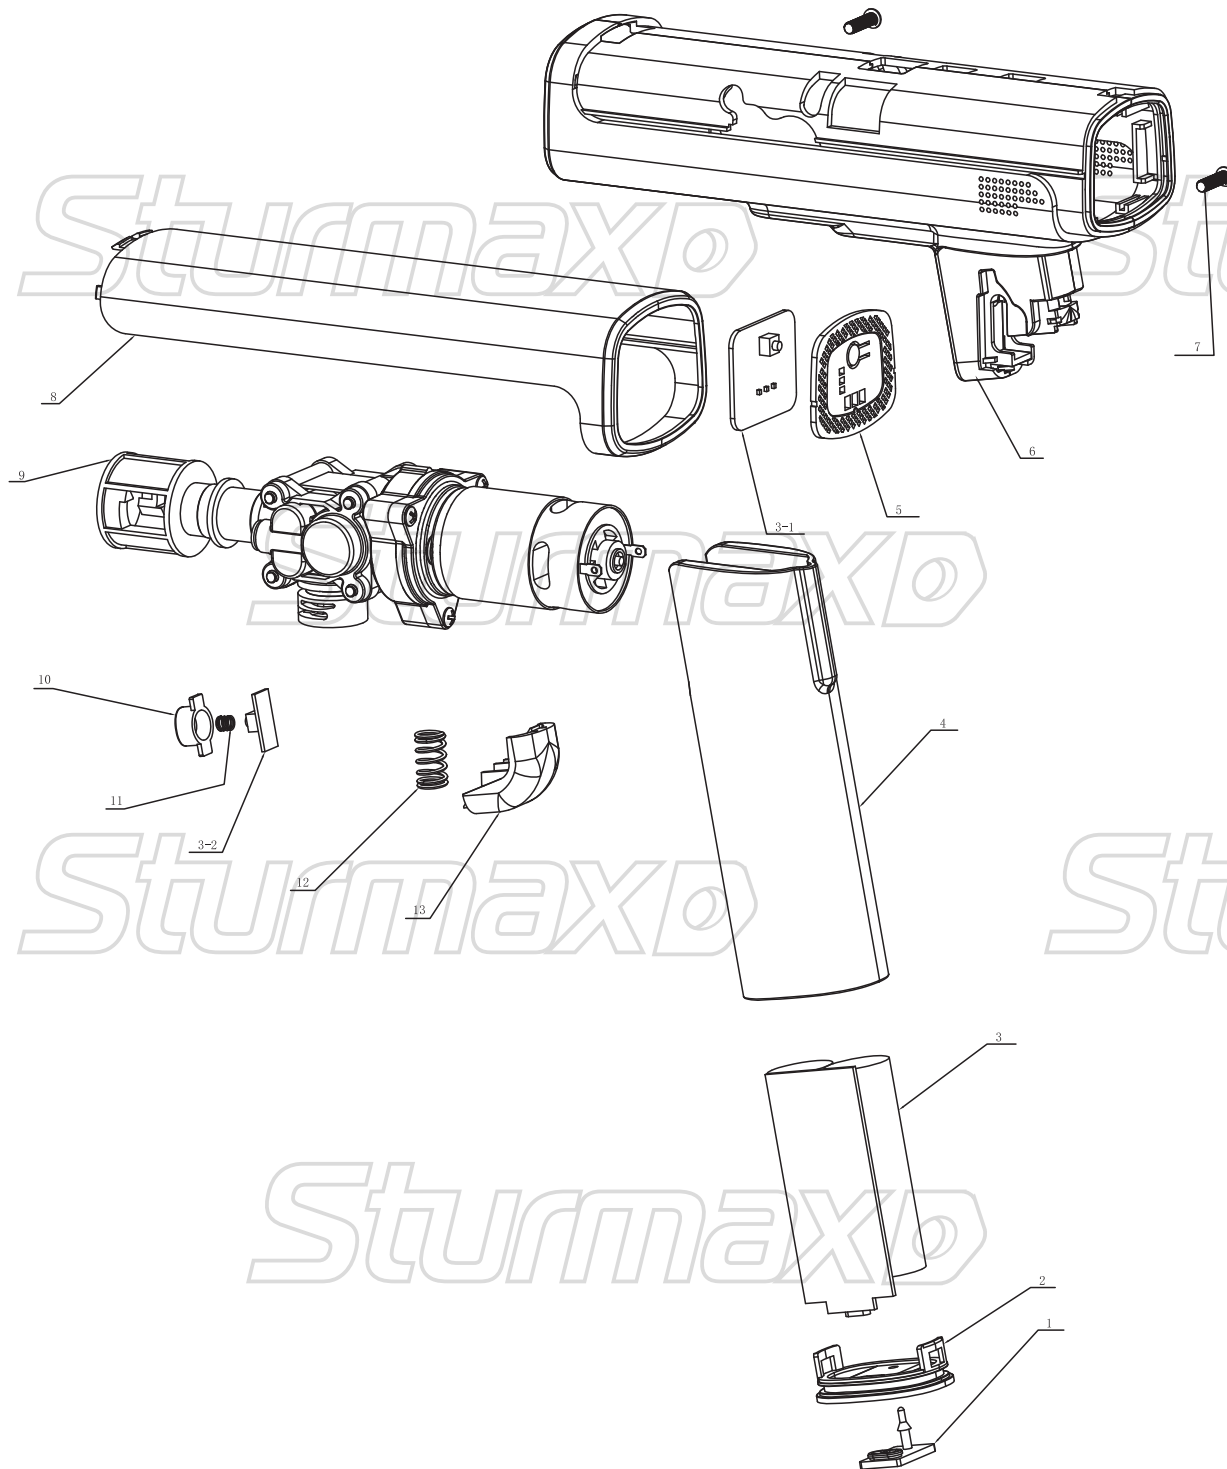

PWM9208

NO.	DESCRIPTION
1	RUBBER COVER
2	HANDLE COVER
3	BATTERY PACK
3-1	SPEED PCB
3-2	SWITCH PCB
4	HANDLE
5	PLASTIC COVER
6	HOUSING
7	SCREWCST3X15
8	SLIP COVER
9	PUMP ASSEMBLY
10	SWITCH BUTTON
11	TRIGGER SPRING
12	SPRING
13	SPRING COVER

PWM9208-EX-UK260629-1

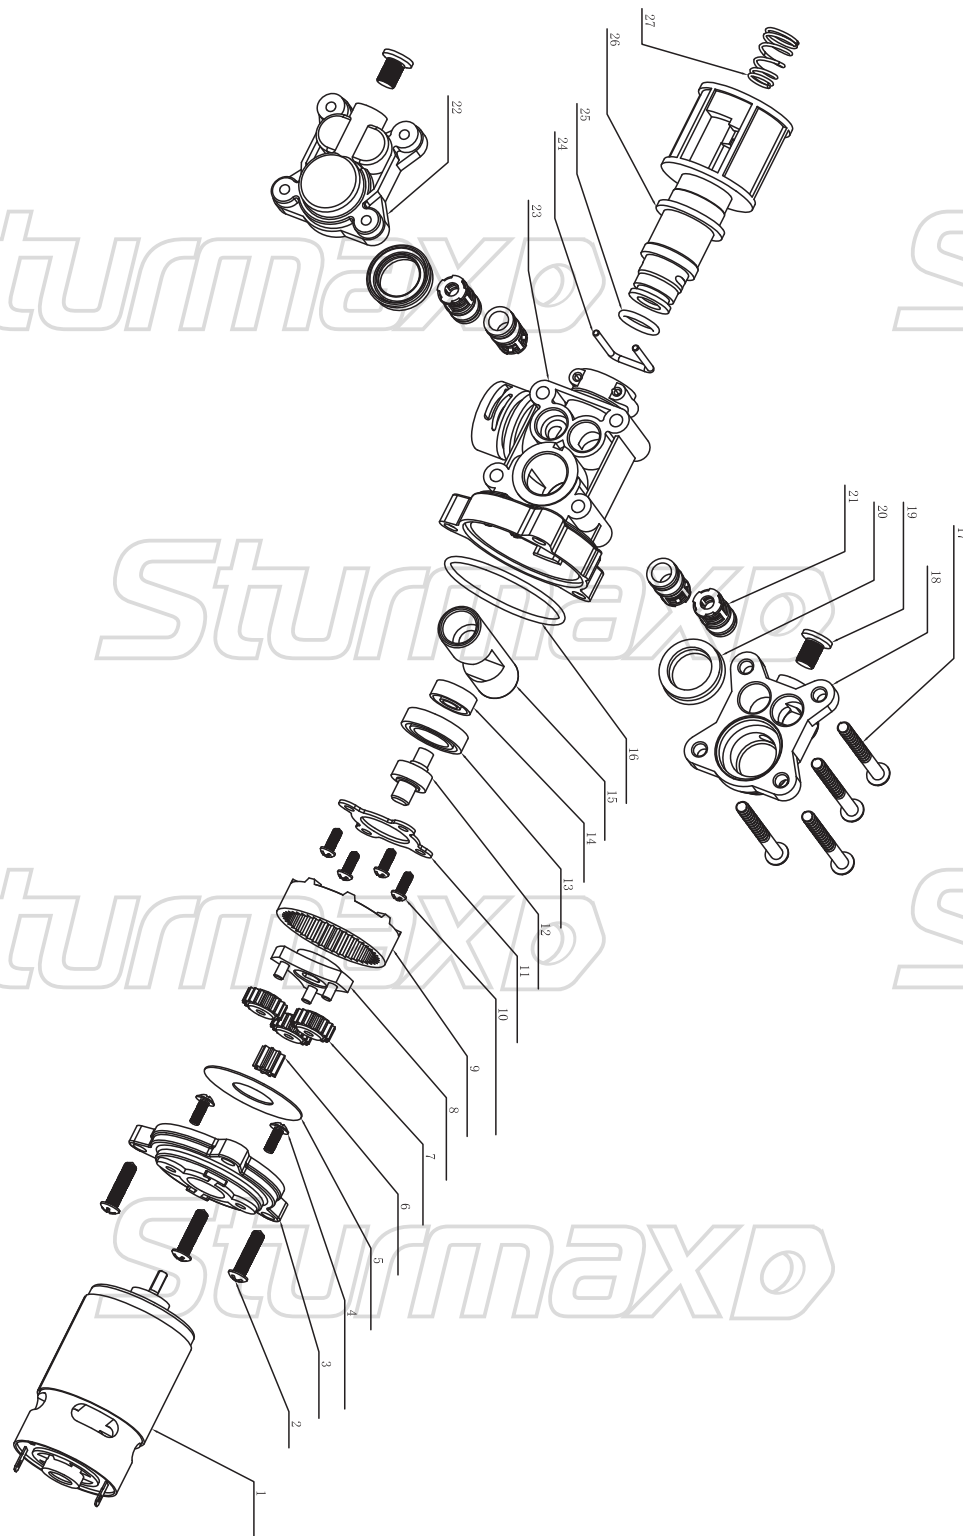

GEARS MOTOR AND PUMP FOR PWM9208

NO.	DESCRIPTION
1	MOTOR
2	SCREW ST4X16
3	GEARBOX
4	SCREWM3X8
5	WASHER
6	FIRST CENTER GEAR
7	PLANETARY GEAR
8	PLANETARY SURPORT
9	GEAR RING
10	SCREWST3X7
11	BEARING COVER
12	SHAFT
13	BEARING 6801
14	BEARING 605
15	PIN
16	O RING
17	SCREW ST4X40
18	RIGHT PUMP COVER
19	SCREWM6X8
20	SEAL
21	ONE-WAY VALVE
22	LEFT PUMP COVER
23	PUMP
24	U PIN
25	O RING
26	WATER OUTLET CONNECTOR
27	SPRING OF CONNECTOR

PWM9208-EX-UK260629-1