


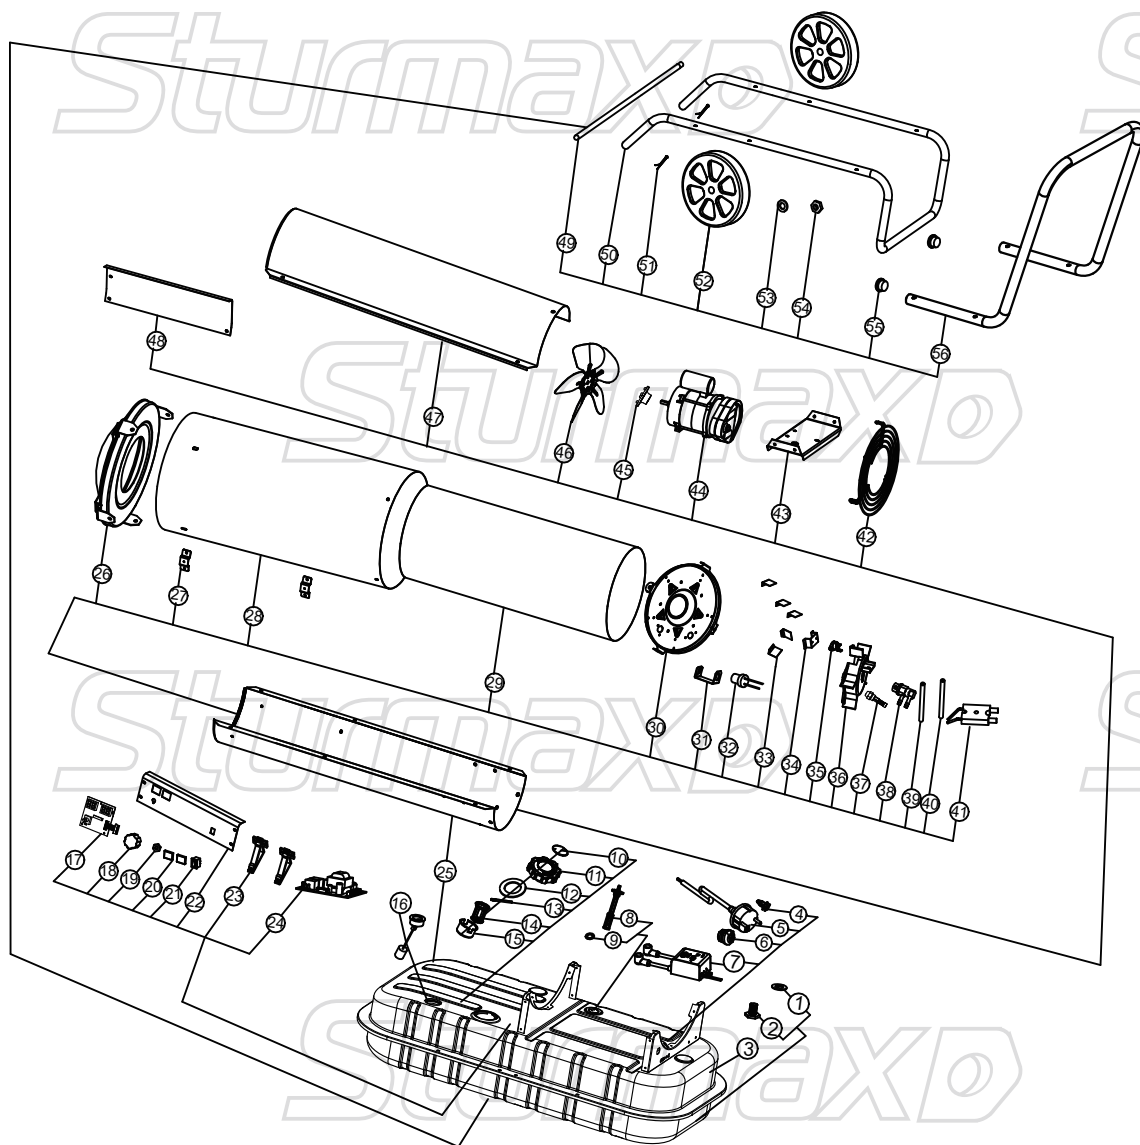

DHM5050

NO.	DESCRIPTION	NO.	DESCRIPTION
56	HANDLE	28	HEAT INSULATION CASING
55	STEEL PIPE PLUG	27	HEAT INSULATION CASING BRACKET
54	SCREW NUT	26	AIR OUTLET COVER ASSEMBLY
53	FLAT GASKET	25	BOTTOM CASING
52	WHEEL	24	DISPLAY PCB2
51	COTTER PIN	23	PCB SUPPORT
50	FEET PIPE	22	CONTROL PANEL
49	WHEEL AXLE	21	ON/OFF SWITCH
48	SIDE PLATE	20	DISPLAY WINDOW
47	TOP COVER	19	THERMOSTAT ADJUSTMENT KNOB NUT
46	FAN	18	THERMOSTAT KNOB
45	BLADE BASE	17	POWER PCB1
44	MOTOR ASSEMBLY	16	OIL LEVELER
43	MOTOR SUPPORT	15	OIL INLET FILTER HOLDER
42	AIR INLET GRILL	14	OIL INLET FILTER
41	IGNITION NEEDLE	13	TANK CAP SHAFT
40	OIL HOSE	12	SEALING RING-1
39	GAS HOSE	11	FUEL TANK CAP
38	NOZZLE ADAPTER	10	BREATH COVER
37	NOZZLE ASSEMBLY	9	SEALING RING-2
36	BURNER HEAD	8	FUEL FILTER
35	RE-SET THERMOSTAT	7	IGNITION TRANSFORMER
34	PHOTOCELL ASSEMBLY	6	CABLE FASTENER
33	AIR INLET BLADE	5	POWER CORD
32	PHOTOCELL ASSEMBLY	4	SUPPORT
31	PHOTOCELL ASSEMBLY BRACKET	3	FUEL TANK
30	BURNER SUPPORT PLATE	2	OIL DRAIN SCREW
29	COMBUSTION CHAMBER	1	OIL DRAIN SEAL RING