



ERM1120P

NO.	DESCRIPTION	NO.	DESCRIPTION
01	REAR HOUSING	39	LOCKED WRENCH
02	TAPPING SCREW	40	HEX SCREW;
03	STABLE POWER SPEED ADJUSTING ADAPTOR	41	SELF-LOCK SPRING
04	"CROSS" TAPPING SCREW ST4.2*16	42	SELF-LOCK PIN
05	BEARING BASE	43	INNER RETAINING RING
06	BRUSH HOLDER	44	SELF-LOCK PIN CAP
07	CARBON BRUSH	45	COLLET
08	BRUSH HOLDER CAP	46	COLLET NUT
09	ADJUSTING KNOB	47	TAPPING SCREW
10	CORD	48	THREAD POLE
11	CORD GUARD	49	LONG COMPRESSURE SPRING
12	NYLON NUT	50	LEFT POLE
13	SWITCH COVER	51	WINGED BOLT
14	TAPPING SCREW	52	ADJUSTING SCREW
15	SWITCH	53	T SHAPED PIN
16	STRAIN RELIEF	54	FLAT HEAD SCREW
17	TAPPING SCREW	55	HEX SCREW
18	MOTOR HOUSING	56	LIMITED BASE SPRING
19	STATOR	57	LIMITED BASE
20	BAFFLE PLATE	58	RIVET
21	TAPPING SCREW	59	WINGED BOLT
22	BALL BEARING 6000-2S	60	WINGED SCREW
23	AMATURE	61	WINGED BOLT SPRING
24	P.H. SCREW	62	OPEN SPRING PIN
25	BEARING RETAINING	63	BASE
26	BALL BEARING 6004-2RS	64	PLASTIC DISC
27	QUICK FEED SCREW	65	P.H. SCREW
28	SMALL COMPRESSION SPRING	66	"CROSS" GROOVE HEAD SCREW
29	QUICK FEED COPPER NUT	67	POSITIONNG POLE
30	THREE ANGLE COVER	68	BRACKET
31	P.H. SCREW	69	OPENING SPRING PIN
32	LEFT UP HANDLE	70	TAPPING SCREW
33	LEFT DOWN HANDLE	71	P.H. SCREW
34	STEP STEEL HARNESS	72	RIGHT UP HANDLE
35	HEAD CASE	73	RIGHT DOWN HANDLE
36	COLUMN STEEL HARNESS	74	TAPPING SCREW
37	HOOK SPRING	75	DUST SHIELD
38	TIGHTEN SCREW		

ST-UKW230919