



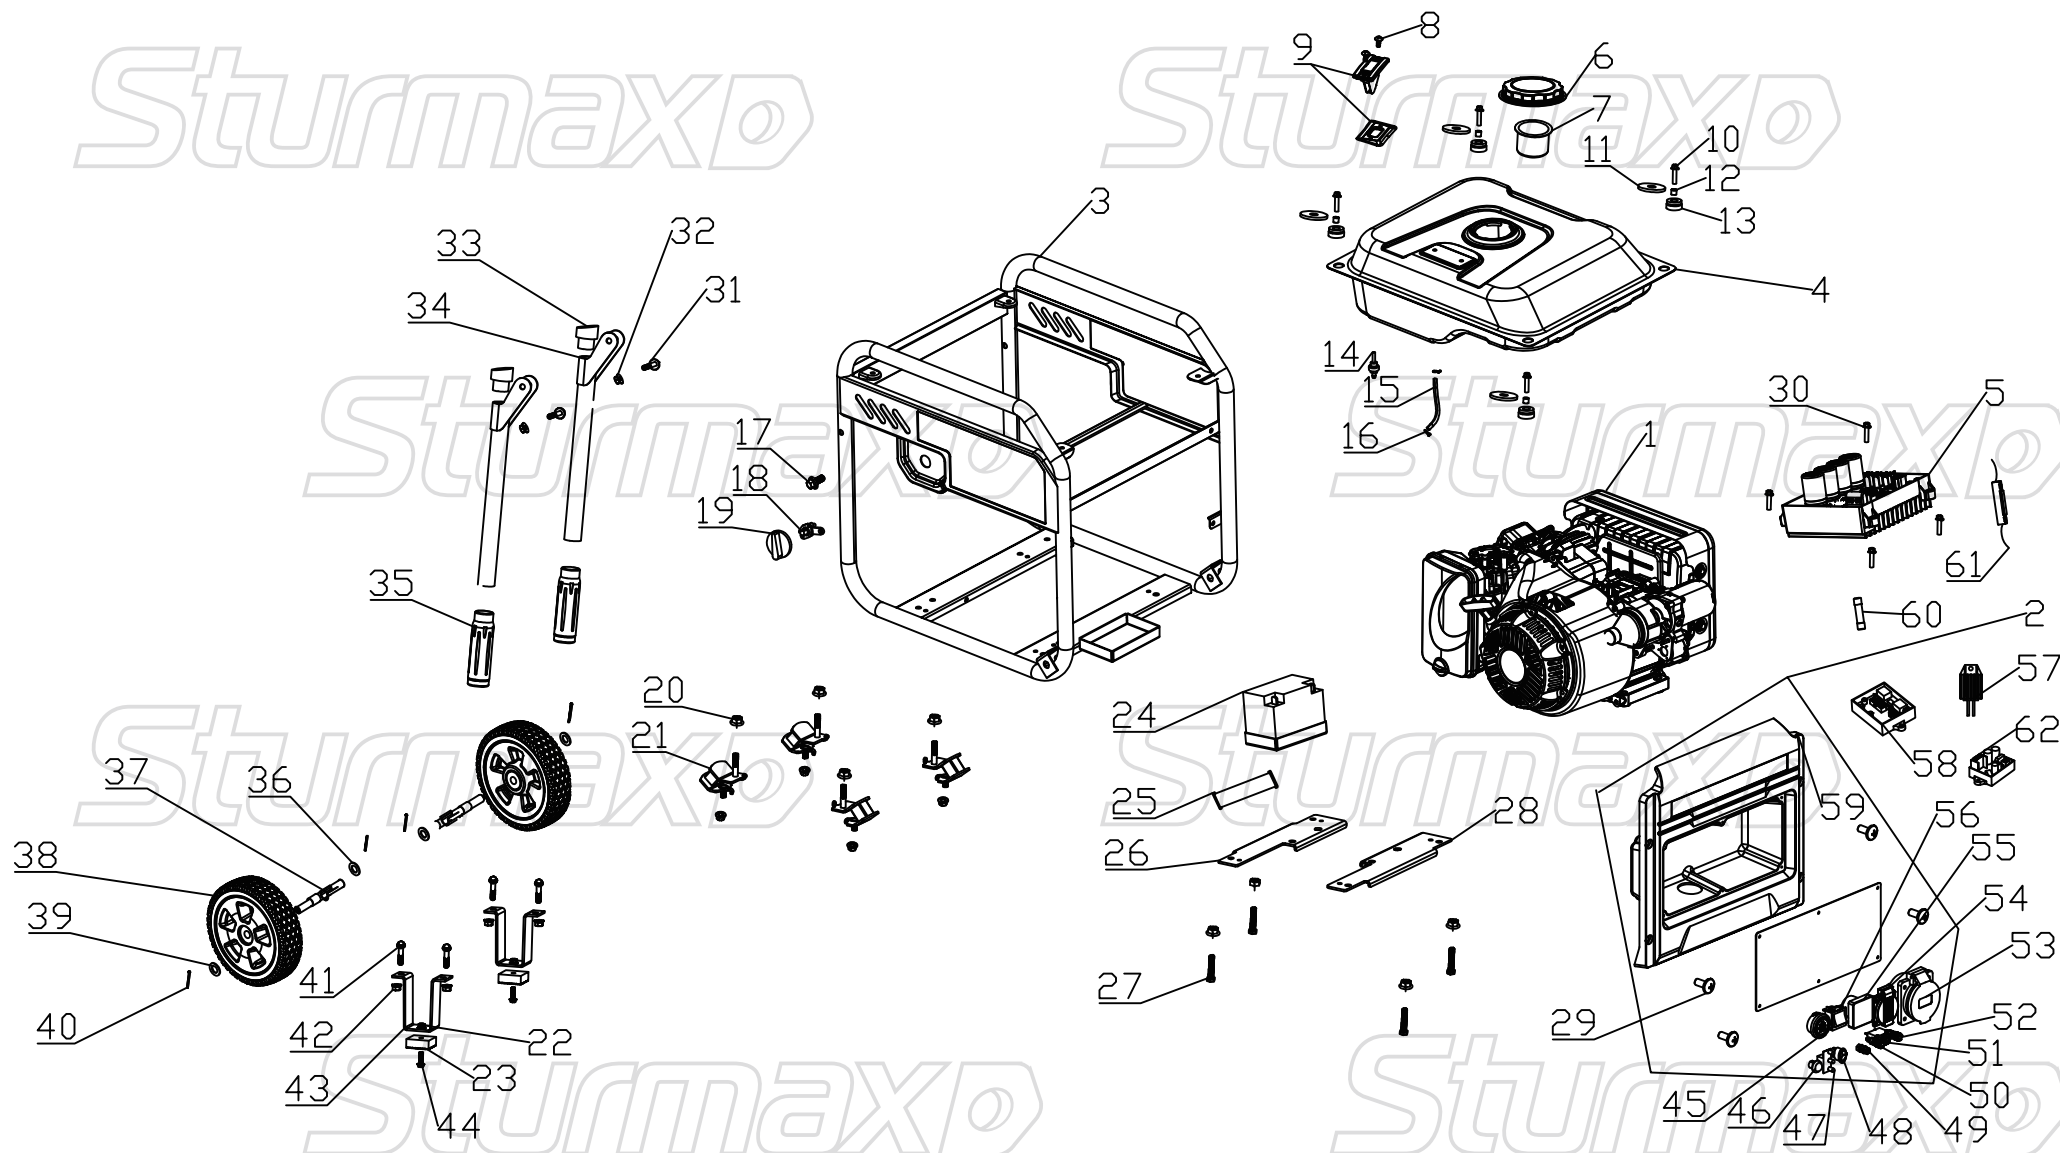

PGM8755IEG

NO.	DESCRIPTION	NO.	DESCRIPTION
1	ENGINE	32	HEXAGONAL FLANGE SURFACE NUT
2	PANEL	33	HANDLE PIPE SUPPORT
3	FRAME	34	HANDLE PIPE
4	FUEL TANK	35	HANDLE RUBBER SLEEVE
5	INVERTER	36	FLAT WASHER
6	FUEL TANK CAP	37	FRONT WHEEL AXLE
7	FUEL FILTER SCREEN	38	FRONT WHEEL
8	CROSS-SLOT COUNTERSUNK SCREWS	39	FLAT WASHER
9	OIL LEVEL INDICATOR COMPONENT	40	TORSION BAR
10	HEXAGONAL FLANGE FACE BOLTS - ENLARGED SERIES	41	HEXAGONAL FLANGE BOLT
11	FLAT WASHER	42	HEXAGONAL FLANGE NUT
12	O-RING	43	SUPPORT LEG
13	FUEL TANK SHOCK ABSORBER PAD	44	HEXAGONAL FLANGE BOLT
14	EXHAUST PIPE	45	CONTROL SWITCH (ONE-BUTTON START)
15	FUEL - OIL PIPE (SINGLE PIECE)	46	SWITCH ASSEMBLY
16	PIPE CLAMP	47	THREE-IN-ONE INDICATOR LIGHT
17	HEXAGONAL FLANGE BOLT	48	RESET SWITCH
18	OIL SWITCH ASSEMBLY	49	GROUNDING BOLT ASSEMBLY
19	OIL SWITCH HANDLE	50	TERMINAL POST
20	HEXAGONAL FLANGE NUT	51	DC PROTECTOR
21	FRAME SHOCK ABSORBER SEAT	52	TERMINAL POST
22	HEXAGONAL FLANGE NUT	53	SOCKET
23	SUPPORT RUBBER BLOCK	54	SOCKET
24	BATTERY	55	DIGITAL VOLTMETER
25	BATTERY CLAMP BAND	56	SWITCH ASSEMBLY
26	LEFT SIDE OF THE POWER SUPPORT PLATE	57	DC MODULE
27	HEXAGONAL FLANGE SURFACE BOLT	58	ONE-CLICK START CONTROL MODULE
28	RIGHT SIDE OF THE POWER SUPPORT PLATE	59	PANEL REAR COVER
29	CROSS SLOT PAN HEAD SCREW	60	FUSE
30	HEXAGONAL FLANGE SURFACE BOLT	61	FUSE SLEEVE
31	HEXAGONAL FLANGE SURFACE BOLT	62	CHARGER

PGM8755IEG-EX-UK260716PG

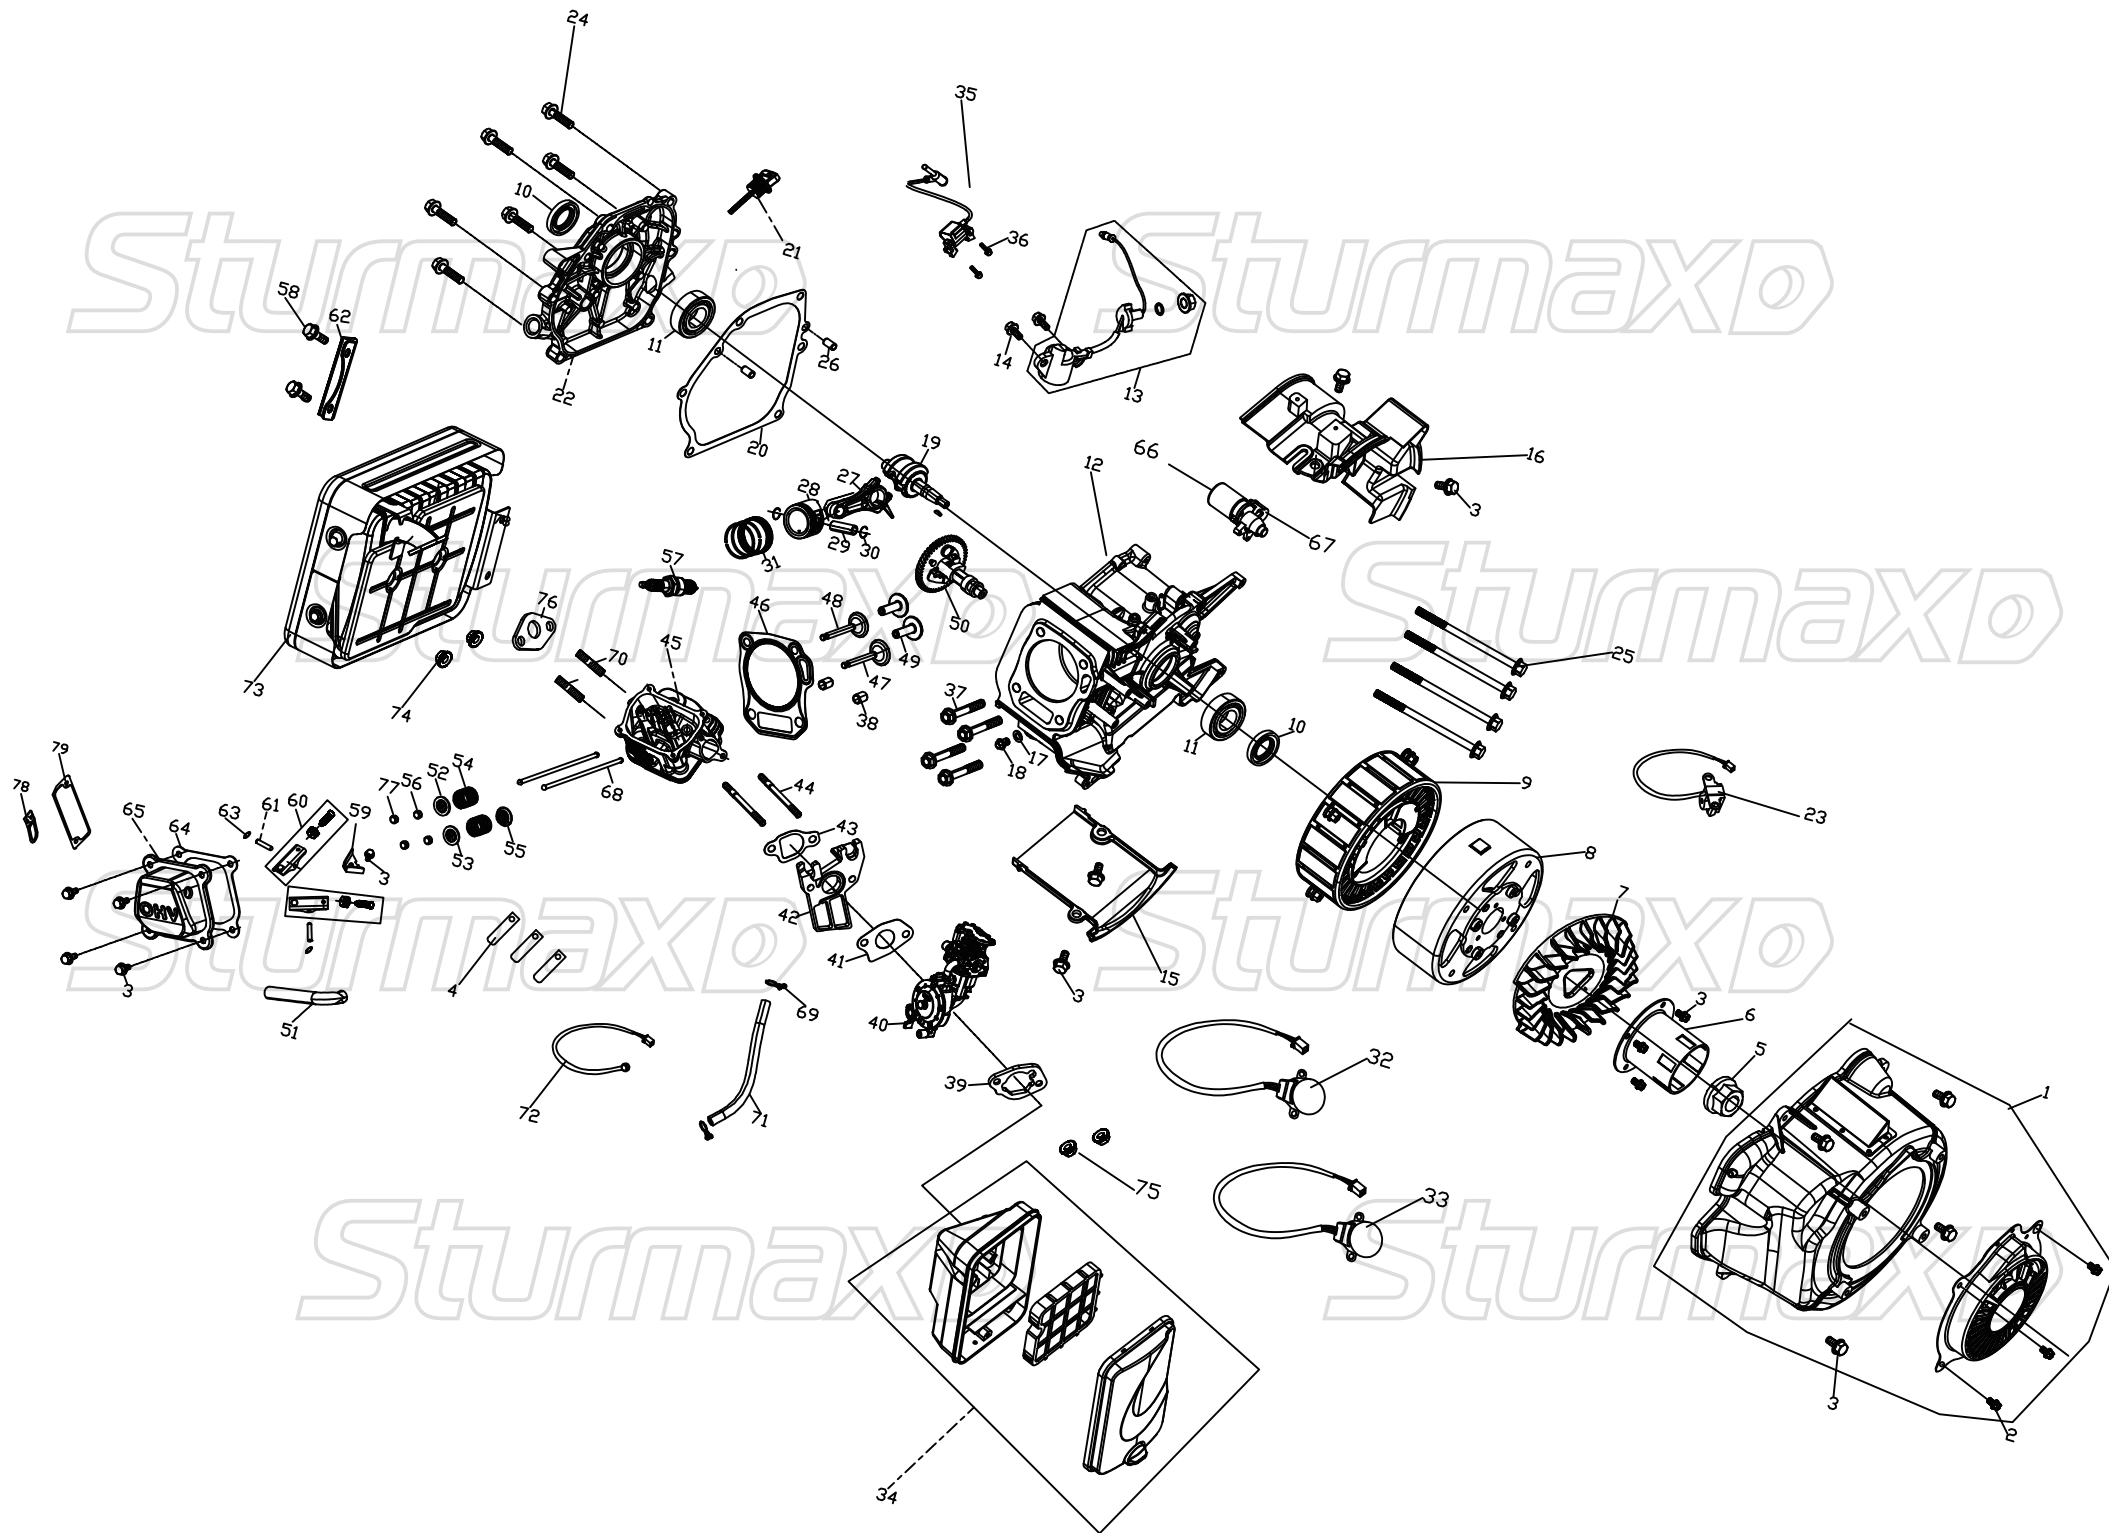

ENGINE FOR PGM8755IEG

NO.	DESCRIPTION	NO.	DESCRIPTION
1	HAND STARTER ASSEMBLY (STARTER UNIT)	41	CARBURETOR GASKET
2	HEX FLANGE BOLT	42	CARBURETOR HEAT SHIELD
3	HEX FLANGE BOLT	43	INTAKE PORT GASKET
4	TERMINAL CLAMP	44	DOUBLE-ENDED STUD
5	FLYWHEEL NUT	45	CYLINDER HEAD
6	STARTER CUP	46	CYLINDER HEAD GASKET
7	IMPELLER	47	INTAKE VALVE
8	MAGNETO ROTOR ASSEMBLY	48	EXHAUST VALVE
9	MAGNETO STATOR ASSEMBLY	49	VALVE LIFTER
10	OIL SEAL	50	CAMSHAFT ASSEMBLY
11	DEEP GROOVE BALL BEARING	51	EXHAUST PIPE
12	CRANKCASE HOUSING	52	INTAKE VALVE SPRING SEAT
13	OIL SENSOR	53	EXHAUST VALVE SPRING SEAT
14	HEX FLANGE BOLT	54	VALVE SPRING
15	LOWER GUARD	55	OIL DEFLECTOR CAP
16	CYLINDER HEAD AIR GUIDE	56	VALVE LOCK CLIP
17	DRAIN PLUG WASHER	57	SPARK PLUG
18	DRAIN PLUG	58	HEX FLANGE BOLT
19	CRANKSHAFT ASSEMBLY	59	ROCKER ARM SHAFT STOPPER
20	CRANKCASE GASKET	60	VALVE ROCKER ARM
21	OIL DIPSTICK	61	VALVE ROCKER ARM SHAFT
22	CRANKCASE COVER POWER	62	MUFFLER BRACKET
23	TRIGGER	63	SNAP RING
24	HEX FLANGE BOLT	64	CYLINDER HEAD COVER GASKET
25	STATOR BOLT	65	CYLINDER HEAD COVER ASSEMBLY
26	LOCATING PIN	66	STARTER MOTOR ASSEMBLY
27	CONNECTING ROD	67	STARTER RELAY
28	PISTON	68	VALVE LIFTER
29	PISTON PIN	69	FUEL LINE CLAMP
30	PISTON PIN RETAINING CLIP	70	DOUBLE-ENDED STUD
31	PISTON RING SET	71	FUEL LINE
32	STEPPER MOTOR	72	TEMPERATURE SENSOR
33	STEPPER MOTOR	73	MUFFLER COMPONENT
34	AIR FILTER	74	ALL-METAL HEX FLANGE LOCK NUT
35	IGNITION COIL	75	HEX FLANGE NUT
36	HEX FLANGE BOLT	76	EXHAUST PORT GASKET
37	CYLINDER HEAD BOLT	77	VALVE ADJUSTMENT CAP
38	LOCATING PIN	78	BREATHER FLAP STOP PLATE
39	AIR FILTER GASKET	79	BREATHER GROOVE GASKET
40	CARBURETOR PARTS		