



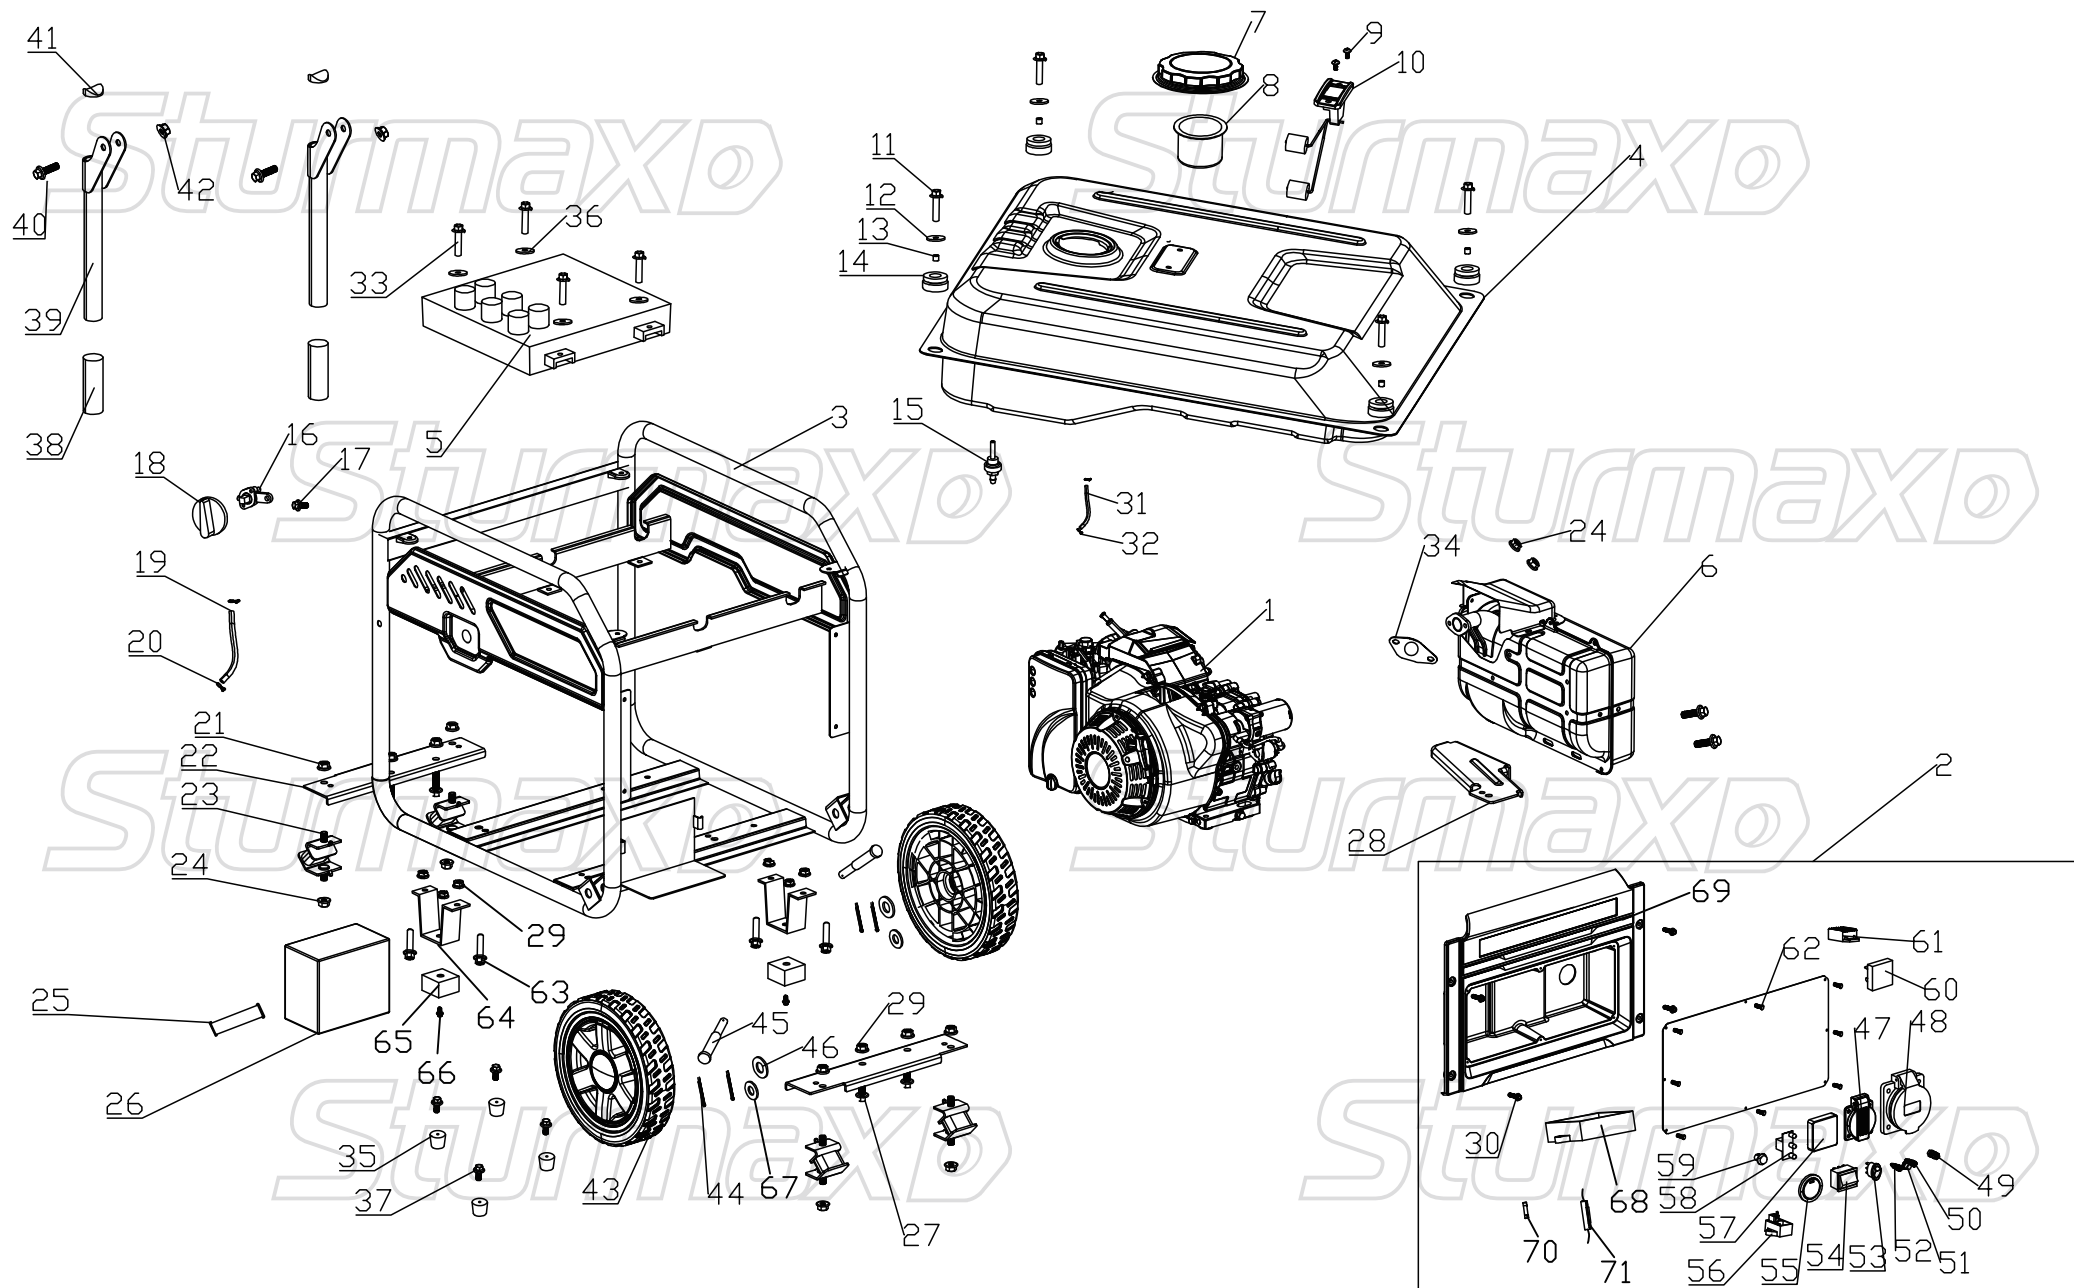

PGM8780IEG

NO.	DESCRIPTION	NO.	DESCRIPTION
1	ENGINE	37	HEXAGONAL FLANGE BOLT
2	PANEL	38	HANDLE RUBBER SLEEVE
3	FRAME	39	HANDLE PIPE
4	FUEL TANK	40	HEXAGONAL FLANGE BOLT
5	INVERTER	41	HANDLE PIPE SUPPORT
6	SILENCER COMPONENTS	42	FULL METAL HEXAGONAL FLANGE LOCKNUT
7	FUEL TANK COVER	43	FRONT WHEEL
8	FUEL FILTER	44	TORSION BAR
9	CROSS-SLOT COUNTERSUNK SCREWS	45	FRONT WHEEL AXLE
10	OIL LEVEL INDICATOR COMPONENTS	46	FLAT WASHER
11	HEXAGONAL FLANGE FACE BOLTS	47	POWER SOCKET ASSEMBLY
12	FLAT WASHERS	48	POWER SOCKET ASSEMBLY
13	BEARINGS	49	GROUND BOLT
14	FUEL TANK SHOCK ABSORBER RUBBER PADS	50	TERMINAL POST
15	OIL OUTLET NOZZLE	51	OVERLOAD PROTECTOR
16	OIL SWITCH	52	TERMINAL POST
17	HEXAGONAL FLANGE FACE BOLTS	53	SWITCH ASSEMBLY
18	OIL SWITCH HANDLE	54	SWITCH ASSEMBLY (ELECTRIC)
19	OIL PIPE	55	ONE-KEY START SWITCH BUTTON
20	PIPE CLAMP	56	CHARGER
21	HEXAGONAL FLANGE FACE NUT	57	DIGITAL VOLTMETER
22	POWER SUPPORT PLATE ASSEMBLY	58	INDICATOR LIGHT
23	FRAME SHOCK ABSORBER SEAT	59	RESET BUTTON
24	HEXAGONAL FLANGE FACE NUT	60	RECTIFIER BRIDGE
25	BATTERY STRAP	61	DC MODULE
26	BATTERY	62	CROSS-SLOT HEAD SCREW
27	HEXAGONAL FLANGE FACE BOLT	63	HEXAGONAL FLANGE FACE BOLT
28	SILENCER BRACKET	64	SUPPORT FOOT
29	HEXAGONAL FLANGE FACE NUT	65	SUPPORTING RUBBER BLOCK
30	HEXAGONAL FLANGE FACE BOLT	66	HEXAGONAL FLANGE FACE BOLT
31	OIL PIPE	67	FLAT WASHER
32	PIPE CLAMP	68	ONE-CLICK START CONTROL MODULE
33	HEXAGONAL FLANGE BOLT	69	PANEL REAR COVER SHELL
34	EXHAUST PORT SEALING GASKET	70	FUSE
35	FRAME SHOCK ABSORBER PAD	71	FUSE SHEATH

PGM8780IEG-EX-UK260716PG

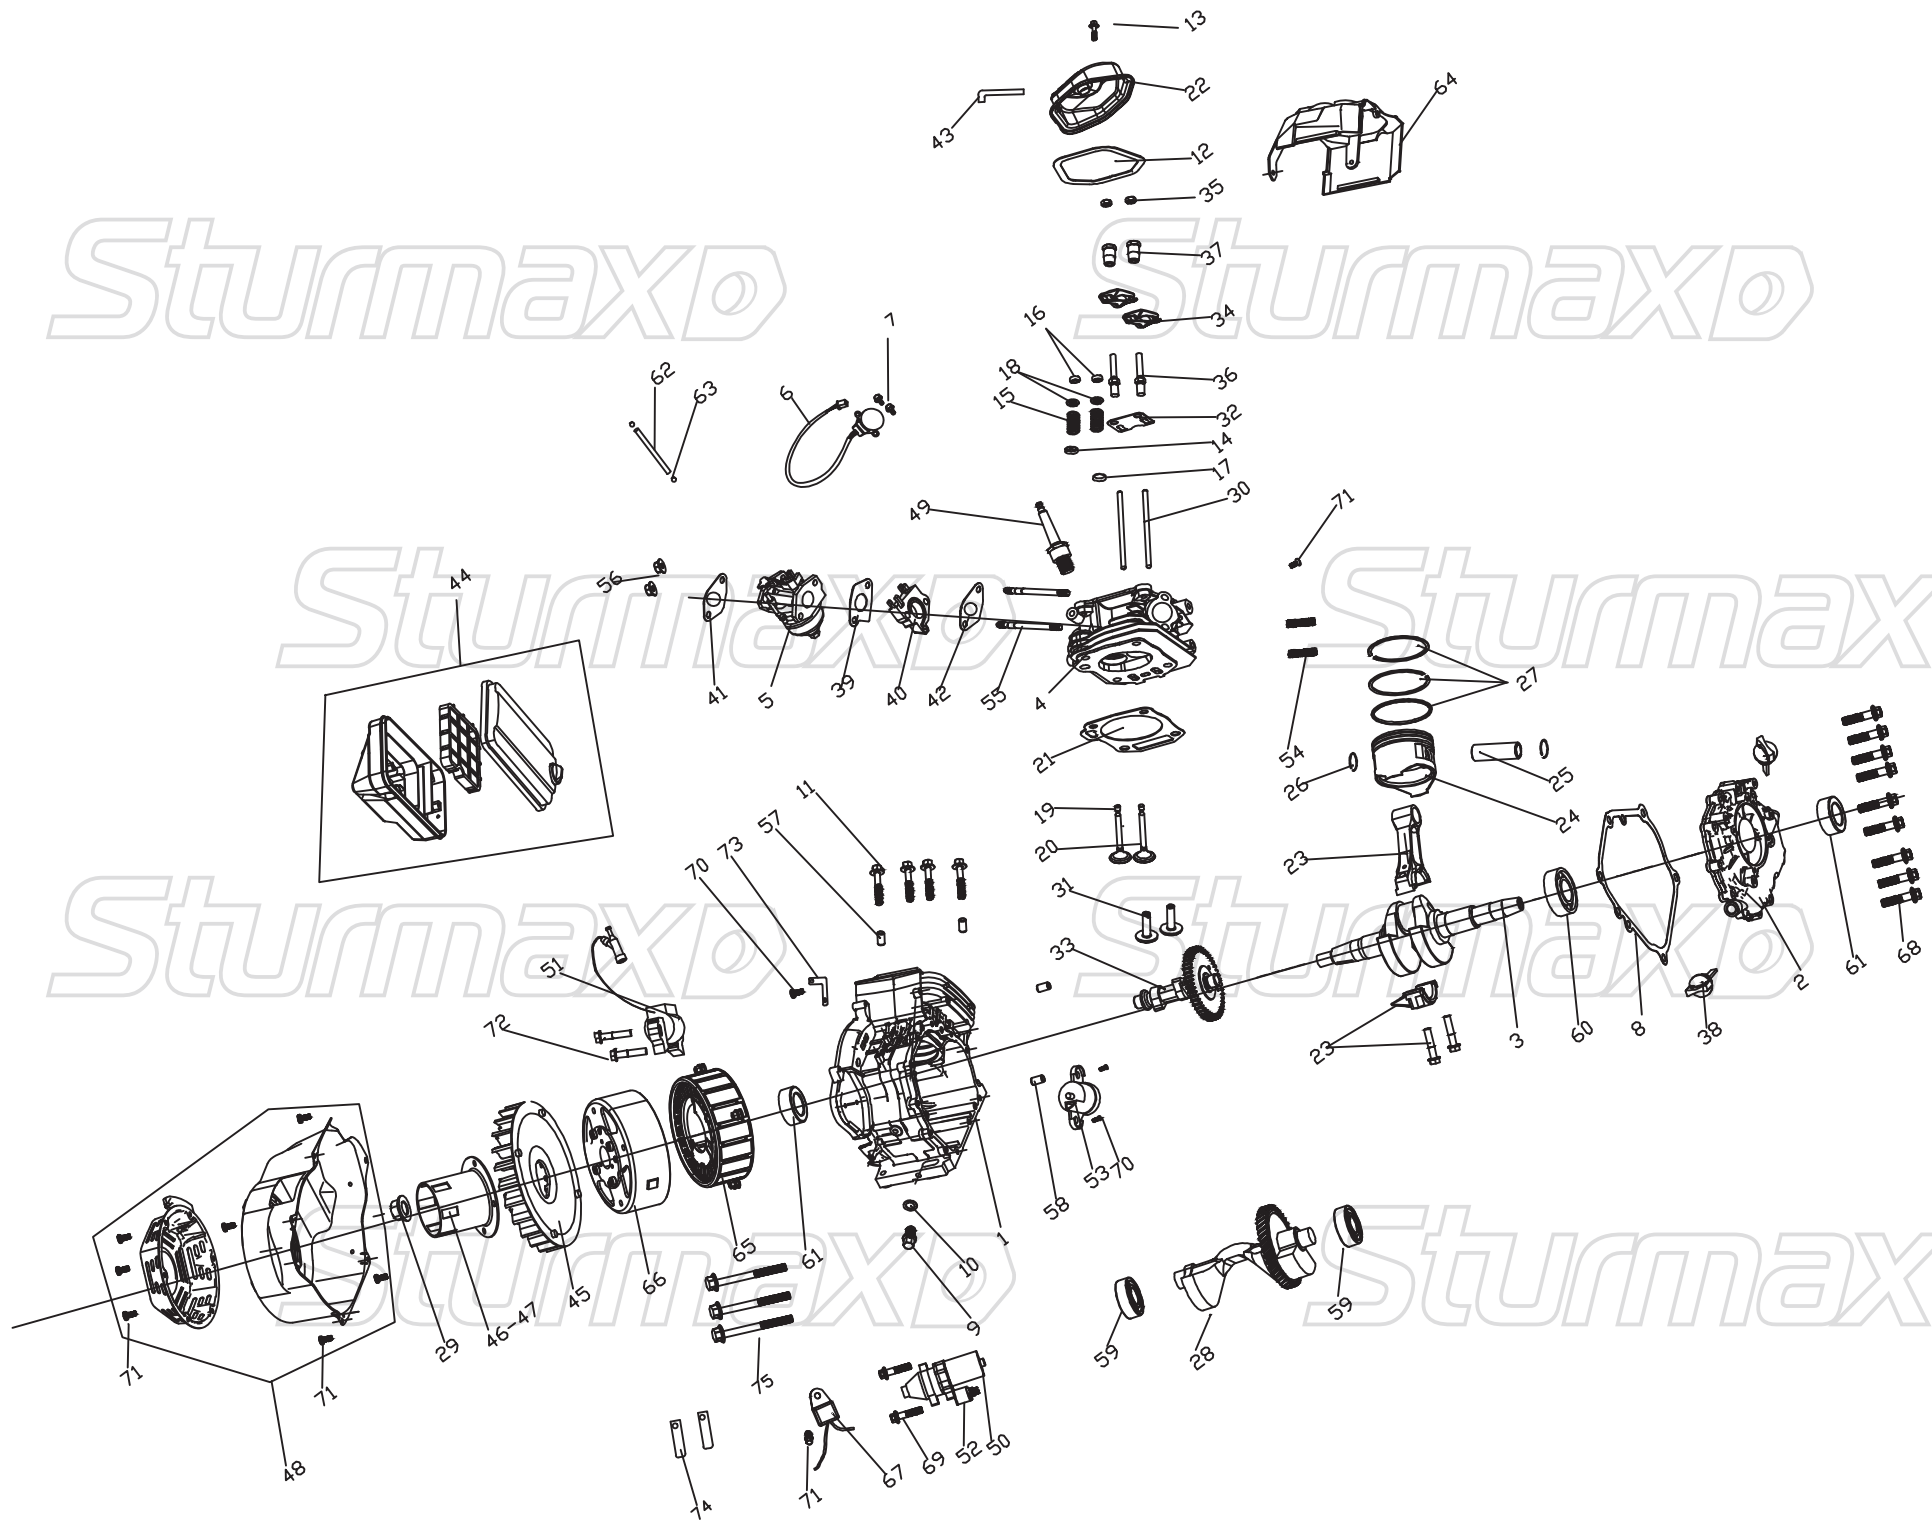

ENGINE FOR PGM8780IEG

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CRANKCASE BODY	39	CARBURETOR SEALING GASKET
2	CRANKCASE COVER POWER	40	CARBURETOR HEAT SHIELD
3	CRANKSHAFT COMPONENT	41	AIR FILTER SEALING GASKET
4	CYLINDER HEAD	42	INTAKE PORT SEALING GASKET
5	CARBURETOR COMPONENT	43	EXHAUST PIPE
6	STEPPER MOTOR	44	AIR FILTER
7	HEXAGONAL FLANGE FACE BOLT	45	IMPELLER
8	CRANKCASE SEALING GASKET	46	STARTING CUP
9	OIL DRAIN BOLT	47	STARTING CUP BASE
10	OIL DRAIN BOLT GASKET	48	HAND STARTING COMPONENT (STARTER ASSEMBLY)
11	CYLINDER HEAD BOLT	49	SPARK PLUG
12	CYLINDER HEAD COVER SEALING GASKET	50	STARTING MOTOR PART
13	CYLINDER HEAD COVER BOLT ASSEMBLY	51	IGNITION COIL
14	OIL DRAIN COVER	52	STARTING RELAY
15	VALVE SPRING	53	OIL SENSOR
16	VALVE ADJUSTMENT CAP	54	DOUBLE-ENDED SCREW
17	VALVE SPRING SEAT RING	55	DOUBLE-ENDED SCREW
18	EXHAUST VALVE SPRING SEAT	56	HEXAGONAL FLANGE NUT
19	INTAKE VALVE	57	RETAINING PIN
20	EXHAUST VALVE	58	RETAINING PIN
21	CYLINDER HEAD SEALING GASKET	59	SPHERICAL ROLLER BEARING
22	CYLINDER HEAD COVER ASSEMBLY	60	SPHERICAL ROLLER BEARING
23	CONNECTING ROD	61	OIL SEAL
24	PISTON	62	OIL PIPE
25	PISTON PIN	63	OIL PIPE CLAMP
26	PISTON PIN RETAINING RING	64	CYLINDER HEAD AIR INTAKE COVER
27	PISTON RING ASSEMBLY	65	MAGNETIC MOTOR STATOR ASSEMBLY
28	BALANCE SHAFT	66	MAGNETIC MOTOR ROTOR ASSEMBLY
29	FLYWHEEL NUT	67	TRIGGER
30	VALVE TAPPET	68	HEXAGONAL FLANGE SURFACE BOLT
31	VALVE TAPPET PILLAR	69	HEXAGONAL FLANGE SURFACE BOLT
32	TAPPET LIMIT PLATE ASSEMBLY	70	HEXAGONAL FLANGE SURFACE BOLT
33	CAMSHAFT COMPONENT	71	HEXAGONAL FLANGE SURFACE BOLT
34	VALVE ROCKER ARM	72	HEXAGONAL FLANGE SURFACE BOLT HEAD
35	VALVE LOCK NUT	73	SPLICE PLATE
36	ROCKER ARM BOLT	74	CLAMP CONNECTOR
37	VALVE ADJUSTMENT NUT	75	HEXAGONAL FLANGE BOLT
38	OIL DIPSTICK		

PGM8780IEG-EX-UK260716PG