



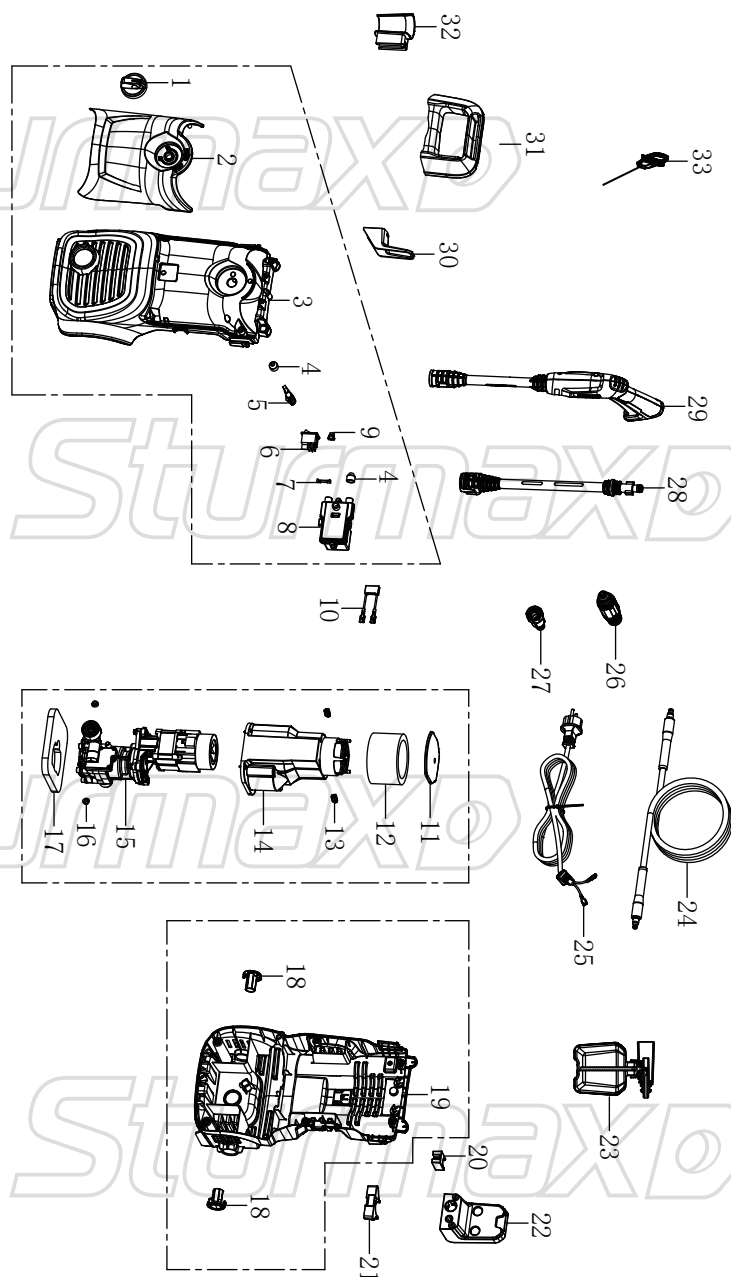

PWM9211

NO.	DESCRIPTION
1	KNOB
2	DECORATIVE STRIP
3	FRONT HOUSING
4	WATERPROOF CAP
5	SHIFT LEVER
6	SWITCH
7	SPRING PIECE
8	SWITCH BOX
9	WATERPROOF STOPPER
10	CAPACITOR
11	CAP
12	FILTER SCREEN 1
13	WATERPROOF SHEATH
14	MOTOR COVER
15	MOTOR+PUMP ASSEMBLY
16	VIBRATION DAMPING PAD
17	FILTER SCREEN 2
18	HOLE COVER
19	HOUSING
20	GUN BARREL HOLDER
21	SOAP BOTTLE HOLDER
22	HIGH PRESSURE HOSE HOOK
23	SOAP BOTTLE
24	HIGH PRESSURE HOSE
25	POWER CORD
26	NOZZLE
27	WATER INLET CONNECTOR
28	GUN BARREL
29	TRIGGER GUN
30	CABLE HOOK
31	HANDLE
32	GUN HOLDER
33	NOZZLE CLEANING NEEDLE

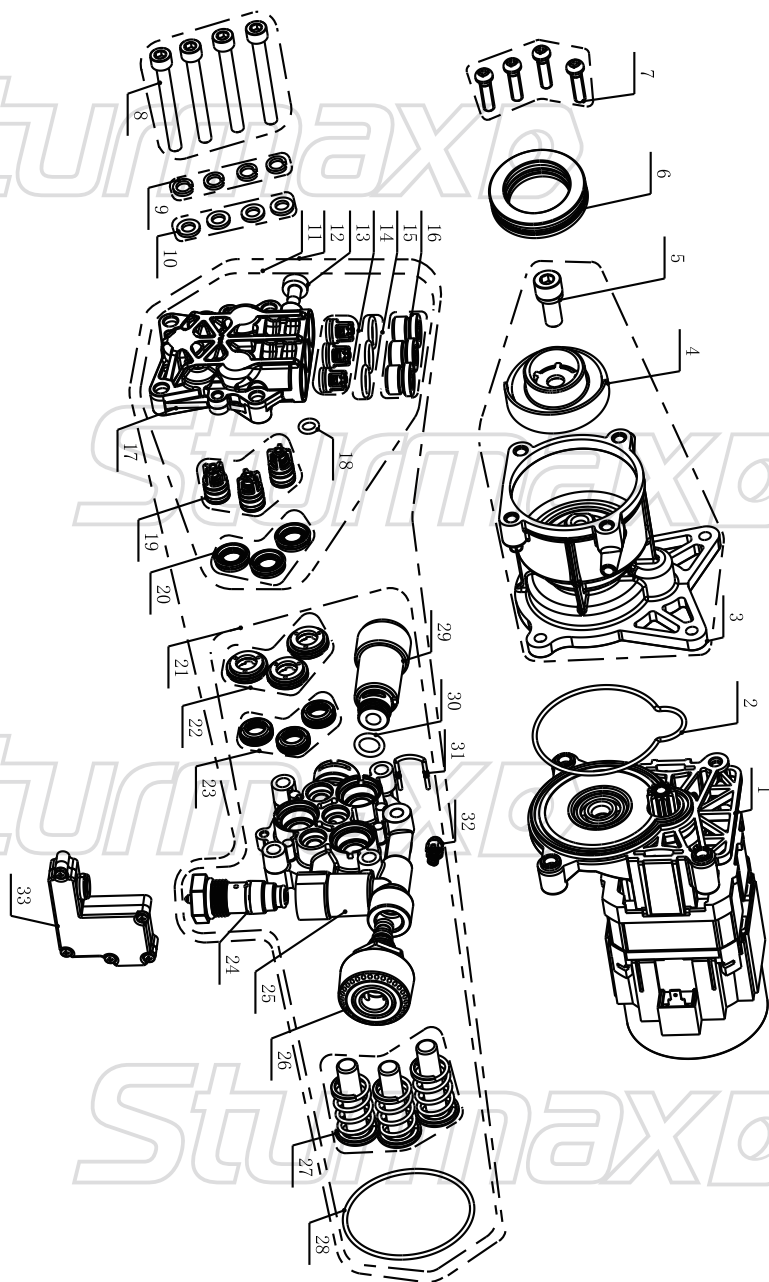

PUMP FOR PWM9211

NO.	DESCRIPTION
1	MOTOR ASSEMBLY
2	SEALING RING
3	CONNECTING SEAT ASSEMBLY
4	WOBBLE PLATE
5	BOLT M8X20
6	THRUST BEARING 51106
7	SCREW ST5.5X20
8	BOLT M6X55
9	Φ6 SPRING WASHER
10	Φ6 WASHER
11	PUMP HEAD COVER ASSEMBLY
12	PUMP HEAD ASSEMBLY
13	BOLT M6X8
14	OULET VALVE ASSEMBLY
15	O-RING
16	CHECK VALVE NUT
17	PUMP HEAD COVER
18	O-RING
19	INLET VALVE ASSEMBLY
20	WATER SEAL
21	PUMP ASSEMBLY
22	SEALING BASE
23	OIL SEAL
24	BYPASSING VALVE ASSEMBLY
25	PUMP BODY
26	WATER OUTLET JOINT
27	PLUNGER ASSEMBLY
28	O-RING
29	WATER INLET JOINT
30	O-RING
31	U-PIN
32	TOTAL VALVE ASSEMBLY
33	MICRO SWITCH ASSEMBLY