



BC-1206X

| NO. | DESCRIPTION |
|-----|--------------------------------|
| 1 | BASE PLATE |
| 2 | POWER CABLE & PLUG |
| 3 | CHARGING CABLE & CLAMP (RED) |
| 4 | CHARGING CABLE & CLAMP (BLACK) |
| 5 | PCB 1 |
| 6 | RADIATOR |
| 7 | PCB 2 |
| 8 | SEAT FOR CURRENT METER |
| 9 | FUSE SEAT |
| 10 | FUSE |
| 11 | CURRENT METER |
| 12 | MACHINE COVER |
| 13 | HANDLE BUTTON |
| 14 | HANDLE |
| 15 | SCREW |
| 16 | VOLTAGE CHANGE SWITCH |
| 17 | CURRENT CHANGE SWITCH |
| 18 | SCREW |
| 19 | SLEEVE |
| 20 | DIFFLUENT RESISTANCE |
| 21 | SCREW |
| 22 | SPRING WASHER |
| 23 | FLAT WASHER |
| 24 | NUT |
| 25 | TRANSFORMER |
| 26 | OVER HEAT PROTECTOR |
| 27 | ANTI-PULL BLOCK |
| 28 | RECTIFIER |
| 101 | Transformer assembly(5+25+26) |
| 102 | RECTIFIER ASSEMBLY(7+28) |

BM20121019-01