



# GC-9945BE

NO.	DESCRIPTION	NO.	DESCRIPTION
1	BOLT M5*14	40	OIL DEFLECTOR
2	STARTER ASSEMBLY	41	BRAKE RIBBON
3	COVERSTARTER	42	SCREW ST4X8
4	STARTER GRIP	43	CHAIN GUIDE PAD
5	ROPESTARTER $\Phi 3 \times 950$	44	TENTIONER COVER
6	GASKETHOLES THREE	45	BRAKE SPRING COVER
7	SPRING	46	GASKET $\Phi 6 \times 18$
8	REELSTARTER	47	RUBBER ANTI-VIBRATION
9	SPRING	48	SNAP SPRING $\Phi 5$
10	STARTEREASY	49	TENTIONER PIN
11	GASKET $\Phi 5.4 \times \Phi 16 \times 1.8$	50	SHAP SPRING
12	SCREW ST4.8x14	51	SDJUSTING SCREW
13	DIVERSION	52	BRAKE TORSIONAL SPRING
14	SCREW ST5x12	53	FRONT FENDER PIN
15	ENGINE COMPONENT	54	GASKET 5X20X1.5
16	OILER ASSEMBLY	55	LIMIT PIN
17	FUEL CAP ASSEMBLY	56	FRONT FENDER
18	FUEL CAP	57	SNAP SPRING $\Phi 4$
19	SEAL GASKET	58	FRONT FENDER PIN SETS
20	TRIGGER PIN 6x25	59	FRONT FENDER PIN
21	TRIGGER SPRING	60	MAIN LOCK
22	TRIGGER	61	LOCK
23	SCREW ST5x20	62	PIN 3X9
24	FUEL TANK	63	BRAKE SPRING BLOCK
25	OIL BUBBLE	64	BRAKE SPRING
26	GRIP COVER	65	BRAKE SPRING
27	TRIGGER CONTROL	67	AIR FILTER NUT
28	BOLT M5*12	68	AIR FILTER COVER
29	DUST CAP	69	CHAIN PAD
30	TANK ANTI-VIBRATION	70	TAPER SPRING
31	OIL RETURN PIPE 2.3*4*80	71	TAPER SPRING HOLDER
32	SUCTION PIPE 2.3*4*110	72	SCREW M8
33	BALANCER SEAT	73	CASE COVER
34	BALANCER	74	FRONT HANDLE
35	FUEL FILTER	75	SAW CHAIN
36	FUEL PIPE	76	GUIDE BAR
38	BRAKE ASSEMBLY	77	GUIDE BAR COVER
39	Brake Plate		



## ENGINE PARTS OF GC-9945BE

NO.	DESCRIPTION	NO.	DESCRIPTION
1	INNER GUIDE	44	INSULATOR BRANKET
2	BOLT M5*12	45	WASHER,INSULATOR BRANKET
3	INSULATOR	46	GASKET,INSULATOR BRANKET
4	GASKET, INSULATOR	47	MANIFOLD
5	CYLINDER	48	CARBURETOR
6	SPARK PLUG	49	THROTTLE PULL ROD
7	BOLT M5*20	50	INTAKE MANIFOLD
8	SQUARE SCREW M5*85	51	BOLT M5*50
9	GASKET,MUFFLER	52	ANTI-VIBRATION,INTAKE MANIFOLD
10	MUFFLER	53	SCREW GM5-M5X30
11	MUFFLER CAP	54	GASKET,AIR-FILTER
12	NUT M5	55	AIR-FILTER
13	GASKET, CYLINDER	56	BOLT M4*14
14	PISTON RING	57	HOOK
15	PISTON	58	ANTIVIBRATION,HOOK
16	PISTON PIN	59	ANTIVIBRATION SET,HOOK
17	SNAP RING	60	OIL SEAL $\phi 15 \times \phi 28 \times 5$
18	WASHER	61	COVER,OIL PUMP
19	NEEDLE BEARING	62	BOLT M4*12
20	CRANKSHAFT	63	WORM
21	KET	64	NEEDLE BEARING
22	COIL	65	CLUTCH DRUM
23	IGNITION COIL	66	GASKET,CLUTCH
24	GASKET,OILCAP	67	CLUTCH SPRING
25	OIL CAP	68	CLUTCH SHOE
26	HOOK	69	BOSS,CLUTCH
27	NET M8	70	BOLT M4*14
28	ROTOR	71	OIL PUMP
29	BOLT M5*12	72	NOZZLE
30	COVER,OIL SEAL	73	OIL PIPE
31	OIL SEAL $\phi 15 \times \phi 35 \times 5$	74	OIL FILTER
32	BOLT M5*30	75	PLATE
33	RETAINER RING $\phi 35$	76	GUIDE
34	ANTI-VIBRATION,LEFT CRANKCASE	77	SCREW AYM8-M8X28
35	LEFT CRANKCASE	78	SPONGE FILTER
36	BEARING 6202	79	SNAP RING
37	STOP SWITCH	80	WENT MOUTH
38	EARTH TAG	81	BUMPER SPIKE
39	SWITCH CAP	82	INSULATION PIPE
40	PIN	83	NEGATIVE PIPE
41	GASKET,CRANKCASE	84	NOZZLE DIP
42	RIGHT CRANKCASE	85	ELBOW
43	DUSTPROOF RUBBER		