



## GT-3510MX

NO.	DESCRIPTION	NO.	DESCRIPTION
1	INDUCTOR	44	TAPPING SCREW ST4.2X16
2	SCREW M4X12	45	TAPPING SCREW ST4.8X60
3	SPRING WASHER 4	46	COUNTERWEIGHT BOX
4	PLAIN WASHER 4 X8 X0.5	47	PLAIN WASHER 4 X20 X1
5	SCREW ST4.8X55	48	TAPPING SCREW ST4.2X16
6	MOTOR REAR COVER	49	CORD ANCHORAGE
7	CARBON BRUSH	50	COVER OF WHEEL
8	BRUSH HOLDES	51	WHEEL
9	BRUSH BOX	52	NUT M8
10	BEARING 627	53	BASE
11	STATOR	54	HEIGHT LIMITER
12	WIND FENDER	55	PLAIN WASHER 4 X20 X1
13	ROTOR	56	SCREW ST4.2X16
14	BEARING 629	57	COUNTERWEIGHT BOX
15	NUT M6	58	COUNTERWEIGHT PRESSURE BOARD
16	MOTOR BASE	59	TAPPING SCREW ST4.2X16
17	PLAIN WASHER 6 X12 X1	60	TAPPING SCREW ST4.2X16
18	BOLT M6 X 40	61	BOTTOM PUSH BAR
19	BUSH 8 X12 X10	62	NIP FOR CABLE
20	CIRCLIP FOR SHAFT	63	STOPPER
21	BIG GEAR	64	BOLT M8 X 45
22	TAPPING SCREW ST4.2X10	65	PUSH BAR KNOB
23	PLAIN WASHER 4 X12 X1	66	CABLE HOOK
24	BEARING 6002	67	TOP PUSH BAR
25	COVER OF BEARING	68	SWITCH BOX
26	SCREW ST4.2X16	68.1	SWITCH BUTTON
27	WOODRUFF KEY 4 X5 X13	68.2	SPRING
28	BLADE FIXER	68.3	SWITCH BOX RIGHT COVER
29	BLADE	68.4	TURN WHEEL
30	BLADE BOLT	68.5	SPRING
31	SPANNER	68.6	HANDLEBAR
32	BOTTOM GRASS BOX	68.7	CAPACITOR
33	TAPPING SCREW ST4.2X16	68.8	SWITCH
34	PATCH	68.9	OVER LOADING PROTECTOR
35	TOP GRASS BOX	68.10	SWITCH BOX DOWN AND LEFT ENCLOSURE
36	TURNING AXLE	68.11	TAPPING SCREW ST4.2X16
37	TORQUE SPRING	68.12	SWITCH BOX LEFT ENCLOSURE
38	LABEL	68.13	POWER CORD AND PLUG
39	BACK GUARD	68.14	CABLE
40	PLAIN WASHER 4 X20 X1	68.15	CORD GUARD
41	UNIDIRECTIONAL TAPPING SCREW ST4.2X16	68.16	CORD PRESSURE BOARD
42	WARNING LABEL	68.17	WASHER
43	COVER		