

PW-9214BE

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|-----------------------------|-----|--------------------------|
| 1 | DECORATIVE STRIP | 16 | CABLE HOOK |
| 2 | FRONT COVER | 17 | UPPER MOTOR COVER |
| 3 | GUN HOLDER | 18 | CABLE COMPONENT |
| 4 | HANDLE | 19 | SWITCH |
| 5 | HANDLE COVER | 20 | MOTOR JUNCTION BOX CAP |
| 6 | WHEEL | 21 | ON/OF SWITCH KNOB |
| 7 | SCREW 4.8X20 | 22 | SCREW 2.9X13 |
| 8 | SPRAY GUN LEFT FIXED SHELF | 23 | SWITCH TRANSMISSION AXLE |
| 9 | SPRAY GUN RIGHT FIXED SHELF | 24 | CAPACITOR |
| 10 | WATER INLET QUICK CONNECTOR | 25 | WATER OUTLET LOCK BUTTON |
| 11 | BACK COVER | 26 | SPRAY GUN |
| 12 | WHEEL GASKET | 27 | TRIGGER GUN |
| 13 | WHEEL CAP | 28 | HIGH PRESSURE HOSE |
| 14 | BOTTOM MOTOR COVER | | |
| 15 | MOTOR & PUMP SET | | |

UK-BM20200604

BauMaster

XBauMaster



MOTOR AND PUMP FOR PW-9214BE

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|-------------------------|-----|--------------------------------------|
| 1 | BRUSH MOTOR | 22 | WATER SEAL |
| 2 | CONNECTING SEAT | 23 | SCREW M6*8 |
| 3 | RUBBER MAT | 24N | PUMP HEAD |
| 4 | OIL SEAL | 25 | PLUG COMPONENT |
| 5 | BEARING 629ZZ | 26 | WATER OUTLET ONE-WAY VALVE COMPONENT |
| 6 | GEAR SHAFT | 27N | O-RING |
| 7 | GEAR | 28 | WATER INLET ONE-WAY VALVE COMPONENT |
| 8 | BEARING 6302 | 29 | SWITCH BOX LOWER COVER |
| 9 | BEARING SEAT | 30 | PUSH ROD |
| 10 | SPRING WASHERS Ø8 | 31 | SCREW ST2.9*13 |
| 11 | SCREW M8*20 | 32 | SWITCH BOX TOP COVER |
| 12 | BALL BEARING 51106 | 33 | SWITCH COMPONENT |
| 13 | PISTON CLIP | 34 | SCREW M6*55 |
| 14 | PISTON | 35 | SPRING WASHERS Ø6 |
| 15N | PIN | 36N | OVERFLOW VALVE COMPONENT |
| 16 | PISTON SPRING | 37 | PIN |
| 17N | PUMP | 38 | SCREW ST5.5*20 |
| 18 | O-RING | 39 | O-RING |
| 19 | MIDDLE RING | 40 | Water Inlet |
| 20 | OIL SEAL | 41 | O-Ring |
| 21N | ONE-WAY VALVE COMPONENT | 42 | Tower spring seat |
| | | | |

UK-BM20200604

