



## SG-9615

NO.	DESCRIPTION	NO.	DESCRIPTION
1	JET SPANNER	25	ADJUST KNOB
2	SPRAY WASHER	26	ADJUST ROD
3	SPRAY NOZZLE	27	RUBBER HEAD
4	SPRAY HEAD	28	INNER WIRE
5	SPRING	29	REAR COVER
6	CHECK VALVE	30	POWER CORD AND PLUG
7	O RING	31	CORD GUARD
8	PISTON BUSH	32	CORD CLIP
9	O RING	33	TAPPING SCREW
10	PISTON SPRING	34	FRONT COVER
11	PISTON ROD	35	SWITCH
12	SPRAY COVER	36	BUTTON
13	RIVET	37	SUCKER
14	SILICON STEEL SHEET	38	BASE
15	BASE OF IRON-CORE	39	COLUMN PIN
16	PLATE SPRING	40	PUMP BASE
17	BOBBIN	41	SEALED WASHER
18	PIN	42	CONTAINER
19	PIN GUARD	43	LABEL
20	RIVET	44	TAPPING SCREW
21	I TYPE SILICON STEEL SHEET	45	HOUSING ASSEMBLY
23	DAMPING FIN	46	SPRAY HEAD ASSEMBLY
24	RIVET	47	BOBBIN ASSEMBLY

UK-BM20151116