


БМ-19080

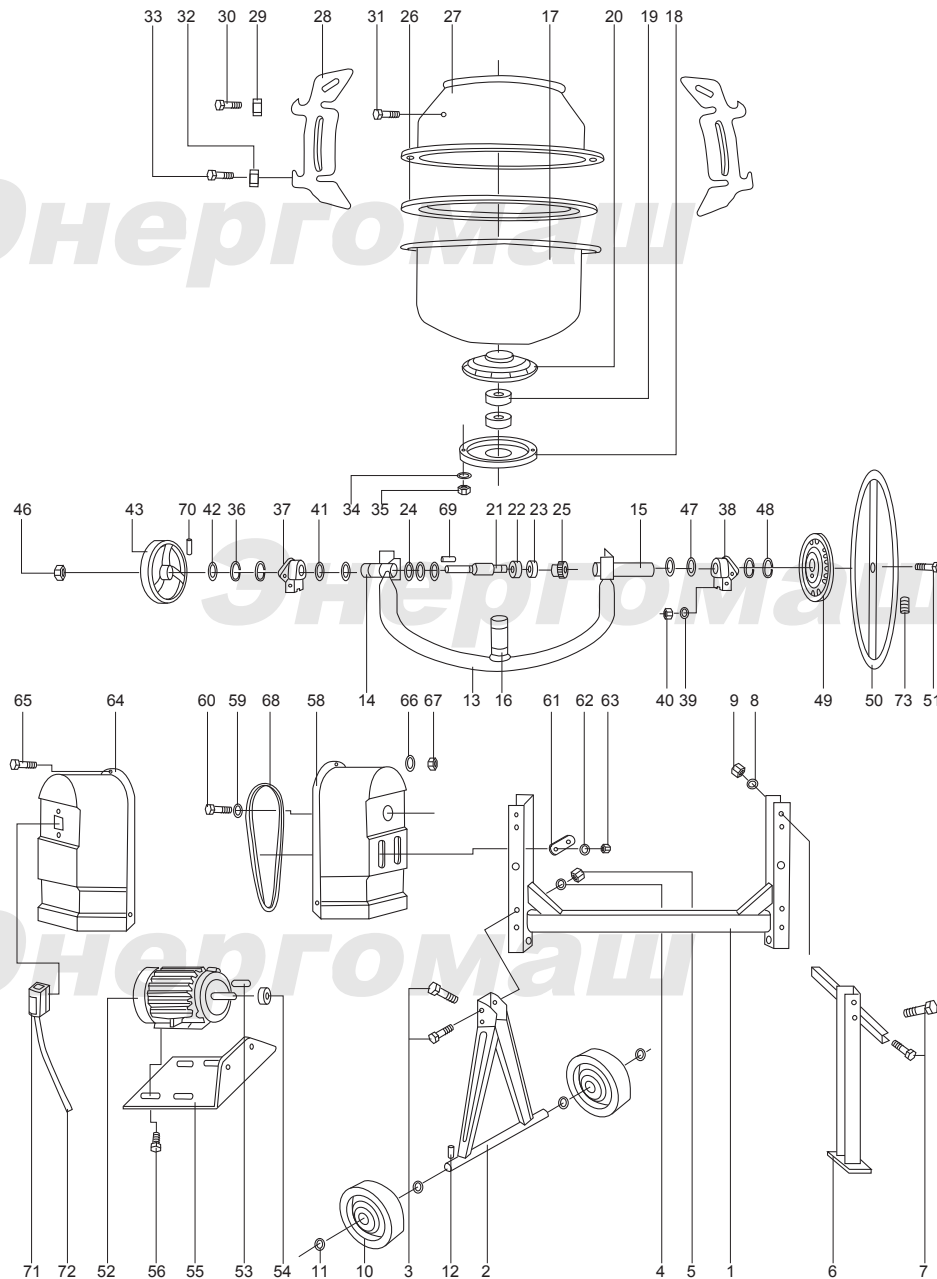

NO.	DESCRIPTION	NO.	DESCRIPTION
1	STAND	38	IRON TUBE FIXTURE (R.H.)
2	HINGE BRACKET	39	SET WASHER
3	HEX BOLT	40	SET NUT
4	SET WASHER	41	FLAT WASHER
5	HEX NUT	42	FLAT WASHER
6	SUPPORT BRACKET	43	PULLEY (L)
7	HEX BOLT	46	HEX NUT
8	SET WASHER	47	FLAT WASHER
9	HEX NUT	48	C-CLIP
10	WHEEL	49	DEGREE ADJUSTING PLATE
11	FLAT WASHER	50	DEGREE ADJUSTING WHEEL
12	PIN	51	HEX BOLT
13	SUPPORT ARM	52	MOTOR
14	IRON TUBE (L.H.)	53	KEY
15	IRON TUBE (R.H.)	54	PULLEY (S)
16	SHAFT ASSEMBLY	55	MOTOR MOUNT PLATE
17	DRUM (LOWER)	56	HEX BOLT
18	WASHER COVER (LOWER)	58	MOTOR BASE COVER (INNER)
19	BALL BEARING	59	SET WASHER
20	WASHER COVER (UPPER)	60	SET SCREW
21	SHAFT	61	STRP
22	BALL BEARING 6206	62	SET WASHER
23	BEARING SHELL	63	SET NUT
24	FLAT WASHER	64	MOTOR BASE COVER (OUTER)
25	GEAR	65	SET SCREW
26	CONNECTOR SEAL	66	SET WASHER
27	DRUM (UPPER)	67	SET NUT
28	MIXER	68	BELT
29	SET WASHER	69	KEY
30	HEX NUT	70	SPRING PIN
31	SET SCREW	71	SWITCH
32	SET WASHER	72	POWER CORD
33	HEX SCREW	73	COIL SPRING
34	SET WASHER	74	HEX BOLT
35	HEX NUT	75	HEX NUT
36	C-CLIP	76	SET WASHER
37	IRON TUBE FIXTURE (L.H.)		