



PC8806

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CARE SHELF	41	ANTI-CLIP NUT
2	HEXAGONAL SCREW	42	MOUNTING RUBBER
3	GASKET	43	NUT
4	NUT	44	SCREW
5	NUT	45	WASHERS
6	GASKET	46	SCREW
7	WALKING WHEEL CLAMP	47	ECCENTRIC SHAFT BACK COVER
8	SCREW	48	APRONS
9	SCREW	49	BEARING
10	SPRING WASHER	50	SCREW
11	GASKET	51	SPRING WASHER
12	ENGINE	52	ECCENTRIC SHAFT BRACKET
13	NUT	53	ECCENTRIC SHAFT
14	GASKET	54	PIN
15	CLUTCH INNER	55	BEARING
16	CLUTCH HOUSING	56	APRONS
17	BEARING	57	ECCENTRIC SHAFT FRONT COVER
18	CIRCLIP	58	SCREW
19	PULLEY PIN	59	RUBBER SLEEVE
20	GASKET	60	PULLEY
21	SCREW	61	GASKET
22	BELT	62	SCREW
23	BELT SHELL HOLDER	63	REAR BRACKET
24	SCREW	64	WHEEL
25	GASKET	65	CIRCLIP
26	SCREW	66	REAR CONNECTING AXLE
27	SCREW	67	POSITIONING CLAMP
28	SPRING WASHER	68	NUT
29	BELT SHELL	69	NUT
30	SCREW	70	SPRING WASHER
31	RUBBER SLEEVE	71	GASKET
32	MAIN PLATE	72	RUBBER BLOCK
33	GASKET	73	BOTTOM PLATE
34	UNDER HANDLE	74	GASKET
35	SCREW	75	SPRING WASHER
36	PENTAGON HAND WHEEL	76	NUT
37	UPPER HANDLE	77	VIBRATOR ASS.
38	THROTTLE LEVER	78	WHEEL ASS.
39	THROTTLE CABLE	79	RUBBER PAD
40	NUT	80	THROTTLE WIRE

ST20120531-2

POWER • GAS • HAND • TOOLS