



## ДУ-21400

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW M5X20(LEFT)	3-20	PLANET GEAR
2	CHUCK	3-21	WASHER
3	GEAR BOX ASSEMBLY	3-22	MIDDLE COVER
3-1	TAPPING SCREW	4	BEARING 608ZZ
3-2	PRESSURE PLATE	5	ARMATURE
3-3	TORQUE ADJUSTMENT RING	6	BEARING 626ZZ
3-4	TORQUE CUP	7	STATOR
3-5	SCREW RING	9	CARBON BRUSH
3-6	TORQUE SPRING	10	BRUSH HOLDER
3-7	CIRCLIP FOR SHAFT	11	INDUCTOR
3-8	WASHER	12	CONDENSER
3-9	STEEL BALL	13	SWITCH
3-10	STEEL BUSH	14	SCREW ST4X11
3-11	WASHER	15	CORD CLIP
3-12	STEEL BALL	16	RUBBER SLEEVE
3-13	GEAR BOX ENCLOSURE	17	CORD
3-14	SPRING PIECE	19	NAME PLATE
3-15	OUTPUT SHAFT	20	SCREW ST3X16
3-16	COLUMN PIN	21N	FORWARD/REVERSE LEVER
3-17	GEAR	22	SEALING RING
3-18	GEAR RING	888N	HOUSING ASSEMBLE
3-19	CENTER GEAR		

UK-EN20181116