



## ДШ-3118ЛБУ

NO.	DESCRIPTION	NO.	DESCRIPTION
1	LEFT SCREW	35	SCREW
2	KEYLEE CHUCK	36	PRESS BOARD
3	SCREW	37	MOTOR
4	PRESS BOARD	40	SCREW
5	TORQURE SPRING	41	ROPE
6	TORQUE ADJUSTMENT RING	42	SWITCH
7	TORQUE ADJUSTMENT NUT	43	DIRECTION SWITCH
8	BIG SPRING	44	BUCKLE
9	SPINDLE	45	SCREW BIT HOLDER
10	BEARING 6800Z	46	SCREW BITS
11	IMPACT BRACKET	47	SPRING
12	IMPACT SPRING	49	LOCK RING
13	ACTIVE IMPACT GEAR	50	LOCK PIN
14	QUIET IMPACT GEAR	51	TRIANGLE BLOCK
15	BEARING 688Z	52	SHRAPNET
16	PIN	53	TWO SPEEDS CHANGE BUTTON
17	WASHER	54	SPRING
18	IMPACE/DRILL ADJUSTMENT RING	55	DRCORATION COVER
19	GEAR BOX	56	HOUSING
20	LONG PIN	57	MAGNET
21	THE THIRD PLANET BRACKET	58	BATTERY PACK
22	GEAR RING	58-1	BATTERY PACK COVER
23	WASHER	58-2	PCB
24	THE THIRD PLANETARY GEAR	58-3	LOCK BUTTON
25	THE SECOND PLANETARY GEAR CARRIER	58-4	SPRING
26	THE SECOND PLANETARY GEAR	58-5	SPONGE
27	TWO SPEED CHANGE GEAR RING	58-6	BATTERY CELL
28	RIVET	58-7	BATTERY BASE
29	PLASTIC GEAR RING	58-8	SCREW
30	THE FIRST PLANETARY GEAR CARRIER	58-9	CONNECTION PIECE
31	THE FIRST PLANETARY GEAR	58-10	CONNECTION BARCKET
32	INNER GEAR RING	59	CHARGER
33	MOTOR GEAR	888	GEAR BOX ASSEMBLY
34	WASHER	889	MOTOR ASSEMBLY

UK-EN20190821