


ПЦ-9924

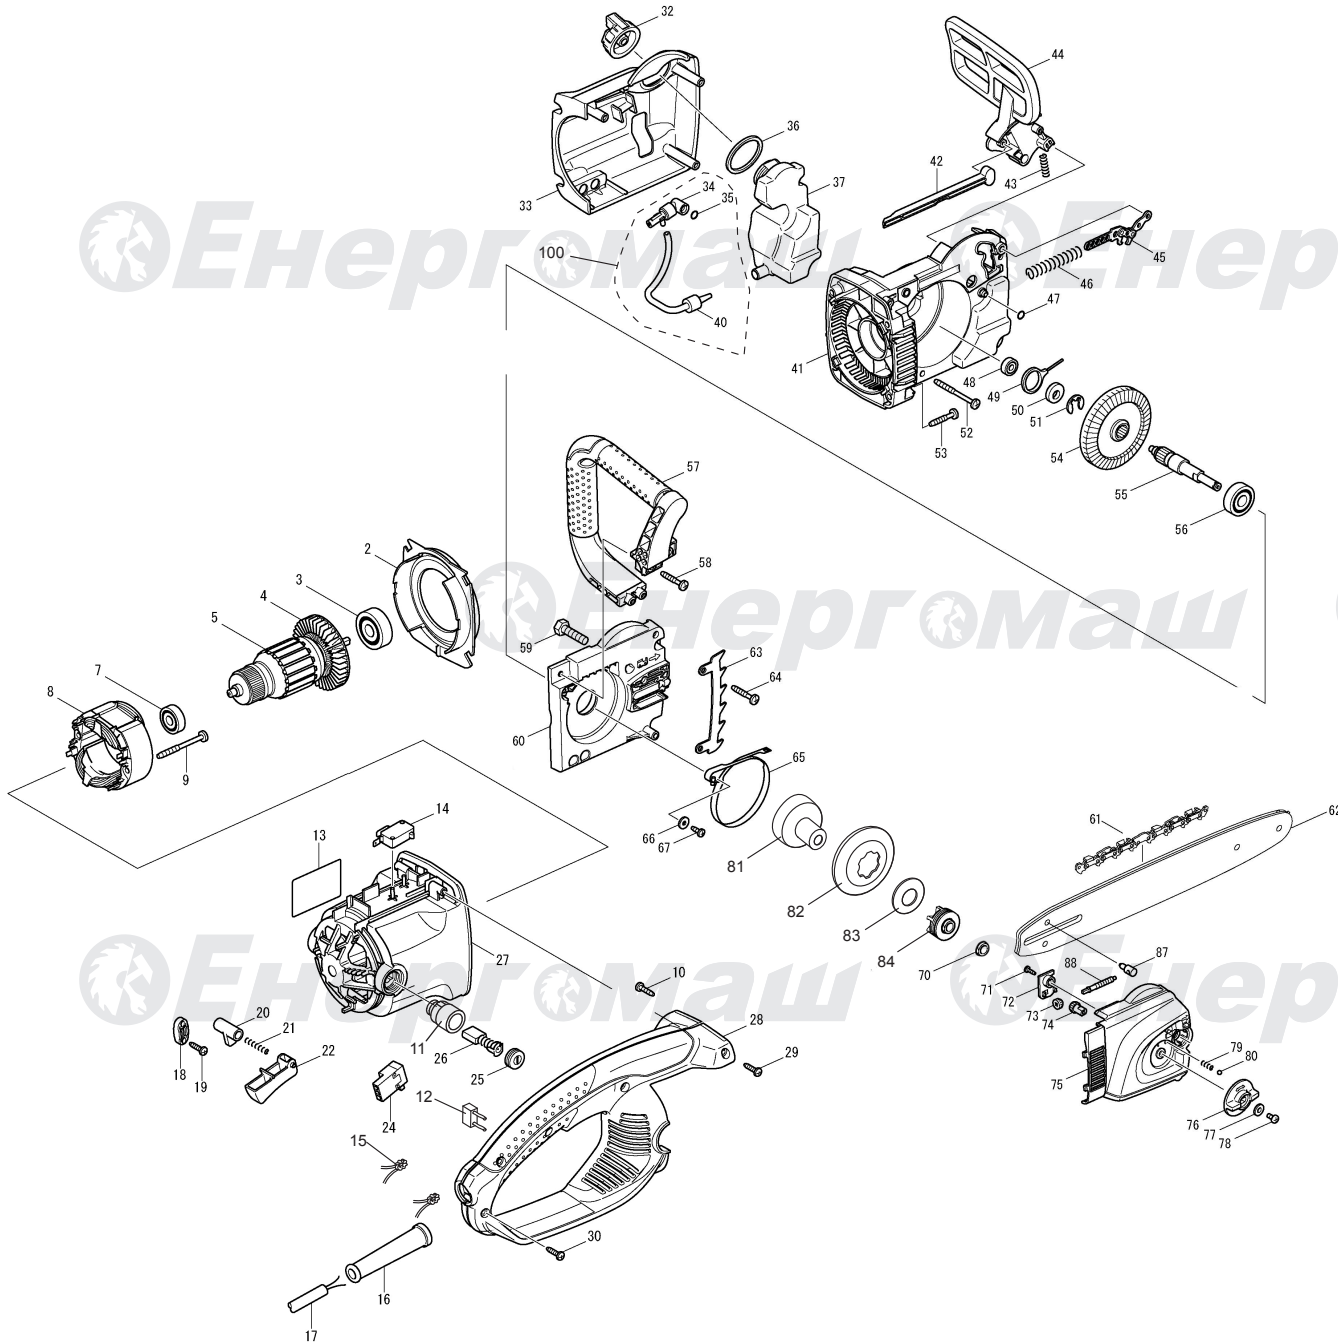

NO.	DESCRIPTION	NO.	DESCRIPTION
2	BAFFLE PLATE	47	O RING
3	BALL BEARING 6003RS	48	BALL BEARING 6001RS
4	FAN	49	CRANK
5	ROTOR	50	CAM
7	BALL BEARING 6200RS	51	REATINING RING
8	STATOR	52	TAPPING SCREW
9	TAPPING SCREW	53	TAPPING SCREW
10	TAPPING SCREW	54	STRAIGHT BEVEL GEAR
11	BRUSH HOLDEN	55	SPINDLE
12	CAPACITOR	56	BALL BEARING 6201Z
13	NAME PLATE	57	FRONT HAND
14	SWITCH 1	58	TAPPING SCREW
15	INDUCTANCE	59	HEX BOLT
16	CORD GUARD	60	BEARING HOUSING
17	CORD & PLUG	61	SAW CHAIN
18	CORD CLAMP	62	GUIDE BAR
19	TAPPING SCREW	63	SPIKE BUMPER
20	LOCK-OFF BUTTON	64	TAPPING SCREW
21	COMPRESSION SPRING	65	BRAKE BAND
22	SWITCH LEVER	66	FLAT WASHER
24	SWITCH 2	67	TAPPING SCREW
25	BRUSH HOLDER CAP	70	NUT
26	CARBON BRUSH	71	TAPPING SCREW
27	MOTOR HOUSING	72	COVER
28	HANLDE SET	73	STRAIGHT BEVEL GEAR
29	TAPPING SCREW	74	STRAIGHT BEVEL GEAR
30	TAPPING SCREW	75	SPROCKET COVER COMPLETE
32	TANK CAP COMPLETE	76	DIAL
33	GEAR HOUSING COVER COMPLETE	77	FLAT WASHER
34	OIL PUMP COMPLETE	78	BINDING HEAD SCREW
35	O-RING	79	COMPRESSION SPRING
36	SPONGE SEAL	80	STEEL BALL
37	OIL TANK	81	CONNECT BLOCK
40	OIL TUBE	82	BRAKE DUMP
41	GEAR HOUSING	83	WASHER
42	ROD	84	CHAIN WHEEL
43	COMPRESSION SPRING	87	ADJUST PIN
44	FRONT HAND GURARD	88	ADJUST SCREW
45	LINK PLATE GUARD	100	100 OIL PUMP ASSY
46	COMPRESSION SPRING		