



## УШМ-9012Т

NO.	DESCRIPTION	NO.	DESCRIPTION
1	INNER FLANGE	25	BEARING 607Z
2	OUTER FLANGE	26	BEARING SLEEVE
3	WHEEL GUARD	27	WIND GUIDE
4	SPINDLE	28	SCREW
5	DUSTPROOF SPACER	29N	STATOR
6	SCREW	30	HOUSING
7	FRONT COVER	31	PUSH KNOB
9	BEARING 6201Z	32	LABEL
10	CIRCLIP	33	BRUSH HOLDER
11	BIG GEAR	34	CARBON BRUSH
12	BEARING 696Z	35	SCREW
13	SELF-LOCKING PIN	36	COIL SPRING
14	SCREW	37	PUSH ROD
15	GEAR BOX	38	SCREW
16	SELF-LOCKING SPRING	39	CABLE CLAMP
17	SELF-LOCKING CAP	40	SPRING
18	NUT	41	SWITCH
19	PINION	42	REAR COVER
20	SPRING WASHER	43	SCREW
21	BEARING 629Z	44	CABLE SLEEVE
22	CIRCLIP	45	CABLE
23N	ROTOR	46	WRENCH
24	DUSTPROOF RING	47	SIDE HANDLE