



AG9023R, AG9023S

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	31	SCREW
2	GRINDING WHEEL	32	ARMATURE
3	INNER FLANGE	33	WIND GUARD
4	WHEEL COVER	34	SCREW
5	NUT	35	STATOR
6	SCREW	36	LINK SPRING
7	WOODRUFF KEY	37	BEARING 629Z
8	OUTPUT SPINDLE	38	BEARING BUSHING
9	SCREW	39	HOUSING
10	SPRING WASHER	40	NAME PLATE
11	PLAIN WASHER	41	TRADE MARK
12	FORE COVER	42	BRUSH HOLDER
13	BEARING 6202Z	43	CARBON BRUSH
14	BEARING COVER	44	BRUSH HOLDER CAP
15	PLAIN WASHER	46	TAPPING SCREW
16	SPRING WASHER	47	TAPPING SCREW
17	SCREW	48	SOFT START
18	BIG GEAR	49	SPRING
19	CIRCLIP FOR SHAFT	50	SET PIECE
20	OGALLAY BEARING	51	SWITCH
21	BREAK BUTTON	53	SCREW
22	TAPPING SCREW	54	CABLE CLIP
23	LOCKING PIN	55	CABLE SLEEVE
24	BREAK SPRING	56	CABLE
25	GEAR BOX	57	INDUCTOR
26	NUT	58	CAPACITOR
27	SPRING WASHER	59	SIDE HANDLE
28	PINION GEAR	60	SPANNER
29	BEARING 6001Z	888	HOUSING ASSEMBLE
30	BEARING COVER		

ST20101207-01

