



УШМ-9524П

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|-------------------------|-----|---------------------|
| 1 | OUTER FLANGE | 31 | ROTOR |
| 2 | DISC | 32 | BEARING 608Z |
| 3 | INNER FLANGE | 33 | BEARING BUSH |
| 4 | GUARD | 34 | WIND GUARD |
| 5 | NUT | 35 | SCREW |
| 6 | SCREW | 36 | STATOR |
| 7 | ANTI-DUST COVER | 37 | INSERT PIECE |
| 8 | SCREW | 38 | HOUSING |
| 9 | SPRING WASHER | 39 | NAME PLATE |
| 10 | FLAT WASHER | 40 | SCREW |
| 11 | FORE COVER | 41 | CARBON BRUSH HOLDER |
| 12 | SPINDLE | 42 | SCREW |
| 13 | KEY | 43 | SPRING |
| 14 | BEARING 6202Z | 44 | CARBON BRUSH |
| 15 | BEARING COVER | 45 | BRUSH COVER |
| 16 | SCREW | 46 | SOFT START |
| 17 | GEAR | 47 | ROTARY BUTTON |
| 18 | CIRCLIP | 48 | ROTARY SPRING |
| 19 | NEEDLE BEARING HK101610 | 50 | CORD SLEEVE |
| 20 | HANDLE | 51 | CORD & PLUG |
| 21 | SCREW | 52 | CORD CLAMP |
| 22 | SCREW | 53 | CAPACITOR |
| 23 | SPRING | 54 | SWITCH |
| 24 | LOCK PIN | 56 | SCREW |
| 25 | GEAR BOX COVER | 57 | LABEL |
| 26 | GEAR BOX | 58 | SPANNER |
| 27 | ANTI-LOOSE NUT | 59 | HEX WRENCH |
| 28N | PINION | 888 | HANDLE ASSEMBLE |
| 29 | BEARING 6201Z | | |
| 30 | BEARING COVER | | |

EN20120522-03